

SCP-5000

Operating Guide

(Draft)



Safety Information: FCC RF Exposure Information

WARNING! Read this information before using your phone

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

▲ CAUTION

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.40 inches (1.0cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.40 inches (1.0cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. All belt-clips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Note: For more information about RF exposure, please visit the FCC website at www.fcc.gov



Table of Contents

Getting to Know your Phone	6
Parts Name	6
Viewing the Display Screen.....	8
Main LCD icon.....	8
Sub-LCD.....	8
Soft Keys	8
Unlocking the Phone.....	9
Turning your Phone ON and OFF	9
Using the Battery.....	10
Installing the Battery	10
Removing the Battery.....	10
Charging the Battery.....	10
Using the Adapter Charger.....	11
Entering Information Using Keypad.....	11
Entering Text Using T9 Mode.....	11
Adding Words to T9 Database	12
Using Smart Punctuation.....	13
Entering Text Using Alphabet Mode	13
Entering Special Characters Using Symbol Mode	14
Entering Text Using Number Mode	14
Making Calls	15
Correcting Dialing Mistakes	15
Answering Calls	15
Redialing Last Outgoing Number.....	15
Displaying your Phone Number.....	15

Adjusting Volume 16

Changing Ringer/Key Volume..... 16
Silencing the Ringer 16
Selecting Ringer Types 16
Setting Alerts 17
Adjusting Earpiece Volume 18
Setting Melody Tempo 18
Setting Others Issue 19
Muting a Call..... 19

Changing your Phone's Display 20

Changing the Backlight Time Length 20
Changing the Contrast Setting..... 20
Changing your Standby Mode Display Banner 21

Managing Call History 22

Viewing the Call History list (Outgoing, Incoming and Missed) .. 22
Making a Call from the Call History List 22
Saving a phone Number from the Call History List 23
Erasing Individual or All Call History 24

Using your Internal Phone Book 25

Viewing Phone Numbers 25
Saving new Entries 25
Adding Multiple Phone Numbers/E-mail/
Web Addresses to an Existing Entry 27
Finding and Retrieving Numbers 27
Reviewing All Memory Locations 27
Finding a Number Using a Person's Name 28
Finding a Number When you Know at Least Four Digits 28
Erasing a Stored Phone Number 29
Entering Secret Phone Numbers 29
Changing Stored Phone Numbers, E-mail and Web Addresses 30
Storing Special Numbers in the Phone Book..... 30
Using the Pause Feature 30
Using Two Different Types of Pauses 31

Using Hyphens	31
Prepend Dialing.....	32
Using Speed Dial.....	33
Abbreviated Dialing	34

Using Voicemail..... 35

Setting Up your Voicemail.....	35
Using One-Touch Message Access:	35
Using the Menu Keys on your Sprint PCS Phone to Access your Messages:	35

Using Voice Dial 36

Voice Dial	36
Tips on Recording Names	36
Programming the Phone for Voice Dial	37
Placing a Call Using Voice Dial.....	37
Reviewing Voice Dial Entries	37
Erasing Voice Dial Entries	38

Found Me 39

Resetting and locking your Phone through SMS	39
Changing the Passcode	40

Main Menu List 41

Entering the Main Menu.....	41
-----------------------------	----

Knowing Performance and Safety Guidelines..... 42

Getting the Most Out of your Reception	42
Keeping Tabs on Signal Strength	42
Understanding Power Save Feature	42
Understanding How your Phone Operates	42
Maintaining your phone's Peak Performance.....	42
Maintaining Safe Use of and Access to your Phone	43
Using your Phone While Driving.....	43
Following Safety Guidelines.....	44

•

•

•

Using your Phone Near Other Electronic Devices 44

Turning Off your Phone Before Flying..... 44

Turning Off your Phone in Dangerous Areas 45

Restricting Children’s Access to your Phone 45

Caring for the Battery 45

Protecting your Battery 45

Disposal of Lithium Ion (LiIon) Batteries 46

•

Acknowledging Special Precautions and the FCC Notice47

FCC Notice..... 47

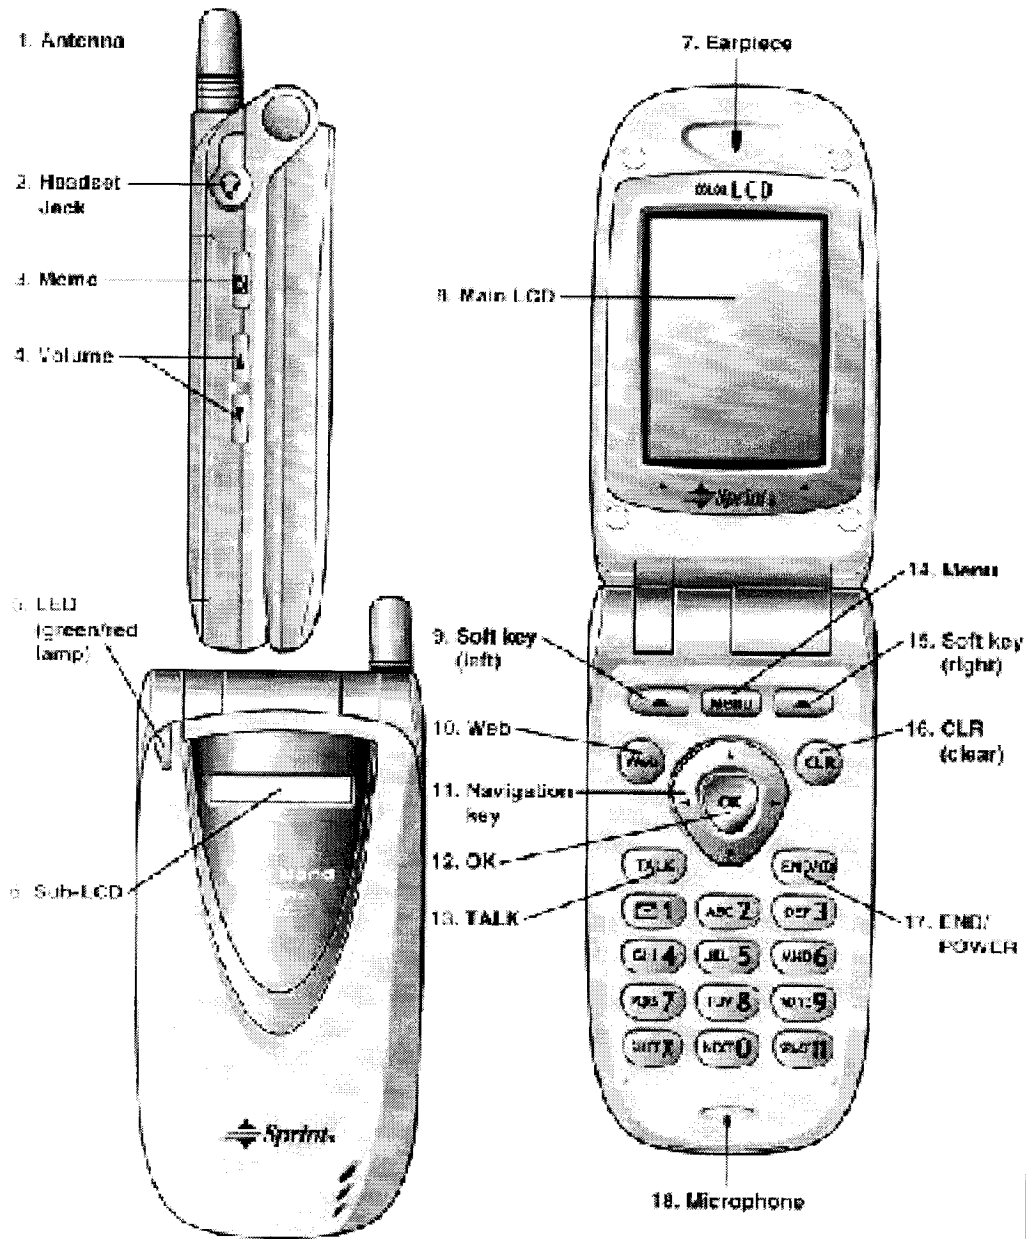 
Cautions 47

•

•

Getting to Know your Phone

Parts Name



1. Antenna: The voice on the other end sounds clearest when the antenna is all the way up.
2. Headset Jack: Insert the plug of the headset (must be purchased separately) for hands-free listening.
3. Memo: Press and hold for Memo recording.
4. Volume: Lets you adjust the sound level during a call, or ring volume in Standby mode.
5. LED (green/red lamp): Incoming Call = Green blinks / Notification (Message, Voicemail etc) = Red blinks.
6. Sub-LCD: When the clamshell is closed, it's useful to see the indications (phone's mode) on this screen.
7. Earpiece: Let's you hear the caller's voice.
8. Main LCD: Displays the phone's main menus, features, mode, etc.
9. Soft Key (left): Lets you select the menu corresponding to the bottom left line on the Main LCD.
10. Web: Press and hold for launching the Browser.
11. Navigation Key: Lets you navigate quickly and easily through the menu options.
12. OK: Lets you select menu options.
13. TALK: Lets you place a call and receive a call.
14. Menu: Lets you see the phone's menus.
15. Soft Key (right): Lets you select the menu corresponding to the bottom right line on the Main LCD.
16. CLR (Clear): Allows you to clear characters from the screen, mute ringer when receiving incoming calls or back up menu levels.
17. END/POWER: Lets you disconnect a call or mute ringer when receiving incoming calls. Or turns the phone ON and OFF.
18. Microphone: You should speak into this microphone.

•

•

Unlocking the Phone

1. Press **END/•** to turn the phone on.
2. When "Locked" is displayed on the Main LCD, press **Menu** or **OK** to display the pop up menu.
3. Highlight "Unlock Phone" and press **OK**.
4. Enter your four-digit lock code. For security purposes, the code is not visible as you type.

Tip: If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone Number or try 0000. If none of these works, call Sprint PCS Customer Care at 1-888-211-4PCS (4727).

Turning your Phone ON and OFF

Turning your Phone ON:

1. Fully extend the antenna to receive the best reception.
2. Press **END/•** for approximately one second.

Once your phone is ON, the LED red light turns on for approximately five seconds while your phone looks for a signal. When your phone finds a signal, it automatically enters Standby mode-the phone's idle state. At this point, you're ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone returns to Standby mode. Your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS Service by pressing any key (when your phone is turned ON).

Tip: The Power Save feature helps to conserve your battery power while outside a Sprint PCS Service Area.

Turning the Phone Off:

1. Press **END/•** for approximately two seconds until you see "Powering off" on the display.

Your screen remains blank while your phone is off, unless you're charging the battery.

•

•

Using the Battery

Installing the Battery

Your Sprint PCS Phone comes with a Lithium Ion battery. Follow these steps to install it.

1. Place the battery into the space beneath the antenna with the metal contacts at the bottom, facing downward.
2. Gently press down until it's in place and the battery release latch snaps.

Removing the Battery

To remove your battery for charging or for another reason, follow these easy steps:

 


1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Press up the battery release latch and hold the battery, then pull it up and out at a 45-degree angle.

Charging the Battery

Your Sprint PCS Phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone.

Tip: If your battery level becomes too low, your phone automatically turns off and you'll lose everything you were just working on. (A series of alert tones will sound just before the phone turns itself off.)

For a quick check of your phone's battery level, glance at the battery charge indicator located on your phone's (Main or Sub) display screen.

If the battery charge gets too low, the phone will beep and the blank battery icons (Main: -black, Sub: ) appear. When the remaining talk time is less than about five minutes, the Main LCD battery icon turns in red . The warning message also appears on your screen prompting you to recharge your battery. Always use the approved manufacturer approved Desktop Charger, AC Adapter Charger or Cigarette Lighter Adapter to charge your battery.

Warning: Using the wrong battery charger could cause damage to your phone and void the warranty.


Using the Adapter Charger

Use only an approved adapter, with your phone.

1. Plug the AC adapter into a wall outlet.
2. Plug the other end into the bottom of your phone, with the battery attached.

If your phone is turned on:

The battery icons (Main: -green, Sub: ) appear on each display while charging.

The Main LCD battery icon turns in black  and the Sub-LCD icon disappears when charging is complete.

 
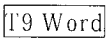

If your phone is turned off:

 
The messages (“BATTERY CHARGING — Power Off”: Main, “Power Off”: Sub) are shown on the each display while charging. When the battery is completely discharged, you may wait for several minutes until “BATTERY CHARGING” is shown on the display. The Main LCD message changes to “CHARGE COMPLETE -Power Off” when charging complete. The battery icons also appear as described above “If your phone is turned on”.

Entering Information Using Keypad

Entering Text Using T9 Mode

T9 mode uses an intelligent software protocol that allows you to enter text with fewer key presses than the multi-tap method. Type the entire word by pressing each corresponding key only once for each letter of the word. T9 determines the word by matching the keys you pressed with words in an internal database and displays the matching word that is used most often.

1. In a text entry field, press  to pop up the “Input Mode” menu.
2. Highlight .
3. Press .
4. Type the entire word, but press each key only once per letter.

Tip: You can shift the way of entering letters to upper/lower case by pressing . It will changes as following circulating order,

- T9c - One-character-shifted
- T9E- Caps Lock
- t9e - Unshifted

Making Calls

Making Calls

1. Make sure your phone is ON.
2. Enter a phone number.
3. Press **TALK**.
or
Press **Menu**, highlight "Call" and press **OK**.
4. When you're finished, press **END/•**.

Tip: When making calls off the Sprint PCS Network, always dial using 11 digits (1 + area code + number).

Correcting Dialing Mistakes

If you make a mistake while dialing, press **CLR** to erase one digit at a time.
Or, if you need to erase the entire number all at once, press and hold **CLR** for at least one second.

Answering Calls

1. Make sure your phone is on. If your phone is off, incoming calls go to voicemail.
2. When your phone rings, press **TALK**.
or
Press **Menu**, highlight "Answer" and press **OK**.
3. To disconnect the call, press **END/•**.

Tip: You can also answer incoming calls by pressing any key (other than **CLR**, **END/•**, **Menu**, Navigation Key, Volume keys or **Memo**). Before you use this feature, you have to activate Any Key Answer function on by selecting followings in order: "Setting", "Others", "Any Key Answer", "On".

Redialing Last Outgoing Number

Press **TALK** twice.

Displaying your Phone Number

In the Standby mode, press **MyProfile**.

Adjusting Volume

Changing Ringer/Key Volume

To change the ringer/key volume:

1. From the main menu, highlight "Setting".
2. Press **OK**.
3. Highlight "Sounds".
4. Press **OK**.
5. Highlight "Ringer/Key Vol."
6. Press **OK**.
7. Highlight "Ringer Volume" or "Key Beep".
8. Press **OK**.
9. Highlight your desired volume level.
10. Press **OK**.

Tip: When receiving incoming calls, use the Navigation keys to change the ringer volume

Silencing the Ringer

1. When the phone rings, press any of the following keys to off the ringer (vibrate stops) temporarily: **CLR**, **END**, side volume keys (up/down) or **Memo** on the side of the phone.
2. Press **TALK** to answer the call.
OR
1. When the phone rings, press **Menu** to pop up options.
2. Highlight "Quiet Ringer".
3. Press **OK**.
4. Press **TALK** to answer the call.

Selecting Ringer Types

Your phone provides you with multiple ringer types including ten different melodies, vibration and none. Besides being fun to play with, this allows you to assign different ringer types for Voice Calls (with Caller ID, Restricted ID, No Caller ID, or Roaming.), Voicemail, Messages (Page/Text) and Web Alert (Browser Messages). Select a ringer type by following these simple directions:

1. From the menu, highlight "Setting".
2. Press **OK**.
3. Highlight "Sounds".
4. Press **OK**.
5. Highlight "Ringer Type".
6. Press **OK**.
7. Highlight one of the options depending on your preference.
8. Press **OK**.
9. Using your Navigation key scroll through the list of ringer types. Once you've highlighted the ringer you want, press **OK**.

Setting Alerts

Your phone comes with several different options to keep you aware of what's going on by sounding the alert tone.

- Service: Set alert on or off for network services parameter changes.
- Voicemail: Set alert for Voicemail receiving.
- Messages: Messages (page/text) receiving.
- Minute Beep: Set a minute reminder that beeps ten seconds before the end of each minute during a call.

To set the alerts:

1. From the main menu, highlight "Setting".
2. Press **OK**.
3. Highlight "Alerts".
4. Press **OK**.
5. Highlight your desired option "Service", "Voicemail", "Messages" or "Minute Beep".
6. Press **OK**.
7. If you selected "Service" or "Minute Beep", highlight "On" or "Off".
If you selected "Voicemail" and "Messages", highlight "Once", "+Reminder" or "Off".
8. Press **OK**.

Tip: "+Reminder": sounds every two minutes during twenty minutes. But when Ringer Type setting is Melody1-10, this alert rings for ten seconds.

Setting Others Issue

You can determine the length of your key beep (you hear this when you press any key) or kinds of the Start-up tone (sounds when you turn the phone on and off except when Key Beep volume is off) on this feature.

1. From the main menu, highlight "Setting".
2. Press **OK**.
3. Highlight "Sounds".
4. Press **OK**.
5. Highlight "Others".
6. Press **OK**.
7. Highlight "Tone Length" or "Start-up Tone".
8. Press **OK**.
9. Highlight your desired option.
10. Press **OK**.

Muting a Call

There are times when it's necessary to mute a call so that your caller does not hear you or certain background noise. To use this function during a call:

1. Press **Menu** to pop up options.
 2. Highlight "Mute".
 3. Press **OK**.
- When the phone is muted, "MUTE:" blinks on the display.

To deactivate Mute setting:

1. Press **Menu**.
2. Highlight "Unmute".
3. Press **OK**.

Changing your Standby Mode Display Banner

The banner lets you customize the 16 characters of text displayed on the first line of your phone's display screen in Standby mode. You can create or change your banner by:

1. From the main menu, highlight "Settings".
2. Press **OK**.
3. Highlight "Display".
4. Press **OK**.
5. Highlight "Greeting".
6. Press **OK**.
7. Pressing and holding **CLR**.
8. Entering characters. (See "Entering Information Using Keypad").
9. Press **OK**.

Or

Press **OK** corresponding to the left soft key.

Managing Call History

Viewing the Call History list (Outgoing, Incoming and Missed)

You'll find a list of the last 10 phone numbers for calls you placed, answered, or missed. From this list you can make a call. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list. When reviewing your entries, you'll see the type of call as described below:

- **Outgoing:** Indicates a call you placed.
- **Incoming:** Indicates a call you received and answered.
- **Missed:** Indicates an unanswered incoming call.

Making a Call from the Call History List

To place a call from the recent call history list, follow these steps:

1. From the stand by mode press **Menu** to display the main menu.
2. Highlight "Call History".
3. Press **OK**.
4. Highlight either "Outgoing Calls", "Incoming Call" or "Missed Calls".
5. Press **OK**.
6. Highlight the entry you want to call scrolling through the list.
7. Press **OK** to display the number.
8. Press **TALK**.

Or:

9. Press **Menu** to display menu options.
10. Highlight "Call" and press **OK**.

Erasing Individual or All Call History

To erase an individual call:

1. From the standby mode press **Menu** to display the main menu.
2. Highlight "Call History".
3. Press **OK**.
4. Highlight either "Outgoing Calls", "Incoming Call" or "Missed Calls".
5. Press **OK**.
6. Highlight the entry you want to erase and press **OK**.
7. Press **Menu** to display menu options.
8. Highlight "Erase" and press **OK**.
9. Highlight "Yes" and press **OK**.

To erase all calls (Outgoing calls, Incoming calls, and Missed calls):

1. From the standby mode press **Menu** to display the main menu.
2. Highlight "Call History".
3. Press **OK**.
4. Highlight either "Outgoing Calls", "Incoming Call" or "Missed Calls".
5. Press **Menu** to display menu options.
6. Highlight "Erase History" and press **OK**.
7. Highlight "Yes" and press **OK**.

Using your Internal Phone Book

Viewing Phone Numbers

In some cases where an Internal Phone Book entry is too long, the entire number does not show on the display screen. To view all the digits in a number, follow the steps.

1. From the standby mode press **Menu** to display the main menu.
2. Highlight "Phone Book" and press **OK**.
3. Highlight "Long Phone #s".
4. Press **OK**.
5. The Long Phone #s list appears then highlight your desired entry.
6. Press **OK**.

Saving new Entries

Your Sprint PCS Phone can store up to 300 names and phone numbers. Each entry can contain up to 32 digits, with an associated name of up to 16 characters. Your phone automatically stores the Internal Phone Book entries by alphabetical order.

Your Sprint PCS phone also has capability of storing five 48-digit phone numbers (Long Phone numbers) within the above 300 phone numbers. If you enter more than 32 digits, it is necessary to enter a hard pause or 2-second pause between any 2 digits within 32 digits, or immediately after 32 digits. See also "Using the Pause Feature".

To **save numbers to your phone book**, follow these steps:

1. Enter the phone number you want to save.
2. Press Menu to display menu options.
3. Highlight "Save" and press **OK**.
4. Highlight the appropriate label, and press **OK**.
5. Enter a Name, and press **OK**. (If you have already stored any entry to the Phone Book, you are prompted to select the entry mode either "Direct Entry" or "From Phone Book").

Or

1. From the standby mode press **Menu** to display the main menu.
2. Highlight "Phone Book" and press **OK**.
3. Highlight "Add New Entry".
4. Press **OK**.
5. Enter a name or select the entry you want to save from the phone book, and press **OK**. (See "Entering Information Using Keypad" about entering method).
6. Enter the number, and press **OK**.
7. Select the appropriate label.

Tip: In case of your entry duplicate in your phone book entry.

Duplicate name and label---warning message appears.

Duplicate Phone#---You are prompted to overwrite it or not.

Adding Multiple Phone Numbers/E-mail/Web Addresses to an Existing Entry

1. From the main menu highlight "Phone Book" and **OK**.
2. Highlight "Find Name" and press **OK**.
3. Select the labeled entry you wish to add phone numbers/e-mail/web addresses to.
4. Enter the number or address.
5. Press **OK**.

Tip: Your Sprint PCS Phone can also store up to 100 e-mail and 20 Web addresses.
(Up to 7 phone numbers (including pager, data and fax) and 1 e-mail and 1 web).

Finding and Retrieving Numbers

There are several ways to access numbers in your internal Phone Book. Make sure your phone is in Standby mode.

Reviewing All Memory Locations

1. From the main menu highlight "Phone Book" and **OK**.
2. Highlight "Find Name" and press **OK**.
 - Press > of the Navigation key for the shortcut (steps 1 through 2)
3. Use your Navigation key to scroll through the Phone Book list.
4. Select one of the appropriate labeled entry and Press **OK**.
5. Press **Menu** for options, then highlight your desired feature and press **OK**.

Erasing a Stored Phone Number

To erase a phone number from your Internal Phone Book:

1. Press > of the Navigation key.
2. Scroll to the Internal Phone Book entry you want to erase.
3. Press **Menu** for options.
4. Highlight "Erase Entry".
5. Press **OK** to confirm that you want to erase the memory.
6. Highlight "YES" and press **OK**. "Phone Book Entry Erased" appears on the display to confirm that the entry has been successfully deleted.

Entering Secret Phone Numbers

In order to enter an Internal Phone Book entry that is tagged **Secret**:

1. Press > of the Navigation key.
 2. Scroll to the Internal Phone Book entry you want to tag **Secret**.
 3. Press Menu for options.
 4. Highlight "Set Secret".
 5. Press OK.
 6. Enter 4 digits lock code.
 7. Highlight "On".
 8. Press OK.
- For Non-Secret setting, select "Off" at step 7.

Using Two Different Types of Pauses

There are two different types of pauses that you can use when storing a number in your Internal Phone Book.

- **Timed pauses** wait two seconds before sending the next string of digits.
- **Hard pauses** cause the phone to stop dialing until you press **OK** after selecting **Send Tone**.

To insert pauses into a number.

1. Enter a number you want to dial.
2. Press **Menu** for options.
3. Highlight :
 - “Hard Pause” for hard pause
 - “2-Second pause” for a timed pause.
 - “Hyphen” for a hyphen (see following section)
4. Press **OK** to insert a pause or manual hyphen.
5. Finish entering the rest of the numbers, then dial or save the entered number.

Using Hyphens

You can add hyphens to our Internal Phone Book numbers, however, they are mainly for show. You can insert hyphens manually where you like, or choose automatic hyphenation, which inserts hyphens according to the North American Numbering Plan. Entering a manual hyphen suspends any automatic hyphenation for that number.

Using Speed Dial

With this feature, you can dial Internal Phone Book entries through one key press for locations 2-9. To use this feature, speed dial number must be stored in your Phone Book.

To store a speed dial number.

1. From the main menu, highlight **Phone Book**.
2. Highlight "Find Name" and press **OK**.
3. Scroll to the Internal Phone Book entry you want to set a speed dial.
4. Press **Menu** for options.
5. Highlight "Set Speed Dial".
6. Press **OK**.
7. To select an appropriate speed dial number 2-9 unassigned, highlight it and press **OK**.

To speed dial:

1. Press and hold the appropriate key that corresponds to the memory location for approximately two seconds.

Or

Press the appropriate key, and then press **TALK**.

- The display confirms that the number has been dialed when it shows "Connecting".

Using Voicemail

Setting Up your Voicemail

All Unanswered calls to your Sprint PCS Phone are automatically transferred to voicemail, even if your phone is off or in use. To avoid missing any important messages, you will want to set up your Sprint PCS voicemail box and personal greeting as soon as your Sprint PCS Phone is activated.

Using One-Touch Message Access:

1. Press and hold . Follow the system prompts.

Using the Menu Keys on your Sprint PCS Phone to Access your Messages:

1. From the main menu, highlight "Voice Mail".

2. Press .

3. Highlight "Call Voicemail".

4. Press .

Or

Press .

Using Voice Dial

Voice Dial

When on the Sprint PCS Network, you can call up to 30 stored entries by speaking the name into the microphone of the handset. Using the Voice Dial option requires that you first train the phone to recognize the name of the person you are calling.

Tips on Recording Names

- Avoid recording similar names phonetically. If you record a similar name to one that is already in memory, the phone requests another name.
- Avoid recording in a noisy place.
- Speak clearly and naturally.
- The person who will use the phone should record the name.
- Avoid very long or very short names. Names with two to five syllables are recommended.
- If a voice dial entry does not properly connect, you may need to record the name and number again.

Erasing Voice Dial Entries

To erase an individual Voice Dial entry:

1. Highlight the desired entry (See previous "Reviewing Voice Dial Entries" section), and press **OK**.
2. Press **Menu** for options.
3. Highlight "Erase".
4. Press **OK**.
5. Highlight "Yes".
6. Press **OK**.

To erase all Voice Dialing entries:

1. From the main menu, highlight "Voice Dial".
2. Press **OK**.
3. Highlight "Erase All".
4. Press **OK**.
5. Highlight "Yes".
6. Press **OK**.

Tips: Erasing phone number in Voice Dial has no influence on Phone Book.

Found Me

Resetting and locking your Phone through SMS

When your phone is lost or stolen, you can erase your important personal information (such as phone book entries, call history and messages) and lock your phone by sending a special formatted SMS message to your phone. Send the following format from your computer:

\\RESET**<Passcode>**RESET

- <Passcode> - your defined passcode is 11-digit ESN 9(Electronic Serial Number) which is described on the package or phone itself.

The locked phone will display the following message:

"If found, please call Sprint PCS Customer Care 1-888-217-4727".

To activate this feature, following presetting is required:

1. From the main menu, highlight "Settings".
 2. Press .
 3. Highlight "Security".
 4. Press .
 5. Enter lock code.
 6. Highlight "SecuritySetting".
 7. Press .
 8. Highlight "Found Me".
 9. Press .
 10. Highlight "Reset/Lock".
 11. Press .
 12. Highlight "Enable"
 13. Press .
- To unlock the phone locked through SMS when you get back your phone, bring the phone to Sprint PCS Retail Store.

Knowing Performance and Safety Guidelines

Getting the Most Out of your Reception

Keeping Tabs on Signal Strength

Calling quality of your phone is always at it's best when the antenna is fully raised. If you're inside a building, being near a window may give you better reception.

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

Understanding Power Save Feature

If you try to use your Sprint PCS Phone in an area where the signal is not available, the Power Save feature automatically activates to conserve battery power if you're unable to pick up a signal for 15 minutes. If your phone is on, it periodically rechecks service availability or you can check yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen.

Understanding How your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining your phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Extend the antenna fully for best reception.
- Hold the phone with the antenna up and over your shoulder.
- Try not to ever hold, bend or twist the phone antenna.
- Retract the phone antenna when you're not on a call.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Tip: If you really need to use your phone while you're driving, use speed dialing.

Using your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles.

Check with the manufacturer or its representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Turning Off your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Tip: Always turn off the phone in healthcare facilities and request permission before using the phone near medical equipment.

•

• •

- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4°F to 131°F (-20°C to 55°C)

More than one month:

-4°F to 95°F (-20°C to 35°C)

Disposal of Lithium Ion (LiIon) Batteries

For safe disposal options of your LiIon batteries, contact your nearest Sanyo authorized service center.

Special note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Tip: For safety, do not handle a damaged or leaking LiIon battery.