 


ATTACHMENT O – USER'S MANUAL

SCP-6000

Operating Guide
(Draft)



Safety Information: FCC RF Exposure Information

WARNING! Read this information before using your phone

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.60 inches (1.5cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.60 inches (1.5cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. All belt-clips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

Note: For more information about RF exposure, please visit the FCC website at www.fcc.gov



Specific Absorption Rate (SAR) for Wireless Phones

The SAR is a value that corresponds to the relative amount of RF energy absorbed in the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of SCP-6000 are:

AMPS mode (Part 22) · Head: XXX W/kg; Body-worn: XXX W/kg

PCS mode (Part 24) · head: XXX W/kg; Body-worn: XXX W/kg.

6. Managing Call History	33
Viewing the Call History list (Outgoing, Incoming and Missed)	33
Making a Call from the Call History List	33
Saving a phone Number from the Call History List	34
Adding Options to the Entry in the Call History List	34
Erasing Individual or All Call History	35
7. Using Sprint PCS Service Features	36
Using Caller ID	36
Responding to Call Waiting	36
Setting Up a Three-Way Call	37
Forwarding your Calls	38
8. Managing Messaging	39
Setting Up Voicemail	39
Message Types	39
Knowing When you Have Messages	40
Retrieving your Messages	40
Classifying Page/Text Messages	43
9. Using your Internal Phone Book	47
Saving New Entries	47
Adding Multiple Phone Numbers/E-mail/Web Addresses to an Existing Entry	48
Storing and Viewing the Long Phone Numbers	48
Storing Short Phone Numbers	49
Finding and Retrieving Numbers	49
Setting Incoming Ringer/Picture to the Phone Book Entry	50
Erasing a Stored Entry	51
Entering Secret Phone Numbers	51
Changing Stored Phone Numbers, E-mail and Web Addresses	52
Storing Special Numbers in the Phone Book	52
Using Different Dialing Methods	53

Prepaid Calls

Prepaid customers can access the Prepaid Options Menu to receive account balance notification, replenish their account or speak with Sprint PCS Customer Care. There are two ways to access the Prepaid Options Menu, free of charge.

1. Press **#729 TALK**.

OR

1. From the Standby mode, press **Menu** to display the main menu .

2. Highlight "Phone Book".

3. Press **OK**.

4. Highlight "Services".

5. Press **OK**.

6. Highlight "Prepaid".

7. Press **OK**.

8. Press **TALK**.

or

Press **Menu** to display the options, highlight "Call" and press **OK**.

Tip: Prepaid Options Menu is only available to Sprint PCS customers that have a Prepaid account.

Dialing Sprint PCS Roadside Rescue

If you need emergency service on the road, you can get help from Sprint PCS Roadside Rescue. Follow these steps:

1. Press **#7628 TALK**.

OR

1. From the Standby mode, press **Menu** to display the main menu.

2. Highlight "Phone Book".

3. Press **OK**.

4. Highlight "Services".

5. Press **OK**.

6. Highlight "Road Assist".

7. Press **OK**.

8. Press **TALK**.

or

Press **Menu** to display the options, highlight "Call" and press **OK**.

Receiving Automated Billing Information

For your convenience, your phone gives you free access to billing information on your Sprint PCS Account. This information includes balance due, payment received, billing cycle and the amount of minutes used since your last billing cycle. Follow these steps to access this information:

1. Press **#4 TALK**.

2. Follow the voice prompts to receive the information you want.

OR

1. From the Standby mode, press **Menu** to display the main menu.

2. Highlight "Phone Book".

3. Press **OK**.

4. Highlight "Services".

5. Press **OK**.

6. Highlight "Account Info." .

7. Press **OK**.

8. Press **TALK**.

or

Press **Menu** to display the options, highlight "Call" and press **OK**.

Sprint PCS Operator Services

Sprint PCS Operator Services can provide assistance in placing collect calls or calls billed to a local telephone calling card or a third party.

1. From the Standby mode, press and hold **5** (or press **5** **TALK**).

For more information or to see the latest in products and services, visit our web site www.sprintpcs.com.


Understanding this User Guide

This user guide introduces you to Sprint PCS technology and all the advantages of your new Sprint PCS Phone – through easy-to-follow instructions.

- Sections breakdown categories of information to progressively take you all the way from learning the basics to using the most advanced phone features.
- **Tips** highlight special shortcuts and timely reminders to help you make the most of your new phone.
- The **Index** helps you find specific information quickly. (Preparing)

We know that your time is valuable and that's why we've designed this guide to be used in a building block format or in stand-alone sections. You'll get the most out of your phone if you read each section. Follow the instructions in that section and you'll be ready to use your phone in no time.

2. Getting to Know your Phone Parts Name

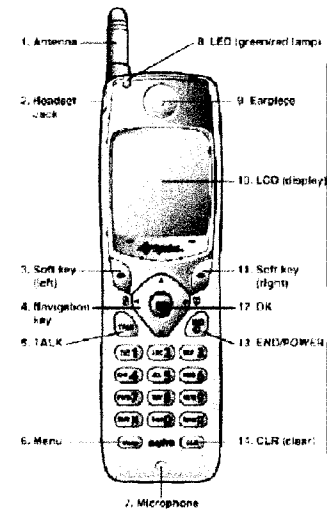

1. **Antenna:** The voice on the other end sounds clearer when the antenna is all the way up.
2. **Headset Jack:** Insert the plug of the headset (must be purchased separately) for hands-free listening.
3. **Soft Key (left):** Lets you select the menu corresponding to the bottom left line on the LCD.
4. **Navigation Key:** Lets you navigate quickly and easily through the menu options. When ringing, press up or down key to off the ringer. From the Standby mode, press left/right to take a short cut to Messages/Phone Book menu.
5. **TALK:** Lets you place a call and receive a call.
6. **Menu:** Lets you see the phone's menus.
7. **Microphone:** You should speak into this microphone.
8. **LED (green/red lamp):** Incoming Call = Green blinks / Notification (Message, Voicemail etc) = Red blinks.
9. **Earpiece:** Let's you hear the caller's voice.
10. **LCD:** Displays the phone's main menus, features, mode, etc.
11. **Soft Key (right):** Lets you select the menu corresponding to the bottom right line on the LCD.
12. **OK:** Lets you select menu options.
13. **END/POWER:** Lets you disconnect a call and return to Standby mode. Lets you mute ringer when receiving incoming calls. Or turns the phone ON and OFF.
14. **CLR (Clear):** Allows you to clear characters from the screen, mute ringer when receiving incoming calls or back up menu levels.

Turning your Phone ON and OFF

Turning your Phone ON:

1. Fully extend the antenna to receive the best reception.
2. Press **[END/]** for approximately one second.

Once your phone is ON, the red LED light turns on for approximately five seconds while your phone looks for a signal. When your phone finds a signal, it automatically enters Standby mode: the phone's idle state. At this point, you're ready to begin making and receiving calls.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone returns to Standby mode. Your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS Service by pressing any key (when your phone is turned ON).

Tip: The Power Save feature helps to conserve your battery power while outside a Sprint PCS Service Area.

Turning the Phone Off:

1. Press **[END/]** for approximately two seconds until you see "Powering Off" on the display.

Your screen remains blank while your phone is off, unless you're charging the battery.

Using the Battery

Installing the Battery

Your Sprint PCS Phone comes with a Lithium Ion battery. Follow these steps to install it:

1. Place the battery into the space beneath the antenna with the metal contacts at the bottom, facing downward.
2. Gently press down until it's in place and the battery release latch snaps.

Removing the Battery

To remove your battery for charging or for another reason, follow these easy steps:

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Press up the battery release latch and hold the battery, then pull it up and out at a 45-degree angle.

Charging the Battery

Your Sprint PCS Phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone.

Tip: If your battery level becomes too low, your phone automatically turns off and you'll lose everything you were just working on. (A series of alert tones will sound just before the phone turns itself off.)

For a quick check of your phone's battery level, glance at the battery charge indicator located on your phone's display screen.

If the battery charge gets too low, the phone will beep and the blank battery icon appears. Always use the approved manufacturer approved Desktop Charger, AC Adapter Charger or Cigarette Lighter Adapter to charge your battery.

Warning: Using the wrong battery charger could cause damage to your phone and void the warranty.

- For example, to type the word "Hello", press the keys **[4] [3] [5] [5] [6]** (in that order). As you type, T9 matches your key presses with words from its database.
- Different words may appear as you type because each key you press changes the word possibility. The word you want may appear only after you press all of the necessary keys.
- Press **[0]** to display alternate word choices. Short words are more likely to share the same key sequences. Cycle through all the choices for a key sequence by pressing **[0]**.
- Press **[#]** to accept the word displayed and continue typing the next word.
- Press **[CLR]** to correct the last letter you entered. To clear the whole characters or the reversed text (selected status), press and hold **[CLR]** for about two seconds.

Adding Words to T9 Database

Each word you type in Alphabet mode is automatically added to your T9 database. If the word you want isn't one of the T9 alternate choices, it's quick and easy to add it.

1. Switch to Alphabet mode (press **[Mode]**, highlight "Alphabet" and press **[OK]**)
 2. Type the word using the multi-tap method.
 3. Switch back to T9 (press **[Mode]**, highlight "T9 Word" and press **[OK]**)
- Pressing and holding **[Mode]** also switches the T9 and Alphabet mode by turns.

Tip: Press **[*]** to change:

- Abc - One character shifted
- ABC - Caps Lock
- abc - Unshifted

These settings are shown on the display.

- Press **[0]** to display the new word if other words share the same key sequence.

The word is saved automatically and will appear as a word choice in T9 the next time you use it.

Using Smart Punctuation

"Smart punctuation" is available using **1** in T9 mode. It's a quick and easy way to type e-mail domains, possessive forms and contractions. When you press **1**, T9 displays a period.

However, as you continue to type, T9 determines the appropriate mark based on your word database.

For example, to type, "It's easy."

Press **4 8 1 7 # 3 2 7 9 1**.

Tip: The beginning of the word after the space is changed to upper/lower case by the entry field. You can change the shift by pressing *****.

Entering Text Using Alphabet Mode

1. In a text entry field, press **Mode**.
2. Highlight "Alphabet".
3. Press **OK**.
4. Press a key several times until the desired letter appears.

Letters scroll in the following order:

Key	English Sequence	
	Capital letter	Small letter
1	. ' / : @ , ; ? ! 1	
2	ABC2	abc2
3	DEF3	def3
4	GHI4	ghi4
5	JKL5	jkl5
6	MNO6	mno6
7	PQRS7	pqrs7
8	TUV8	tuv8
9	WXYZ9	wxyz9
0	0	
#	Space	
*	One-character-shifted	Caps Lock Unshifted

Key	Spanish Sequence Key	
	Capital letter	Small letter
1	. ' / : @ , ; ? ! 1	
2	AABC2	aabc2
3	DEE3	dee3
4	GHI4	ghi4
5	JKL5	jkl5
6	MNNO6	mno6
7	PQRS7	pqrs7
8	TUUUV8	tuuv8
9	WXYZ9	wxyz9
0	0	
#	Space	
*	One-character-shifted	Caps Lock Unshifted

For example, to enter the letter "J", press **5** once in rapid succession. To enter the letter "Z", press **9** four times. After two seconds, the cursor will automatically advance to the next space once a character has been entered.

- To expedite the process, use your Navigation key (right) to move the cursor forward and enter any character.
- Press **CLR** to correct the last letter you entered. To clear the whole text, press and hold **CLR** for about one second.

Entering Special Characters Using Symbol Mode

1. In a text entry field, press **Mode**.
2. Highlight "SYMBOL".
3. Press **OK**.
4. Highlight the line that includes your desired symbol.
5. Press the corresponding key (1-9) with each symbol.
or
Highlight your desired symbol by using the Navigation key, and press **OK**.

Tip: One symbol input reverts the mode automatically.

Entering Text Using Number Mode

Number mode allows you to enter numbers.

To change to Number mode in a text entry field:

1. Press **Mode**.
2. Highlight "NUMBER".
3. Press **OK**.

Setting an Alert When Roam Charges Apply (Call Guard)

In addition to the roaming icon, call guard alerts you when roaming charges apply. The following settings apply to Call Guard.

Call Guard

This feature makes it easy to control when you roam by reminding you when you make or receive a roaming call. It also requires you to take additional steps before placing or answering a roaming call. These additional steps are not required when you make or receive calls while on the Sprint PCS Nationwide Network.

To Turn the Call Guard Feature On/Off:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Roaming".
3. Press **OK**.
4. Highlight "Call Guard".
5. Press **OK**.
6. Highlight "On" or "Off".
7. Press **OK**.

To Place Roaming Calls with Call Guard On:

1. From the Standby mode, dial 1 + area code+ the seven-digit number.
 2. Press **TALK** (or press **Menu**, highlight "Call" and press **OK**).
 3. Press **1** to proceed.
- or
- Press **Menu**, highlight "Roam Call" and press **OK**.

To Answer Incoming Roaming Calls with Call Guard On:

1. Press **TALK**.
 2. Press **1** to proceed.
- OR
1. Press Menu, highlight "Answer" and press **OK**.

Remember if the Call Guard feature is set to On, you need to take extra steps to make and receive roaming calls even if you have selected the Analog setting.

4. Making Calls

1. Make sure your phone is ON.
 2. Enter a phone number.
 3. Press **TALK**.
- or
- Press **Menu**, highlight "Call" and press **OK**.
4. When you're finished, press **END/**.

Tip: When making calls off the Sprint PCS Network, always dial using 11 digits (1 +area code + number).

Correcting Dialing Mistakes

If you make a mistake while dialing, press **CLR** to erase one digit at a time.
Or, if you need to erase the entire number all at once, press and hold **CLR** for at least one second.

Answering Calls

1. Make sure your phone is on. If your phone is off, incoming calls go to voicemail.
 2. When your phone rings, press **TALK**.
- or
- Press **Menu**, highlight "Answer" and press **OK**.
3. To disconnect the call, press **END/**.

Any Key Answer

This feature allows you to answer incoming calls by pressing any key (not including the **END/ CLR**, Navigation key and **Menu**).

To activate this feature:

1. From the Standby mode, press **Menu** to display the main menu.
 2. Highlight "Settings", and press **OK**.
 3. Highlight "Others".
 4. Press **OK**.
 5. Highlight "Any Key Answer".
 6. Press **OK**.
 7. Highlight "On".
 8. Press **OK**.
- To deactivate this feature, select "Off" at step 7 above.

Tip: This feature is also available in locked state.

Auto Answer

This feature sets the phone to automatically pick up after 5 or 15 seconds. This feature only works with the hands-free car kit and headset (must be purchased separately).

To activate this feature:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings" and press **OK**.
3. Highlight "Others".
4. Press **OK**.
5. Highlight "AutoAns.Car/HS".
6. Press **OK**.
7. Highlight "5 Seconds" or "15 Seconds".
8. Press **OK**.

To deactivate this feature, select "Off" at step 7 above.

Note: While your phone is connecting to the Headset, Car Kit or Data/Fax, you cannot end the call by closing the clamshell.

Calling Emergency Numbers

You can place calls to 911, (dial **9 1 1** and press **TALK**) even if your keypad is locked or your account is restricted, just as long as you are in a Sprint PCS Service Area.

Tip: While connecting to 911, you can confirm your phone number quickly by pressing **Menu** and selecting "My Phone#".

Dialing from an Internal Phone Book Memory Location

To dial directly from an Internal Phone Book memory location:

1. Press > of the Navigation key.
2. Scroll to the Internal Phone Book entry you want to call, and press **OK**.
3. Highlight your desired phone number, and press **TALK**.

Redialing Last Outgoing Number

Press **TALK** twice.

Displaying your Phone Number

To display your phone number:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "My Profile".
3. Press **OK**. Your phone number is shown as "My PCS#".

OR

1. From the Standby mode, press **Email** shortly, and press and hold **Myphone**.
- The Soft key name will be changed as the key name and URL you set.
(See page XX.)

5. Adjusting Volume

Changing Ringer/Key Volume

To change the ringer/key volume:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Sounds".
5. Press **OK**.
6. Highlight "Ringer/Key Vol."
7. Press **OK**.
8. Highlight "Ringer Volume" or "Key Beep".
9. Press **OK**.
10. Highlight your desired volume level.
11. Press **OK**.

Tip: Use the Navigation key (up/down) to change the ringer volume.

Silencing the Ringer

1. When the phone rings, press **CLR**, **END** or up/down of the Navigation key to off the ringer (stop vibration) temporarily.
2. Press **TALK** to answer the call or press **Menu** for the options.
OR
1. When the phone rings, press **Menu** to display the options.
2. Highlight "Quiet Ringer".
3. Press **OK**.
4. Press **TALK** to answer the call or press **Menu** for the options.

Adjusting Volume During a Conversation

1. Use up/down of the Navigation key while the phone is in use.

OR

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Sounds".
5. Press **OK**.
6. Highlight "Receiver Volume".
7. Press **OK**.
8. Highlight "Earpiece".
 - You can also select "HeadsetEarpiece" or "CarKit Speaker".
9. Press **OK**.
10. Highlight your desired volume level.
11. Press **OK**.

Setting Melody Tempo

Your phone allows you to change the tempo of melodies that are selected as the ringer at "Ringer Type". Default tempo is Normal.

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Sounds".
5. Press **OK**.
6. Highlight "Melody Tempo".
7. Press **OK**.
8. Highlight your desired melody title.
9. Press **OK**.
10. You can hear the selected melody on the highlighted tempo by scrolling the list (except when the Ringer Volume is set to "Vibrate" and "Off"), so select one of your desired tempo.

Setting Tone Length or Start-up/Power-off Tone

You can determine the length of your key beep (you hear this when you press any key) or type of the Start-up/Power off tone (sounds when you turn the phone on/off except when Key Beep volume is off) on this feature.

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Sounds".
5. Press **OK**.
6. Highlight "Others".
7. Press **OK**.
8. Highlight "Tone Length", "Start-up Tone" or "Power-off Tone".
9. Press **OK**.
10. Highlight your desired option.
11. Press **OK**.

Muting a Call

There are times when it's necessary to mute a call so that your caller does not hear you or certain background noise. To use this function during a call:

1. Press **Menu** to display the options.
 2. Highlight "Mute".
 3. Press **OK**.
- When the phone is muted, "MUTE" blinks on the display.

To deactivate Mute setting:

1. Press **Menu**.
2. Highlight "Unmute".
3. Press **OK**.

6. Managing Call History

Viewing the Call History list (Outgoing, Incoming and Missed)

You'll find a list of the last 10 phone numbers for calls you placed, answered, or missed. From this list you can make a call. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list. When reviewing your entries, you'll see the type of call as described below:

- **Outgoing**: Indicates a call you placed.
- **Incoming**: Indicates a call you received and answered.
- **Missed**: Indicates an unanswered incoming call.

Making a Call from the Call History List

To place a call from the recent call history list, follow these steps:

1. From the Standby mode, press **Menu** to display the main menu.
 2. Highlight "Call History".
 3. Press **OK**.
 4. Highlight "Outgoing Calls", "Incoming Calls" or "Missed Calls".
 5. Press **OK**.
 6. Highlight the entry you want to call by scrolling through the list.
 7. Press **OK** to display the details of the entry.
 8. Press **TALK**.
- or
- Press **Menu**, highlight "Call" and press **OK**.

Saving a Phone Number from the Call History List

Your Sprint PCS Phone can store up to 300 names and 500 phone numbers. Each entry can contain up to 32 digits, with an associated name of up to 16 characters. Your phone automatically sorts the Internal Phone Book entries by memory location number.

To save numbers to your Phone Book, follow these steps:

1. From the Call History list, highlight the entry you want to save, and press **OK**.
2. Press **Menu** to display menu options.
3. Highlight "Save Phone#".
4. Press **OK**.
5. Highlight appropriate label (Home, Work, Mobile, Pager, Data, Fax or No Label).
6. Press **OK**.
7. Enter a Name, and press **OK**. (If you have any already stored entry in the Phone Book, you are prompted to select the entry mode either "New Name" or "From Phone Book")
or
If you store the number without name, from name entry display, press **OK** then highlight "Yes" and press **OK**.
8. Press **Save**.

Tip: "New Name"- Enter a name directly.

"From Phone Book"- Select a name from Phone Book list.

Adding Options to the Entry in the Call History List

For additional options on a particular call:

1. Highlight the desired entry in the call history menu, and press **OK**.
2. Press **Menu** to display the menu options.
3. Highlight one of following and press **OK**.
 - **Call** to place a call.
 - **Alternate** to store other numbers into the same entry in the Phone Book
or
Save Phone# to store the number in the Internal Phone Book.
 - **Prepend** to add additional numbers.
 - **Erase** to erase the entry.

Erasing Individual or All Call History

To erase an individual call:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Call History".
3. Press **OK**.
4. Highlight "Outgoing Calls", "Incoming Calls" or "Missed Calls".
5. Press **OK**.
6. Highlight the entry you want to erase and press **OK**.
7. Press **Menu** to display the menu options.
8. Highlight "Erase" and press **OK**.
9. Highlight "Yes" and press **OK**.

To erase all calls (Outgoing calls, Incoming calls, and Missed calls):

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Call History".
3. Press **OK**.
4. Highlight "Outgoing Calls", "Incoming Calls" or "Missed Calls".
5. Press **Menu** to display the menu options.
6. Highlight "Erase History" and press **OK**.
7. Highlight "Yes" and press **OK**.

7. Using Sprint PCS Service Features

Using Caller ID

Caller ID lets you know who's calling by displaying the number of the person calling when your phone rings. If the caller's name and number are already stored in your Internal Phone Book, the corresponding name appears with the number. In the same way, if you call someone who has this feature, your phone number displays on their phone.

If you want to block your phone number from being displayed for a specific outgoing call, follow these steps:

1. Press **Shift** * **6** **7**.
2. Dial the number you want to call.
3. Press **TALK**.

To permanently block your number, call Sprint PCS Customer Care.

Responding to Call Waiting

Call Waiting alerts you of incoming calls while you're on a call by sounding beeps. The display screen informs you that a call is coming in and shows the caller's name (if you have the Phone Book entry) or the phone number. To respond to an incoming call while you're on a call:

1. Press **TALK**.
- OR
1. Press **Menu** to display options.
 2. Highlight "Flash".
 3. Press **OK**.

These steps put the first caller on hold and answer the second call.

To switch back to the first caller:

1. Press **TALK** again.
- OR
1. Press **Menu** to display options again.
 2. Highlight "Flash".
 3. Press **OK**.

To disable Call Waiting:

For those calls where you don't want to be interrupted, you can temporarily disable call waiting by pressing **Shift** * **7** **0** before placing your call.

Tip: Call Waiting is automatically reactivated once you end the call.

Setting Up a Three-Way Call

With Three-Way Calling, you can talk to two different people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Dial a number you wish to call.
2. Press **TALK** (or press **Menu**, highlight "Call" and press **OK**).
3. Once you have established the connection, press **TALK**
or
Press **Menu**, highlight "Three Way Call" and press **OK**.
4. Dial the second number you wish to call.
 - You can also select a phone number from options by pressing **Menu** (e.g. from Call History or Phone Book list).
5. Press **TALK** (or press **Menu**, highlight "Call" and press **OK**).
6. When you're connected to the second party, press **TALK** once more
or
Press **Menu**, highlight "Flash" and press **OK** to begin your three-way call.

If one of the people you called hangs up, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

Tip: You don't have to worry about being interrupted during a Sprint PCS Wireless Web call because Call Waiting and Three-Way Calling are automatically disabled.

Tip: Three-Way Call menu doesn't appear when you are roaming off the Sprint PCS Network.

Forwarding your Calls

Call Forwarding lets you forward all your incoming calls to another phone number — even when your phone is turned off. You can continue to make calls from your phone with Call Forwarding activated.

To Activate Call Forwarding:

1. Press **Shift** * **7** **2**.
2. Enter the area code and phone number to which your calls should be forwarded.
3. Press **TALK**. You will hear a tone confirming the activation of Call Forwarding.

To Deactivate Call Forwarding:

1. Press **Shift** * **7** **2** **0**.
2. Press **TALK**. You will hear a tone to confirming the deactivation.

8. Managing Messaging

Setting Up Voicemail

The first thing you'll want to do after activating your phone is to set up voicemail. See Section X page XX for instructions.

Message Types

There are three types of messaging functions available on your Sprint PCS Phone. Voicemail, Numeric Paging and Sprint PCS Wireless Web Messaging allow you to receive messages as long as your phone has enough memory locations to store them. And you can send e-mail from your Sprint PCS Wireless Web.

- Voicemail captures calls automatically when you can't answer your phone or it is turned off. The voicemail system sends a notification to your phone letting you know when you have new voice messages waiting in your voicemail box.
- Numeric paging allows a caller to enter a phone number into your voicemail box instead of a voice message. The phone number appears on your phone as a numeric page.
- Sprint PCS Wireless Web Messaging (also known as Text Messaging) allows messages to appear as short alphanumeric messages on your phone's display screen. You must purchase a Wireless Web Plan in order to receive text messages on your Sprint PCS Phone.

Tip: When you are roaming off the Sprint PCS Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your Sprint PCS Phone Number.

There are three ways to send a text message to a Sprint PCS Phone:

1. E-mail (your phone number @ messaging.sprintpcs.com).
2. Through the Sprint PCS Web site—www.sprintpcs.com. Select the Wireless web messaging link.
3. Using a messaging software (TAP1.5 compatible).

To take a shortcut to connect the web site for sending e-mail:

1. Press and hold **Email** (left soft key) in the Standby mode.

Note: Sprint PCS Wireless Web services may not be available in certain Affiliate areas.

Knowing When you Have Messages

There are several ways your Sprint PCS Phone alerts you of new messages.

- By displaying a message on the LCD.
- By blinking a red LED light.
- By displaying new message icon at the top of the LCD.
- By sounding tone alerts (except when the "Alerts-Voicemail/Messages" that is described on page XX is set to Off).

The total number of new message will be counted up at the right side of the "Messages".

To display the "Messages" from the Standby mode, press "Menu", highlight and press "Wireless Web" and press **OK**.

Receiving Messages

You will receive voicemail even if you have not set up your voicemail. In other words, people can leave messages they just would not hear a greeting.

Retrieving your Messages

You can review your messages directly from your Sprint PCS Phone or from any other touch-tone phone. To dial from your Sprint PCS Phone, you can either speed dial to your voicemail box or use the menu keys.

Using One-Touch Message Access:

1. From the Standby mode, press and hold **1**. Follow the system prompts.
 - When you have a voicemail notification, you can access to the message by pressing.

Tip: Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on.

Using the Menu Keys on your Sprint PCS Phone to Access your Messages:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Voicemail".
3. Press **OK**.
4. Highlight "Call Voicemail".
5. Press **OK** or **TALK**.

Tip: You are charged for airtime minutes when you are accessing your voicemail.

Classifying Page/Text Messages

Your Sprint PCS Phone allows you to classify the received messages into 10 User-defined Folders. If new messages contain the same word as the keyword you set, they are stored into the folder. Each folder can store up to 200 messages.

Adding a Folder:

1. Press left of the Navigation key.
2. Highlight "Unfiled", and press **OK**.
3. Highlight a header and press **OK**.
4. Press **Menu**.
5. Highlight "Add Folder" by scrolling, and press **OK**.
6. Enter a folder name from 3 to 13 letters, and press **OK** or **OK** (left soft key).
See "Entering Information Using Keypad" on page XX.
7. If you want the message to be filed into the folder automatically, highlight "Auto Filing" and press **OK**.
8. Highlight "On", and press **OK**.
9. Highlight "Keyword".
10. Press **OK**.
11. Highlight "Edit" or "Keyword match", and press **OK**.
12. Highlight your desired Keyword from the list or edit your own Keyword, then press **OK**.
13. Press **Save** (left soft key).
 - If you want to set optional feature to the added folder:
 1. From the step 9 above, scroll down to "Ringer Type", "Notification" or "Envelope Icon" and press **OK**.
 2. Highlight the item you want, and press **OK**.
 3. Press **Save** (left soft key).

Note: If 10 user defined folder exists, "Add Folder" menu disappears.

Creating a Folder:

1. Press left of the Navigation key.
2. Press **Menu**.
3. Highlight "Create Folder".
4. Press **OK**.
5. Enter a folder name from 3 to 13 letters.
6. Press **OK** or **OK** (left soft key).
7. If you want the message to be filed into the folder automatically, highlight "Auto Filing" and press **OK**.
8. Highlight "On", and press **OK**.
9. Highlight "Keyword".
10. Press **OK**.
11. Enter a Keyword from 3 to 15 letters, and press **OK** or **OK** (left soft key).
12. Press **Save** (left soft key).

If you want to set optional feature to the added folder:

1. From the step 9 above, scroll down to "Ringer Type", "Notification" or "Envelope Icon" and press **OK**.
2. Highlight the item you want, and press **OK**.
3. Press **Save** (left soft key).

Note: If 10 user defined folder exists, "Create Folder" menu disappears.

Editing the Folder

1. Press left of the Navigation key.
2. Highlight the folder you want to edit.
3. Press **Menu**.
4. Highlight "Edit Folder".
5. Press **OK**.
6. Highlight "Folder Name", "Auto Filing", "Ringer Type", "Notification" or "Envelope Icon".
7. Press **OK**.
8. Enter or select your new name/setting.
9. Press **OK** or **OK** (left soft key).
10. Press **Save** (left soft key).

Erasing a Folder

1. Press left of the Navigation key.
2. Highlight the folder you want to erase.
3. Press Menu.
4. Highlight "Erase Folder".
5. Press **OK**.
6. Highlight "Yes", and press **OK**.

Note: The messages within the folder are also erased. In this case, you are prompted to select "Erase" or "Don't Erase".

Moving a Page/Text Message Into the Other Folder

1. Highlight the message within Unfiled or your defined folder, and press **OK**.
2. Press **Menu** to display the menu options.
3. Highlight "Move Message" by scrolling.
4. Press **OK**.
5. Highlight your desired folder, and press **OK**.

Managing your Page/Text Messages

Your Sprint PCS Phone can store up to 200 incoming text messages and numeric pages. Deleting old messages keeps memory space available for new messages. Erasing the message notification does not erase the messages. New messages are rejected if your phone's memory is full.

To extract a phone number, e-mail or web address from a Page/Text message:

1. While reading a received message, press **Menu** to display the menu options.
2. Highlight "Extract Info."
3. Press **OK**.
4. Highlight "Phone#", "Email Address" or "Web Address".
5. Press **OK**.
6. Highlight the appropriate number or address.
7. Press **Menu** to display the menu options.

Then highlight the optional feature you want, and press .

To erase a Page/Text message:

1. Press left of the Navigation key.
2. Highlight "Unfiled" or your defined folder, and press **OK**.
3. Highlight the header of the message you want to erase, and press **OK**.
4. Press **Menu** to display the menu options.
5. Highlight "Erase", and press **OK**.
6. Highlight "Yes", and press **OK**.

OR

1. Press left of the Navigation key.
2. Press **Menu** to display the menu options.
3. Highlight "Erase Old Msgs".
4. Press **OK**.
5. Highlight "Yes", and press **OK**.

Tip: Remember, it's time to delete old messages when the available memory falls below 10% of the total memory. The warning message appears on the display to notify you.

9. Using your Internal Phone Book

Saving New Entries

Your Sprint PCS Phone can store up to 300 names, 500 phone numbers, 300 e-mail addresses and 300 web addresses. Each entry can contain up to 32 digits, with an associated name of up to 16 characters. Your phone automatically stores the Internal Phone Book entries in alphabetical order.

Each entry is divided into 11 categories as 7 phone numbers (Home, Work, Mobile, Pager, Data, Fax and No Label), 1 Email, 1 Web, Ringer and Picture.

To save numbers to your phone book, follow these steps:

1. From the Standby mode, enter the phone number you want to save.
 2. Press **Menu** to display the menu options.
 3. Highlight "Save Phone#", and press **OK**.
 4. Select the appropriate label.
 5. Enter a name, and press **OK**. (If you have already stored any entry to the Phone Book, you are prompted to select the entry mode "New Name" or "From Phone Book").
 6. Press **Save**.
- OR
1. From the Standby mode, press **Menu** to display the main menu.
 2. Highlight "Phone Book", and press **OK**.
 3. Highlight "Add New Entry".
 4. Press **OK**.
 5. Enter a name, and press **OK**.
 6. Select your desired label category by scrolling.
 7. Enter the number or address, and press **OK**.
 8. Press **Save**.
- If you store the number without name, press **OK** at step 5 above and select **Yes**.

Adding Multiple Phone Numbers/E-mail/Web Addresses to an Existing Entry

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Phone Book", and press **OK**.
3. Highlight "Find Name", and press **OK**.
 - Press > of the Navigation key for the shortcut (steps 1 through 3).
4. Select the entry you wish to add phone numbers/e-mail/web addresses to.
5. Select your desired label category by scrolling.
6. Enter the number or address, and press **OK**.
7. Press **Save**.

Storing and Viewing the Long Phone Numbers

Your Sprint PCS Phone can also store five 48-digit phone numbers within its 500 phone number memory. If you enter more than 32 digits, it is necessary to enter a hard pause or 2-second pause between any 2 digits within the 32 digits, or immediately after the 32 digits.

To store a long phone number (for example, 48 digit storing):

1. Enter the 32-digit number.
2. Press **Menu** to display the menu options.
3. Select either "[H] Hard Pause" or "[T] 2-Second Pause".
4. Enter the rest of the 15-digit number.
5. Press **Menu** to display the menu options.
6. Highlight "Save Phone#", and press **OK**.

Then follow the menu instructions.

Viewing the Long Phone Numbers

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Phone Book", and press **OK**.
3. Highlight "Long Phone #s".
4. Press **OK**.
5. The Long Phone number's list appears, then highlight your desired entry.
6. Press **OK** to see the details.
 - Press **Menu** for options.
 - To make a call from the list, press **TALK** at the step 5 or 6 above.

Storing Short Phone Numbers

You can store less than 7 digit phone numbers. Follow the instructions:

1. Enter the phone number (less than 7 digits).
2. Press **Menu** to display the menu options.
3. Highlight "Save Phone#", and press **OK**.
4. The warning message appears.
5. If you are sure to save the short number, highlight **Yes**.
6. Press **OK**. Then follow the menu instructions.

Finding and Retrieving Numbers

There are several ways to access numbers in your Internal Phone Book. Follow the steps outlined in the sections below. Make sure your phone is in Standby mode.

Reviewing All Memory Locations

You can review all the numbers stored in your Internal Phone Book by name, phone number, e-mail and web address. Follow these simple steps:

1. Press > of the Navigation key from the Standby mode.
2. Use your Navigation key to scroll through the Phone Book list and select one of the appropriate entries.
3. Highlight your desired memory location by scrolling.
4. Press **Menu** for the menu options, then highlight your desired feature and press **OK**.

Finding a Number Using a Person's Name

To find a number by using a person's name:

1. Press > of the Navigation key.
2. Enter the first letter of the name or part of a name using multi-tap method.
3. Select your desired entry by scrolling through the phone book entry.
 - If you enter a single letter, the display shows the list that begins with that letter.

Tip:

After selecting the entry, you can scroll the other name entries by using of the Navigation key.

Finding a Number When you Know at Least Four Digits

You can search for a number in the Internal Phone Book even if all you can remember is four to seven consecutive numbers from the phone number.

1. Enter the 4 to 7 digits.
2. Press **Menu**.
3. Highlight "Find", and press **OK**.
4. Then the phone book entry list that includes the numbers you dialed appears.
5. Scroll through the list to select your desired entry.
6. Press **TALK** to make a call.

Setting Incoming Ringer/Picture to the Phone Book Entry

To set the incoming ringer:

1. Press > of the Navigation key.
 2. Select the entry you want to set the incoming ringer or picture.
 3. Highlight "Ringer" or "Picture" by scrolling up or down.
 4. Press **OK**.
 5. Highlight your desired ringer type or picture, and then press **OK**.
 6. Press **Save**.
- You should have downloaded data to set incoming pictures.

Erasing a Stored Entry

To erase an entry from your Internal Phone Book:

1. Press > of the Navigation key.
2. Scroll to the Internal Phone Book entry you want to erase.
3. Press **Menu** to display the menu options.
4. Highlight "Erase Entry".
5. Press **OK** to confirm that you want to erase the memory.
6. Highlight "Yes", and press **OK**. "Phone Book Entry Erased" appears on the display to confirm that the entry has been successfully deleted.

Erasing a Stored Phone Number, E-mail or Web Address

To erase a phone number, e-mail or web address:

1. Press > of the Navigation key.
2. Scroll to the Internal Phone Book entry you want to erase.
3. Press **OK** to see the details of the entry.
4. Highlight an entry of phone number, e-mail or web address.
5. Press **Menu** to display the menu options.
6. Highlight "Erase" by scrolling, and press **OK**.
7. Press "Save".

Entering Secret Phone Numbers

In order to enter an Internal Phone Book entry that is tagged Secret:

1. Press > of the Navigation key.
 2. Scroll to the Internal Phone Book entry you want to tag Secret.
 3. Press **Menu** to display the menu options.
 4. Highlight "Set Secret".
 5. Press **OK**.
 6. Enter 4 digits lock code.
 7. Highlight "On".
 8. Press **OK**.
- For Non-Secret setting, select "Off" at step 7 above.

Changing Stored Phone Numbers, E-mail and Web Addresses

You can change the phone number, address and name of any phone number stored in your Internal Phone Book.

To change a number:

1. Press > of the Navigation key.
2. Scroll to the Internal Phone Book entry you want to change and press **OK**.
3. Highlight the labeled category you want to edit.
4. Press **OK**.
5. Use **CLR** and the digit keys to edit the phone number, address or name.
6. Press **OK**.
7. Press **Save**.

Storing Special Numbers in the Phone Book

Using the Pause Feature

Generally, when you call an automated system like voicemail boxes or credit card calling, you are required to enter a password or calling card number. Rather than entering the numbers manually each time, you can store the numbers in your Internal Phone Book, separated by special characters called pauses.

Using Two Different Types of Pauses

There are two different types of pauses that you can use when storing a number in your Internal Phone Book.

- **Timed pauses** wait two seconds before sending the next string of digits.
- **Hard pauses** cause the phone to stop dialing until you select **Send Tone** or press **TALK**. To display "Send Tone", press **Menu**, highlight "Send Tone" and press **OK**.

To insert pauses into a number:

1. Enter the number you want to dial.
2. Press **Menu** to display the menu options.
3. Highlight:
 - "H Hard Pause" for a hard pause.
 - "2-Second Pause" for a timed pause.
 - "Hyphen" for a hyphen (see following section).
4. Press **OK** to insert a pause or manual hyphen.
5. Finish entering the rest of the numbers, then dial or save the entered number.

Using Hyphens

You can add hyphens to your Internal Phone Book numbers, however they are mainly for show. You can insert hyphens manually where you like, or choose automatic hyphenation, which inserts hyphens according to the North American Numbering Plan. Entering a manual hyphen suspends any automatic hyphenation for that number.

Using Different Dialing Methods

Prepend Dialing

Prepend dialing allows you to alter a phone number in your Phone Book by adding additional numbers. For example, if your Internal Phone Book entry was entered without an area code and you are out of town, you can prepend that entry with the appropriate area code.

1. Highlight the phone number stored in Phone Book entry or call history using one of the previously described methods.
2. Press **Menu** to display the menu options.
3. Highlight "Prepend".
4. Press **OK**.
5. Enter the digits you wish to prepend.
6. Press **TALK**.
or
Press **Menu** to display the menu options, then highlight "Call" and press **OK**.

Using Speed Dial

With this feature you can dial Internal Phone Book entries with one key press for locations 2-9. Speed dial numbers must be stored in your Phone Book to use this feature.

To store a speed dial number:

1. Press > of the Navigation key.
2. Select the Internal Phone Book entry for which want to set a speed dial number.
3. Highlight the phone number you want to set a speed dial.
4. Press **Menu** to display the menu options.
5. Highlight "Set Speed Dial".
6. Press **OK**.
7. To select a corresponding speed dial number from 2-9, highlight an unassigned number and press **OK**.

OR

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Phone Book", and press **OK**.
3. Highlight "Speed Dial #s".
4. Press **OK**.
5. To select a corresponding speed dial number from 2-9, highlight an unassigned number and press **OK**.
6. Phone book entry list appears.
7. Highlight the entry you want to set a speed dial.
8. Press **OK**.

To use speed dial:

1. From the Standby mode, press and hold the appropriate key that corresponds to the memory location for approximately two seconds.

OR

1. From the Standby mode, press the appropriate key, and then press **TALK**.
- The display confirms that the number has been dialed when it shows "Connecting".

Abbreviated Dialing

Abbreviated Dialing is another form of speed dialing. If the last four digits you entered do not match any entry's phone number in your phone book, the four digits are prepended with the digits specified by you and a call to the prepended number is initiated without further input.

To activate this feature:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Others".
5. Press **OK**.
6. Highlight "Abbrev. Dial".
7. Press **OK**.
8. Enter a six-digit number.
9. Press **OK**.

To use this feature:

1. From the Standby mode, dial the last four digits of a Phone Book entry's phone number.
2. Press **Menu** to display the menu options.
3. Highlight "Abbrev. Dial".
4. Press **OK** or **TALK**.

10. Changing your Phone's Display

Changing the Menu Language

When you first turn on your phone, the menus are displayed in English. To change the menu language to Spanish, follow these steps.

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Others".
5. Press **OK**.
6. Highlight "Language".
7. Press **OK**.
8. Highlight "Español".
9. Press **OK**.

Changing the Backlight Time Length

Backlight lets you choose how long the display screen and keypad are backlit after any key press is made. To change the backlight setting:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings" and press **OK**.
3. Highlight "Display" and press **OK**.
4. Highlight "Backlight".
5. Press **OK**.
6. Select your desired time length.

Changing your Standby Mode Display Banner

The banner lets you customize the 15 characters of text displayed on the first line of your phone's display screen in Standby mode.

You can create or change your banner by:

1. Follow the above steps 1-3.
2. Highlight "Greeting".
3. Press **OK**.
4. Pressing and holding **CLR**.
5. Entering characters. (See "Entering Information Using Keypad" on page XX).
6. Press **OK**.

Setting Font Size

There are four font size settings for the messages and browser. To change the font size, follow these steps:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings", and press **OK**.
3. Highlight "Display", and press **OK**.
4. Highlight "Font Size" and press **OK**.
5. Highlight "Messages" or "Browser" and press **OK**.
6. Select your desired font size.
Then a font size example is shown on the display.
7. Press **OK** to set the selected font.

Tip: From the font example display, you can see the larger/smaller font displays by pressing left/right of the Navigation key.

Changing the Display Color

There are two different display color settings available to your phone. To change the display color setting:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings", and press **OK**.
3. Highlight "Display", and press **OK**.
4. Highlight "LCD Color", and press **OK**.
5. Select your desired color setting.

Changing the Contrast Setting

Contrast lets you choose the shade of the display screen. To change the contrast setting:

1. Follow the above steps 1-3.
2. Highlight "Contrast" by scrolling.
3. Press **OK**.
4. Select your desired setting.

Setting the Animation

This feature lets you display the animation as a screen saver or a display for Outgoing Calls. To set the Animation to On/Off:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings", and press **OK**.
3. Highlight "Display", and press **OK**.
4. Highlight "Animation" by scrolling.
5. Press **OK**.
6. Highlight "Screen Saver" or "Outgoing Calls" depending on your preference.
7. Press **OK**.
8. Highlight **On** or **Off**.
9. Press **OK**.
 - If you set "Screen Saver" to On, press **OK** then enter the time length before the Screen Saver starts, and press **OK**.

Setting the Display for Incoming Calls

You can set the color or graphic (if you have download data) to be shown on the Incoming Call display. Follow these steps:

1. Follow the above steps 1-3.
2. Highlight "Incoming Calls" by scrolling.
3. Press **OK**.
4. Select one of the settings you want.
If you do not want to set anything, select **Off**.

- When you selected the downloaded data, the preview is shown so that you confirm the data. The data may also be moved its location by using the Navigation key on the preview display, and pressing **OK** is required if it is confirmed.

Setting the Display for the Standby Mode

This feature enables you to select a variety of items to display on the Standby mode.

Follow these steps:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings", and press **OK**.
3. Highlight "Display", and press **OK**.
4. Highlight "StandbyDisplay" by scrolling.
5. Press **OK**.
6. Highlight one of the desired items, and press **OK**.

Items:

- **World Clock** displays the time of the selected country with the local time. You can scroll the World Clock list by pressing left/right of the Navigation key for changing country, **Summer/Standard** for changing between summer and standard time if applicable.
 - **Time (Large)** displays the local time in a large, simple format.
 - **Calendar** displays the Calendar.
 - **Text** edits your own message to display with the local time.
 - **Count Down** first edits the target (e.g. Birthday), and then enters the target date (from Jan 1, 2000 to Dec 31, 2020) for Count Down display.
 - **Wallpaper** selects the wallpaper to display. You can also add your own message to the wallpaper for options (See the next page).
 - **Off** sets this feature to Off.
7. After following each system prompt or confirming the preview display, press **OK** to save the setting.

Tip: In Analog mode or No Service area, "World Clock", "Time (Large)", "Calendar" or "Count Down" cannot be shown on the Standby display.

Further explanation for setting wallpaper:

1. Select "Wallpaper" at the previous step 6.
2. Highlight your desired wallpaper, and press **OK**.
3. Highlight your desired option and press **OK**.

Options:

- **Save** saves the wallpaper selection.
 - **Add Message** adds your personal message to the wallpaper. After editing the 1st and 2nd line messages, you can also select the letter color (Black or White).
4. Confirm the preview display, and press **OK** to save the wallpaper.
 - The picture can be moved within the frame of wallpaper by using the Navigation key on the preview display.

Tip: After you have downloaded wallpapers, you can select from them.

Setting Sleep Mode

This feature helps conserve your battery power by restricting the display. It is applicable for the display of Standby, Power Save, Missed Calls, Message Alert, Missed Alarm, etc. To set Sleep Mode:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings", and press **OK**.
3. Highlight "Display", and press **OK**.
4. Highlight "Sleep Mode" by scrolling.
5. Press **OK**.
6. Highlight "On".
7. Press **OK**.
8. Enter the time length (5-99 seconds) from the last key press before the Sleep Mode starts, and press **OK**.
 - To deactivate this feature, select "Off" at step 6 above.

Displaying the Version Information

Displays the version number of the software, hardware, PRL (Preferred Roaming List), PRI (Product Release Instructions) and Browser installed on your Sprint PCS Phone.

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings", and press **OK**.
3. Highlight "Display", and press **OK**.
4. Highlight "Version" by scrolling.
5. Press **OK**.

11. Setting your Phone's Security

Locking the Keypad

Locking the keypad helps avoid accidental key presses without blocking incoming calls or messages. This feature can only be activated when your phone is in Standby mode.

To lock your keypad:

1. From the Standby mode, press **Menu** to display the main menu
2. Highlight "Key Guard".
3. Press **OK**.

Unlocking the Keypad

1. Press and hold **CLR** for two seconds.

Tip: Don't forget, to receive an incoming call while your keypad is locked, press **TALK** to answer the call and unlock the keypad. Once you end the call, keyguard automatically reactivates.

Locking your Phone

When your phone is locked, you can only make emergency calls (9-1-1, and your user-specified Special Numbers) or receive incoming calls by pressing **TALK**. All other functions of the phone are disabled.

To lock your phone:

1. Press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Security".
5. Press **OK**.
6. Enter lock code.
7. Highlight "Lock Phone".
8. Press **OK**.
9. Depending on your preference, highlight either "Lock Now" or "On Power-up", and press **OK**.

Unlocking your Phone

1. From the Locked display, press **Unlock** (left soft key).
2. Enter lock code.

- If you want to cancel the "On Power-up" setting before turning the phone off, select "Unlocked" instead of "On Power-up" at the step 9 described previously.

Tip: You must enter your lock code to view the security menu. Typical default values are either the last 4 digits of your phone number or 0000. If you forget your lock code, take your phone to the nearest Sprint PCS Center.

Changing your Lock Code

You can enter a personal lock code and then change it as often as you like.

To enter a new lock code:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Security".
5. Press **OK**.
6. Enter lock code.
7. Highlight "SecuritySetting".
8. Press **OK**.
9. Highlight "Lock Code".
10. Press **OK**.
11. Enter new lock code.
12. Re-enter your new code.

Restricting your Calls

You can limit your outgoing and incoming calls. Even while limiting outgoing calls, emergency numbers and Sprint PCS Customer Care are available to call.

To restrict your calls:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Security".
5. Press **OK**.
6. Enter lock code.
7. Highlight "SecuritySetting".
8. Press **OK**.
9. Highlight "Limit Use".
10. Press **OK**.
11. Highlight "Outgoing Calls" or "Incoming Calls".
12. Press **OK**.
13. Select your desired option.

The options on this setting are "Allow All", "Phone Book Only" or "Special #s Only".

Allow All: You can make or receive all calls.

Phone Book Only: Only Phone Book entries or special numbers (see the next page) are available to make or receive calls.

Special #s Only: Only three special number's entries are available to make or receive calls.

- If you want to deactivate the restricted calls, you have to set "Allow All" to the incoming or outgoing call.
- If you leave the restricted incoming calls for 30 seconds, they connect to voicemail.
Incoming Calls Outgoing Calls

Tip: Emergency calls (9-1-1, **2**) can still be made in this state.

Tip: Press **Menu**, highlight "Hung Up" and press **OK** to disconnect the restricted incoming calls before they connect to the voicemail.

Storing Special Numbers

This feature allows you to store three important phone numbers that you would like to access even if your phone is locked. To add a phone number to your Special Numbers:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Security".
5. Press **OK**.
6. Enter lock code.
7. Highlight "SecuritySetting".
8. Press **OK**.
9. Highlight "Special #s".
10. Press **OK**.
11. Highlight the entry number where you would like to store the number.
12. Press **OK**.
13. Enter the phone number and press **OK**.

or

Press **Menu**, then highlight "From Phone Book" or "Voicemail" and press **OK**.

Follow the system prompts.

Tip: If the phone number has already been stored, these "Phone#" options change to "**H** Hard Pause", "**P** Second Pause" and "Hyphen".

Erasing the Entire Internal Phone Book

1. From the Standby mode, press **Menu** to display the menu options.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Security".
5. Press **OK**.
6. Enter lock code.
7. Highlight "Erase PhoneBook".
8. Press **OK**.
9. If you're sure you want to erase your Phone Book, highlight "Yes" and press **OK**.

Resetting your Phone

Resetting your Sprint PCS Phone will restore all the factory defaults, including ringer types, display settings, etc. However, your Call History, Internal Phone Book and Messages will not be affected.

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Security".
5. Press **OK**.
6. Enter lock code.
7. Highlight "Reset Phone".
8. Press **OK**.
9. If you're sure you want to reset your phone, highlight "Yes" and press **OK**.

Resetting and Locking your Phone through SMS

When your phone is lost or stolen, you can erase your important personal information (such as phone book entries, call history and messages) and lock your phone by sending a special formatted SMS message to your phone. Send the following format from your computer:

\\RESET **<Passcode>**RESET

- <Passcode> -your defined passcode.

Default Passcode is 11-digit ESN (Electronic Serial Number) which is described on the package or phone itself.

The locked phone will display the following message:

"If found, please call Sprint PCS Customer Care 1-888-217-4727".

To activate this feature, following presetting is required:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Security".
5. Press **OK**.
6. Enter lock code.
7. Highlight "SecuritySetting".
8. Press **OK**.
9. Highlight "Found Me".
10. Press **OK**.
11. Highlight "Reset/Lock".
12. Press **OK**.
13. Highlight "Enable".
14. Press **OK**.

- To unlock the phone locked through SMS when you get back your phone, bring the phone to Sprint PCS Retail Store.

Tip: There is a help menu for "Found Me" instruction. Select "Help" at the step 11.

Changing the Passcode

To change the passcode for the special formatted SMS messages:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Settings".
3. Press **OK**.
4. Highlight "Security".
5. Press **OK**.
6. Enter lock code.
7. Highlight "SecuritySetting".
8. Press **OK**.
9. Highlight "Found Me".
10. Press **OK**.
11. Highlight "ChangePasscode".
12. Press **OK**.
13. Enter new passcode (11 digits).
14. Re- enter new code and then your new code will be saved.

12. Personal Information Management

Checking My Profile

This phone can store your personal data in "My Profile" menu. These are including My Name, My PCS#, Birthday, Blood Type, Address, Phone# (home), Email (home), Phone# (work) and Email(work).

Editing My Profile

To edit or select your personal data (except My PCS#):

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "My Profile", and press **OK**.
3. Highlight your desired item, and press **OK**.
4. Edit (enter) or select the data, and press **OK**.
5. Press **Save**.

Setting Secret My Profile

In order to display the My Profile data (other than My Name and My PCS#) that are tagged Secret:

1. From the Standby mode, press **Menu**.
 2. Highlight "My profile", and press **OK**.
 3. Highlight "My Name"
 4. Press **Menu**.
 5. Highlight "Set Secret".
 6. Press **OK**.
 7. Enter your 4-digit lock code.
 8. Highlight "On".
 9. Press **OK**.
 10. Press **Save**.
- To cancel the secret setting, select "Off" at step 8 above.

Note: If the stored data is more than 15 digits, the pop up display appears to show the whole data.

Tip: To display the options such as "Erase", "Call" and "Send Email", highlight one of the My Profile data (except My Name, My PCS# and Blood Type) and press **Menu**.

Managing Schedules

Calendar

Use the Calendar to remind you of events or important calls you need to make. You can schedule up to 100 events, 15 Call Alarms and 20 To-Do Items.

Tip: In Analog mode or No Service area, it's necessary to set actual time and date to use Calendar function. Set the current Time/Date by using numeric keys and/or the Navigation key (left/right: move cursor, up/down: change value).

It's available from 12:00 AM, Jan 1, 2000 to 11:59 PM, Dec 31, 2099.

Setting Holidays

You can set your personal holidays by displaying the date in light black on the Calendar display. The default holidays displaying in light black are Sundays and some holidays.

Note: The framed date indicates the current date.

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Calendar".
3. Press **OK**.
4. Highlight the day you want to set to the holiday by using the Navigation key (left: previous day, right: next day, up: previous week, down: next week).
5. Press **Menu**.
6. Highlight "Set Date" or "Set Weekly" from the options, and press **OK**.
Options:
 - **Set Date** sets the selected day to the holiday.
 - **Set Weekly** sets the weekly holidays.
 - **Reset Date** resets the holiday setting for the selected day.
 - **Reset Weekly** resets the weekly holiday setting.
 - **Reset All** resets all the holiday settings and returns to the default.
7. If you selected "Set Weekly", "Reset Weekly" or "Reset All", you'll be prompted to select "Yes" or "No".

Tip: You can set the holidays from Jan 1, 2000 to Dec 31, 2020.

Adding Events

1. From the Standby mode, press **Menu**.
2. Highlight "Calendar", and press **OK**.
3. Highlight the day you want to add an event to by using the Navigation key and press **OK**.
4. Press **Menu** to display the options.
5. Highlight "Add Event".
6. Press **OK**.
7. Highlight "Event".
8. Press **OK**.
9. Highlight one of the following event details, and press **OK**.

Details:

- **Description** Entering a description of your event (up to 15 characters).
 - **From Scheduling** the start time.
 - **To Scheduling** the end time.
 - **Location** Editing the location of your event (up to 15 characters).
 - **Alarm** Setting the alarm to On or Off.
 - **Alarm Time** Editing the alarm time (number of hours or minutes before the event starts). Default alarm times are 10 minutes.
 - **Repeat** Repeating the event. Select "None", "Daily", "Weekly", "Monthly", or "Yearly".
10. Press "Save" (left soft key) to schedule the event.

Tip: If you have To Do memory, you can extract the description from them. Press **Mode**, highlight "From To Do List" and press **OK**, then select your desired item.

Notifying Events

When an event alarm is scheduled, the notification is displayed on the setting time. The red LED light will also blink and the alarm will sound until you press any key.

To check the notification:

1. Press **OK** or **View** (left soft key) to see the event details.
2. Press **Menu** to display the options.
3. Highlight an option, and press **OK**.

Options:

- **Snooze** notifies again after 10 minutes.
- **Erase** deletes the event, even if it is a repeating event.

Tip: Event Alarm cannot sound if your phone is turned off, in Analog mode/No Service area or while the phone is in use. Missed Alarm notification is displayed at the time when the phone returns to each appropriate situation.

Adding Call Alarms

Scheduling a Call Alarm lets you remind yourself to make an important call by displaying a notice. Follow these steps:

1. From the Standby mode, press **Menu**.
2. Highlight "Calendar", and press **OK**.
3. Highlight the day you want to schedule a Call Alarm, and press **OK**.
4. Press **Menu** to display the options.
5. Highlight "Add Event".
6. Press **OK**.
7. Highlight "Call Alarm".
8. Press **OK**.
9. Highlight one of the following Call Alarm details, and press **OK**.

Details:

- **Phone#** Editing the phone number:
Enter the phone number directly and press **OK**.
or
Press **Menu**, then highlight "From Phone Book" or "Voicemail" and press **OK**.
When you selected "From Phone Book", you can extract the entry phone number by following the prompt order.
 - **Time/Date** Editing the start time/date.
 - **Repeat** Repeating the Call Alarm. Select "None", "Daily", "Weekly", "Monthly", or "Yearly".
10. Press "Save" (left soft key).

Note: You can also add a Call Alarm from the Phone Book menu. Highlight the entry's phone number, and press **Menu** to select "Call Alarm".

Tip: If the phone number has already been stored, these "Phone#" options change to "H Hard Pause", "T 2 Second Pause" and "Hyphen".

Notifying Call Alarms

When a Call Alarm is scheduled, the notification is displayed on the setting time. The red LED light will also blink and the alarm will sound until you press any key.

1. Press **OK** or **View** (left soft key) to see the Call Alarm details.
- If you want to call the number immediately, press **TALK**.
2. Press **Menu** to display the options.
3. Highlight an option, and press **OK**.

Options:

- **Call** lets you place a call.
- **Snooze** notifies again after 10 minutes.
- **Alternate** when you stored some other numbers into the same entry in Phone Book, enables to alternate it.
or
- **Save Phone #** stores the number into Phone Book.
- **Erase** deletes the Call Alarm, even if it is a repeating one.

Tip: Call Alarm cannot sound if your phone is turned off, in Analog mode/No Service area or while the phone is in use.

Misued Alarm notification is displayed at the time when the phone returns to each appropriate situation.

Viewing Events and Call Alarms

1. From the Standby mode, press **Menu**.
2. Highlight "Calendar", and press **OK**.
3. Then, a ">" is displayed next to the date if an event or Call Alarm is scheduled.
4. To view an individual day, highlight the day by using the Navigation key (left: previous day, right: next day, up: previous week, down: next week), and press **OK**.
5. Highlight one of the Events from the list, and press **OK**. The event or Call Alarm details display appears.
 - To edit the details data, highlight it and press **OK**. (See "Adding Events" on page XX or "Adding Call Alarms" on page XX for the details.)
 - To erase the Events, press **Menu**, highlight "Erase" and press **OK**. Then Highlight "Yes" and press **OK**.

To view a future/past day's scheduled Events, follow these steps:

1. From the Event list display, press **Menu**.
2. Highlight "Go to Date".
3. Press **OK**.
4. Enter the date by using numeric keys and/or the Navigation key, and press **OK**.
5. Press **OK** again to view the day's Event list.

Tip: Event list (including events and Call Alarm) are displayed in chronological order. Navigation key leads to the next day (> right) and the previous day (< left).

Adding To-Do's

To add an item to your To-Do List, follow these steps:

1. From the Standby mode, press **Menu**.
2. Highlight "Calendar", and press **OK**.
3. Press **OK** to display the Event List.
4. Press **Menu** to display the options.
5. Highlight "To Do List".
6. Press **OK** then the To Do List display is appears.
7. Press **Menu**.
8. Highlight "Add Item".
9. Press **OK**.
10. Highlight "Description" or, "Priority" and press **OK**.
 - Description Entering a description of the To-Do (up to 15 characters).
 - Priority Editing the To-Do's priority. You can select from "Normal", "! Urgent" or "V Done".
11. Press **Save**.

Viewing To-Do List

To view your To-Do List, follow these steps:

1. Follow the above steps 1-6.
2. Highlight an item from the To-Do list and press **OK**. The details display appears.
 - To edit the details data, highlight it and press **OK**. (See "Adding To-Do's".)

Editing To-Do Items

1. From the To Do List display, highlight the item you want to edit and press **OK**.
2. Press **Menu** to display the options.
3. Highlight an option and press **OK**.

Options:

 - Add To Schedule extracts an item from the To-Do list and makes it a scheduled event.
 - Erase deletes the To-Do.

Viewing Event, Call Alarm and To-Do Memory

To view memory space, follow these steps:

1. From the Standby mode, press **Menu**.
2. Highlight "Calendar", and press **OK**.
3. Press **OK**.
4. Press **Menu** to display the options.
5. Highlight "View Memory".
6. Press **OK**.
7. Highlight "Schedule Event", "Call Alarm" or "To Do List".
8. Press **OK**.

To further options,

9. Press **Menu**.
10. Highlight an option, and press **OK**.

Options:

- **Erase Old** deletes the old events or Call Alarms.
- **Erase Done** deletes the To-Do's that were done.
- **Erase All** deletes the all events, Call Alarms or To-Do's.

11. Highlight **Yes** or **No**, and press **OK**.

Erasing Multiple Events, Call Alarms or To-Do's

To erase old Events, Call Alarms and To-Do's, follow these steps:

1. Follow the previous steps 1-4.
2. Highlight "Erase Memory".
3. Press **OK**.
4. Highlight "Erase Old".
 - To erase all Events, Call Alarms and To-Do's, highlight "Erase All".
5. Press **OK**.
6. Highlight **Yes**.
7. Press **OK**.

except when it's recorded in Analog or No Service area.

Erasing Memos

To erase an individual Voice Memo:

1. Press **Memo** (right soft key) shortly.
2. Highlight your desired memo from the list.
3. Press **Menu** to display the options.
4. Highlight "Erase Memo".
5. Press **OK**.
6. Highlight "Yes".
7. Press **OK**.

To erase all Voice Memos:

1. Press **Memo** (right soft key) shortly.
2. Highlight "All".
3. Press **Menu** to display the options.
4. Highlight "Erase All Memos".
5. Press **OK**.
6. Highlight "Yes".
7. Press **OK**.

Setting Up Screen Call


This feature enables you to answer incoming calls by using pre-recorded announcements, either one that came with the phone or one that you record. You can also record the caller's voice into the Voice Memo list (See "Using Voice Memo"). You can decide whether you answer the call immediately or not during the caller's recording.


Activating Screen Call

To start Screen Call when you have incoming calls:

1. Press **Menu** to display the options.
2. Highlight "Screen Call".
3. Press **OK**.

To set auto Screen Call:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Screen Call".
3. Press **OK**.
4. Highlight "Auto".
5. Press **OK**.
6. Highlight "On".
7. Press **OK**.
- If you want to change the Answer Time, enter your desired number (from 1 to 16 seconds) by using numeric keys or up/down of the Navigation key.
8. Press **OK**. Then the  icon is displayed on the Standby display.

Tip: If new memo is waiting,  appears on the display. The memos recorded while activating "Screen Call" are shown with "v" or "!" icon in the list. (v: once played, !: not played yet)

Selecting Announcement for Screen Call

1. Follow the above steps 1-3.
2. Highlight "Announcement".
3. Press **OK**.
4. Depending on your preference of setting "already stored" or "user setting" announcement, highlight "Pre-recorded" or "Custom".
5. Press **OK**. Or press **Menu** for options.

Recording your Name

You can add your name to the pre-recorded announcement.

Follow these steps:

1. From the Standby mode, press **Menu**, highlight "Screen Call" and press **OK**.
2. Highlight "Announcement", and press **OK**.
3. Highlight "Pre-recorded".
4. Press **Menu**.
5. Highlight "Record Name".
6. Press **OK**.
7. Press **OK** to start 1st recording.
 - When your name has already been recorded, select "Yes" or "No" for overwriting.
8. After the 1st recording, press **OK** again to start the 2nd recording.
9. To stop recording, wait for 12 seconds or press **OK**. (It's available for both 1st and 2nd recording.)
 - Select Erase name at step 5 above, and then select "Yes" to erase the recorded name.

Recording Custom Announcement

1. Follow the above steps 1 and 2.
2. Highlight "Custom".
3. Press **Menu**.
4. Highlight "Record".
5. Press **OK**.
6. Press **OK** to start recording. You can record for up to 12 seconds.
 - When the announcement has already been recorded, select "Yes" or "No" for overwriting.
7. After the 1st recording, press **OK** again to start the 2nd recording.
8. To stop recording, wait for 12 seconds or press **OK**. (It's available for both 1st and 2nd recording.)

Tip: You should record the announcement twice because the phone needs to adjust to the base station programs.

Erasing Announcement

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Screen Call".
3. Press **OK**.
4. Highlight "Announcement".
5. Press **OK**.
6. Highlight "Custom".
7. Press **Menu**.
8. Highlight "Erase".
9. Press **OK**.
10. Highlight "Yes".
11. Press **OK**.

Using Voice Dial

When on the Sprint PCS Network, you can call up to 30 stored entries by speaking the name into the microphone of the handset. Using the Voice Dial option requires that you first train the phone to recognize the name of the person you are calling.

Tips on Recording Names

- Avoid recording similar names phonetically. If you record a similar name to one that is already in memory, the phone requests another name.
- Avoid recording in a noisy place.
- Speak clearly and naturally.
- The person who will use the phone should record the name.
- Avoid very long or very short names. Names with two to five syllables are recommended.
- If a voice dials entry does not properly connect, you may need to record the name and number again.

Programming the Phone for Voice Dial

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Voice Dial".
3. Press **OK**.
4. Highlight "Program".
5. Press **OK**.
6. The phone will prompt you to say the name you want to program. Wait for the beep and then say the name.
7. Respond to the prompt by repeating the name after the beep.
8. Enter or highlight the entry (name) in the phone book entry list.
9. Press **OK**.
10. Select the labeled category that includes your desired phone number. Then display shows "Voice Dial Recorded".
 - Voice Dial programming is only applicable to the Phone Book entries.

Tip: Headset or Hands-free Car Kit microphones are not workable for Voice Dial Programming.

Placing a Call Using Voice Dial

1. From the Standby mode, press **TALK** shortly.
2. At the prompt, say the name into the phone in four seconds.
 - The phone places the call if it recognizes the name.
 - If the phone does not recognize the name, it prompts for the name again.
 - If the phone is unable to recognize the name after two attempts, the following message is displayed: "Cannot recognize name." The phone returns to Standby mode automatically, and you can try the call again later.
 - Avoid using Voice Dial in noisy places.

Reviewing Voice Dial Entries

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Voice Dial".
3. Press **OK**.
4. Highlight "Review".
5. Press **OK**.
6. Highlight the desired entry and press **OK**. Then recorded names play audibly.
or
Press **Menu**, highlight **Play** and press **OK**.

Erasing Voice Dial Entries

To erase an individual Voice Dial entry:

1. Highlight the desired entry (See previous "Reviewing Voice Dial Entries").
2. Press **Menu** to display the menu options.
3. Highlight "Erase".
4. Press **OK**.
5. Highlight "Yes".
6. Press **OK**.

To erase all Voice Dial entries:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Voice Dial", and press **OK**.
3. Highlight "Erase All", and press **OK**.
4. Highlight "Yes", and press **OK**.

Playing the Game

Crab Catcher Game:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Game/Tools".
3. Press **OK**.
4. Highlight "Game".
5. Press **OK**.
6. Select On or Off for the backlight of the display.
7. Press **OK** or wait a second. Then High Score display appears. If you want to erase High Score, press **CLR** (right soft key), and highlight **Yes**, and press **OK**.
8. Press **Start** (left soft key) to start.
 - Press left or right of the Navigation key (or use **Shift *** or **Space #**) to move the crab to left or right to catch apples into the crab's claw.
 - The game is over when three apples are not caught with the crab's claw.
9. To end the game, press **End/**.

Using the Calculator

Your phone comes with a built-in calculator function. To use this function, follow these easy steps:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Game/Tools", and press **OK**.
3. Highlight "Calculator".
4. Press **OK**.
 - For addition, press **up** of the Navigation key
 - For subtraction, press **down** of the Navigation key
 - For multiplication, press **left** of the Navigation key
 - For division, press **right** of the Navigation key
 - For decimal, press **left soft key**
 - To clear the numbers, press **right soft key**
 - To end calculation, press **End/**

Using the Downloaded Data

Setting a Downloaded Melody to the Ringer or Start-up/Power-off Tone

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Game/Tools".
3. Press **OK**.
4. Highlight "Downloads".
5. Press **OK**.
6. Highlight your desired downloaded melody title and press **OK**. Then starts to play the selected melody.
7. Press **Menu** or wait for ending of the melody play.
8. Highlight either "Set Ringer", "Set St-up Tone" or "Set Pw-off Tone".
9. Press **OK**.
10. Select the space to assign your selected melody.
 - If your selected space is already assigned, you are prompted whether overwrite it or not.

Tip: If you have no downloaded data, "No Data Downloaded" is shown on the display.

Setting a Downloaded Pictures to the Wallpaper or Incoming Call Display

1. Follow the previous steps 1-5.
2. Highlight your desired downloaded picture name and press **OK**. Then displays the selected picture.
3. Press **Menu** or wait a second.
4. Highlight "Set Wallpaper" or "Set Incom:Call".
5. Press **OK**.
6. Select the space to assign your selected picture.
 - If your selected space is already assigned, you are prompted whether overwrite it or not.

Tip: If you have no downloaded data, "No Data Downloaded" is shown on the display.

Returning the assigned melody or picture data to unassigned:

1. From the Standby mode, press **Menu**.
2. Highlight "Game/Tools" and press **OK**.
3. Highlight "Downloads" and press **OK**.
4. Press **Menu** to display the options.
5. Highlight "Unassign" and press **OK**.
6. Highlight your desired item, and press **OK**.
7. Highlight the data you want to cancel the assignment, and press **OK**.
8. Highlight "Yes" and press **OK**.

Erasing Individual or All Downloaded Data

To erase an individual downloaded melody or picture data:

1. Highlight one of the downloaded melody titles or picture names by using the steps as described before.
2. Press **OK**.
3. Press **Menu** to display the options.
4. Highlight "Erase".
5. Press **OK**.
6. Highlight "Yes".
7. Press **OK**.

To erase all downloaded melodies and/or pictures:

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Game/Tools", and press **OK**.
3. Highlight "Downloads", and press **OK**.
4. Press **Menu** to display the options.
5. Highlight "Erase Data" and press **OK**.
6. Highlight "Erase All Melod." or "Erase All Pict".
 - If you want to erase both of all melodies and pictures, highlight "Erase Both".
7. Press **OK**.
8. Highlight "Yes".
9. Press **OK**.

Tip: Erasing downloaded data cannot erase the data that had already been set to

Launching the Sprint PCS Wireless Web Browser Session

There is a security setup process that you will go through the first time you launch the Sprint PCS Wireless Web Browser. Please follow the on-screen prompts and wait 3-6 minutes to complete the security setup process.

To launch the Sprint PCS Wireless Web Browser:

1. From the Standby mode, press left soft key **Email**, **My phone** shortly, then press and hold **Web** in this order.

OR

1. From the Standby mode, press **Menu** to display the main menu.
2. Highlight "Wireless Web".
3. Press **OK**.
4. Highlight "Launch Browser".
5. Press **OK**.

- When a reminder of the charge appears, select "Yes". After a few moments, you are connected to your Home Page.
- When you have an incoming call while accessing the browser, press **Menu** to display the options. Select "Skip" or "Hang Up"(while restricting) if you want to ignore the call and return to the browser session.

Tip: If the "To Start" or "Both" option is set in the MiniBrowser "Web Guard", you are prompted whether or not you want to start the browser call.

Tip: To send e-mail from your phone, press (left soft key) in the Standby mode to visit the deck of sending e-mail.

Quick Key

This feature enables you to change the default setting of the first and second left soft keys that appears in the Standby mode. This setting lets you access your desired sight quickly.

To set the Quick key (your original first or second key):

1. From the Standby mode, press **Menu**.
2. Highlight "Wireless Web".
3. Press **OK**.
4. Highlight "Quick Key".
5. Press **OK**.
6. Highlight "First Key" or "Second Key".
7. Press **OK**.
8. Enter the key name by using **CLR** and digits key from 1 to 6 digits.

See "Entering Information Using Keypad" on page XX for entering method.

9. Press **OK** or **OK** (left soft key).
10. Highlight "URL".
11. Press **OK**.
12. Enter the URL by using **CLR** and digits key.
13. Press **OK** or **OK** (left soft key).
14. Press **Save** (left soft key).

To initialize the Quick key (return to the default):

1. Follow the previous step 1-6.
2. Press **Menu**.
3. Highlight "Initialize".
4. Press **OK**.
5. If you're sure you want to initialize the setting, highlight "Yes".
6. Press **OK**.

Tip: The default first left soft key corresponds to **Email**.
Second left soft key corresponds to **Myphone**.

Here is an example of a homepage:*

WIRELESS WEB

- 1 @Sprint PCS
- 2 My Wireless Web
- 3 AOL
- 4 Amazon.com
- 5 Yahoo!
- 6 MSN Mobile
- 7 Fidelity
- OK MENU
- * Subject to change

Ending the Sprint PCS Wireless Web Browser Session

To end a Sprint PCS Wireless Web Browser session:

- From the home page, press **END** to exit the MiniBrowser and return your phone to Standby mode.
OR
- From anywhere in the browser, at any time, press **END** and your phone exits the MiniBrowser and returns to Standby mode. Exiting this way saves the URL (web site location) that you were using last.

Tip: If the "To Exit" or "Both" option is set in the MiniBrowser "Web Guard", you are prompted whether or not you want to end the browser call.

Navigating the Sprint PCS Wireless Web

While using the Sprint PCS Wireless Web Browser, you will find that on-screen items may be presented in one of the following ways:

- Numbered options (some options may not be numbered)
- Hyperlinks (embedded in content)
- Text or numeric input
- Simple text

Use the soft keys on the bottom line of the display to choose the options or links. You can use these keys by pressing the left/right soft key corresponding to the menus displayed on the bottom line of the display.

Knowing your Navigation Keys

The following keys allow you to navigate the Sprint PCS Wireless Web:

- **Scrolling up/down by item** You can use Navigation Key to scroll through contents when a page does not fit on one screen and to move the cursor. The selected item is indicated by a > cursor or highlighted on the screen.
- **Scrolling up/down by page** Use the Navigation up/down key to scroll through information a page at a time rather than a line at a time.
- **Back to previous page** When you're viewing a web page and want to go back to a previous page, press **CLR**. From the Browser menu, pressing **Menu** and selecting "Home" returns you to the Home Page.
- **Clearing out text/number entered** When you need to clear the last number, letter or symbol entered, press **CLR**. To completely clear the field, press and hold **CLR**.
- **Selecting and activating items using soft keys and/or digits** If the items on a page are numbered, you can use your keypad (number keys) to select an item, or you can select the items by moving the cursor and selecting the appropriate soft key.

Soft keys help you navigate to different screens or select special functions. They appear on the bottom screen of your phone's display. The function of soft keys can change with each page and also depend on each highlighted item.

- Press **[left]**— The left soft key is used primarily for selecting the highlighted item but its function can change.
- Press **[right]**— The right soft key is used primarily for secondary options or a menu of secondary options.

Entering text, numbers or symbols Each time you're prompted to enter text, the current text entry method displays the mostly right soft key as:

- ALPHA: ALPHABET – Caps Lock
- + ALPHA: Alphabet – One character shifted
- alpha: alphabet – Unshifted
- SYM 1, SYM 2, SYM 3, SYM 4: Symbol mode
- NUM: Number mode
- WORD: T9 WORD – Caps Lock
- + WORD: T9 Word – One character shifted
- word: T9 word – Unshifted

To change the input mode:

1. Press left/right soft key corresponding to your desired input mode.

Tip: You can shift the way of entering letters to upper/lower case by pressing (if available).

Using Special Features within the Sprint PCS Wireless Web

Using Links

Links allow you to jump to a different page or a different site. They even allow you to initiate a phone call from some sites. Links are represented by [Link]. You can normally use the left soft key to select a link when it's displayed.

Making a Phone Call from the Sprint PCS Wireless Web Browser

There are some sites that allow you to make a phone call from the Sprint PCS Wireless Web Browser. The phone number may be highlighted and the left soft key appears as "Call." In most cases, press **[TALK]** to call the number. When making a call from the Sprint PCS Wireless Web Browser, the following takes place:

- When you first make the call, the Sprint PCS Wireless Web Browser connection is automatically terminated.
- After you end the call, your phone will return to the screen from which you initiated the call.

Creating a Bookmark

Bookmarks tag individual pages for easy access at a later time. Bookmarks save time by reducing the number of steps it takes to access a desired site.

1. Go to the page you want to mark.
 2. Press **Menu** to be in the Browser Menu.
 3. Select "Mark Site".
 4. When a page has a title, it is automatically used for the name of the bookmark. If you like, you can change the name.
 5. Select **Save** to save the name and add the page to your list of bookmarks. A message appears confirming the bookmark was added to the list.
 6. Select **OK** to return to the screen that you marked and resume navigation within the Sprint PCS Wireless Web Browser.
- The new bookmark is added to the bottom of your bookmark list.

Finding a Bookmark

1. From the home page, select **Bookmarks**.
2. Choose the bookmark you want. Press the number associated with the bookmark in the bookmark list.

Deleting a Bookmark

1. From the bookmark list, scroll to the bookmark you want to delete.
2. Press **Menu** (right soft key).
3. Select "Delete" from the options. A message displays prompting you to confirm.
4. Select "Yes" to delete the bookmark.

Placing a Call

To place a call while you're connected to the Sprint PCS Wireless Web:

1. First, make sure the cable is connected properly.
 2. Open the Sprint PCS Dialer software or application on your computer and place the call.
- The phone displays the number your computer is calling and a "connecting" message is displayed.
 - Once the call successfully connects, press **OK** to display the status of the data call.

Tip: Your phone's display shows you information on the status of the Sprint PCS Wireless Web Connection call.

Receiving a Call

To receive a call while you're connected to the Sprint PCS Wireless Web:

1. From the Standby mode, press **Menu**.
2. Highlight "Wireless Web".
3. Press **OK**.
4. Highlight "Connection".
5. Press **OK**.
6. Highlight "Data/Fax (IN)".
7. Press **OK**.
8. Highlight "Incoming Fax" or "Incoming Data", and press **OK**.

- Open the Sprint PCS Dialer software to automatically answer incoming calls.
- Your phone will display either "Data Call From" or "Fax Call From", depending on the type of incoming call.

Tip: To terminate the data call, use your Sprint PCS Dialer software: fax calls typically terminate automatically. Don't press **End** while sending data, this may cause your data or fax application to temporarily lock up and could cause loss of data.

Using Special Features During a Sprint PCS Wireless Web Call

Your phone gives you the ability to use special features while you're on a wireless Internet call. They are outlined below:

- **Caller ID:** Just like your phone stores regular Caller ID numbers, it also stores the numbers of incoming Sprint PCS Wireless Web Connection calls. To distinguish between the two types of calls, "Data" or "Fax" displays along with the number of the caller when you view your Caller ID records.
- **Call Waiting:** If someone tries to reach you while you're connected to the Sprint PCS Wireless Web, your phone behaves like it is turned OFF. Depending on your service, callers may get your voicemail. Call Waiting is automatically deactivated whenever you place or receive a Sprint PCS Wireless Web Connection call.
- **Accessing features:** You can still access most of your phone's features while you're connected to a Sprint PCS Wireless Web Connection Call. You can navigate the phone's menu system to change or view your phone's features or Phone Book entries. You can also read messages or view the Caller ID records that you received before placing the call.

Tip: Caller ID is not available on Sprint PCS


Ending a Sprint PCS Wireless Web Call

It's important to note that some of the normal ways to end a call won't work with the Sprint PCS Wireless Web Connection calls. You should always close the connection through the application on your computer. Your phone will then return to Standby mode.

Although you can end a wireless web connection call by disconnecting the data cable or turning off your phone, this may disrupt your computer.

- You'd better to disconnect the data cable immediately after ending a Sprint PCS Wireless Web call because the battery consumption is quite high while connecting the data cable.

Receiving a Sprint PCS Wireless Web Update Alert (Messages)

If your phone is on and you receive a message alert, your phone's alert may sound/vibrate and an  icon appears. To view the alert (message), follow the steps listed below:

1. From the Standby mode, press **Menu**.
2. Highlight "Wireless Web".
3. Press **OK**.
4. Highlight "Web Alert".
5. Press **OK**.

If a reminder of the charge appears, select "Yes".

OR

When the notification display is shown:

Select "Yes" if a reminder of the charge appears.

1. Select **View** (left soft key).
 2. Highlight your desired message title, and press **OK**.
- If you select **Skip** (right soft key) at the step 1 above, the display returns to the Standby mode.

14. Main Menu List

Entering the Main Menu

From the Standby mode, press **Menu**. Then the main menu appears.

Refer to the following list that includes all items of main menu.

Main Menu	Level 1
Call History	Outgoing Calls Incoming Calls Missed Calls
Wireless Web	Messages Web Alert Connection Launch Browser Web Guard
Phone Book	Find Name Add New Entry Speed Dial #s Long Phone #s Services
Calendar	Calendar appears
Roaming	Set Mode Call Guard
Voicemail	Call Voicemail Details Clear Count
Settings	Sounds Display Security Others
Game/Tools	Game Calculator World Clock Downloads
Voice Dial	Program Review Erase All
Screen Call	Auto Announcement
My Profile	Profiling list appears (Name, Phone Number, Birthday etc.)
PC Synch	
Key Guard	

15. Knowing Performance and Safety Guidelines

Getting the Most Out of your Reception

Keeping Tabs on Signal Strength

Calling quality of your phone is always at it's best when the antenna is fully raised. If you're inside a building, being near a window may give you better reception.

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

Understanding Power Save Feature

If you try to use your Sprint PCS Phone in an area where the signal is not available, the Power Save feature automatically activates to conserve battery power if you're unable to pick up a signal for 15 minutes. If your phone is on, it periodically rechecks service availability or you can check yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen.

Understanding How your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining your phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Extend the antenna fully for best reception.
- Hold the phone with the antenna up and over your shoulder.
- Try not to ever hold, bend or twist the phone antenna.
- Retract the phone antenna when you're not on a call.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a Sprint PCS Center or call Sprint PCS Customer Care for service.
- Keep magnetic cards, magnetic tapes, floppy disks, etc. away from your Sprint PCS Phone or their memory may be erased by magnetism emitted from the speakers of the phone.

Tip: For the best care of your phone, only Sprint PCS authorized personnel should service your phone and its accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED IN THIS SECTION MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

Using your Phone While Driving

Talking on your phone while driving is illegal in some states. Even where it's not, it can divert your attention from driving.

Remember that safety always comes first.

When using your phone in the car.

- Get to know your phone and its features, such as speed dial and redial.
- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.

- Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial **9 1 1** to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Tip: If you really need to use your phone while you're driving, use speed dialing.

Using your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles.

Check with the manufacturer or its representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Turning Off your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Tip: Always turn off the phone in healthcare facilities and request permission before using the phone near medical equipment.

Turning Off your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radio should be turned off. Construction crews often use remote-control RF devices to set off explosives. Turn off your phone when you're in any area that has a potentially explosive atmosphere.

Although it's rare your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations
- Below deck on boats
- Fuel or chemical transfer or storage facilities
- Areas where the air contains chemicals or particles such as grain, dust or metal powders.
- Any other area where you would normally be advised to turn off your vehicle engine

Restricting Children's Access to your Phone

Your Sprint PCS Phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Tip: Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Caring for the Battery

Protecting your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Sprint-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32°F to 104°F (0°C to 40°C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

Less than one month:

-4°F to 131°F (-20°C to 55°C)

More than one month:

-4°F to 95°F (-20°C to 35°C)

Disposal of Lithium Ion (LiIon) Batteries

For safe disposal options of your LiIon batteries, contact your nearest Sanyo authorized service center.

Special note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Tip: For safety, do not handle a damaged or leaking LiIon battery.

Acknowledging Special Precautions and the FCC Notice

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 00269, Attn: Publication Sales Division

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and voids the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.