
## IC-GM1600 Serial Seal Location

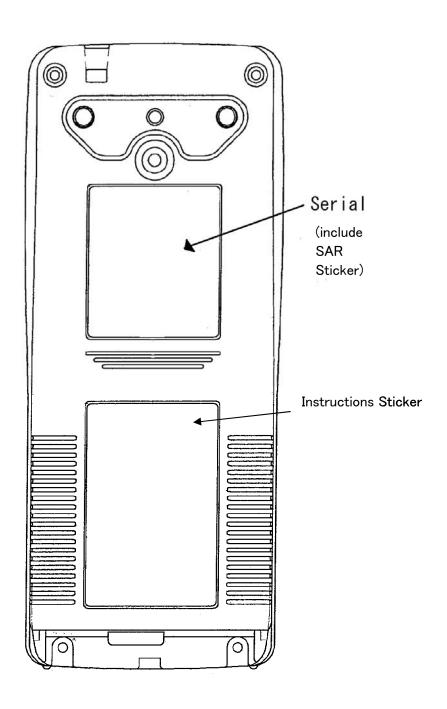



Instructions Seal

Complies with the FCC requirements for survival craft two-way radiotelephone equipment.

## **Operating Instructions**

- 1.FULLY ROTATE [POWER/VOL]
  CLOCKWISE TO TURN POWER ON.
- 2.PUSH AND HOLD [SQL] TO MONITOR, THEN ROTATE [VOL] TO SET THE AUDIO OUTPUT LEVEL.
- 3.PUSH [CH]+[▲]/[▼]TO SELECT THE DESIRED CHANNEL.
- 4.PUSH AND HOLD [PTT] TO TRANSMIT, THEN SPEAK INTO THE MICROPHONE.
- **5.RELEASE [PTT] TO RECEIVE.**