

Serial seal location

The position of the serial seal is the upper right corner of the bottom side.



IC-F7520 BOTTOM SIDE