

AH-41 ADJUSTMENT

ADJUSTMENT		CONDITION	OPERATION	ADJUSTMENT ITEM	VALUE
-Adjust- Idling current	1	<ul style="list-style-type: none"> <li>• TX unit only</li> <li>• 50Ω termination</li> </ul>	<ul style="list-style-type: none"> <li>• Apply 28V DC to TX unit only</li> <li>• Adjust idling current</li> </ul>	TX Unit R120	80mA
-Adjust- Output power	2	<ul style="list-style-type: none"> <li>• 50Ω termination</li> <li>• with BC-253/OPC-2461/OPC-2462</li> </ul>	<ul style="list-style-type: none"> <li>• Apply 13.8V DC to BC-253</li> <li>• Input 1621 MHz/+23.3dBm signal to Tx Unit</li> <li>• Adjust output power</li> </ul>	TX Unit R120	32.5 dBm

BC-253 is no adjustment.