

ADJUSTMENT PROCEDURES

PLL ADJUSTMENT for IC-F4TR

ADJUSTMENT	ADJUSTMENT CONDITIONS	MEASUREMENT		VALUE	ADJUSTMENT	
		UNIT	LOCATION		UNIT	ADJUST
PLL LOCK VOLTAGE	1 Operating freq: 450.000 MHz Receiving	MAIN	Connect a multimeter to check point CP1.	1.3 V	MAIN	L11
	2 Operating freq: 450.000 MHz Transmitting					L405
	3 Operating freq: 490.000 MHz Receiving			3.5V- 4.5V		Verify
	4 Operating freq: 490.000 MHz Transmitting					