

SONY

4-105-996-11(1)

Digital Still Camera
Cámara fotografía digital
DSC-G3

Instruction Manual

GB

Before operating the unit, please read this manual thoroughly and retain it for future reference.

Manual de instrucciones

ES

Antes de operar la unidad, lea este manual atentamente, y guárdelo para futuras referencias.

Cyber-shot

© 2008 Sony Corporation



DSC-G3

4-105-996-11(1)

English

Owner's Record

The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.


Model No. DSC-G3

Serial No. _____

WARNING

To reduce fire or shock hazard, do not expose the unit to rain or moisture.

For Customers in the U.S.A.

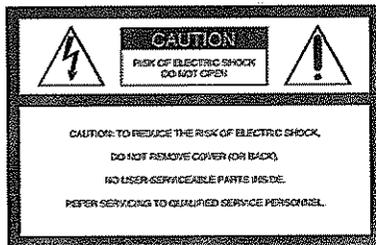

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT SAFEGUARDS

For your protection, please read these safety instructions completely before operating the appliance, and keep this manual for future reference.

Carefully observe all warnings, precautions and instructions on the appliance, or the one described in the operating instructions and adhere to them.

Use

Power Sources

This set should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, or other sources, refer to the operating instructions.

Polarization

This set may be equipped with a polarized ac power cord plug (a plug having one blade wider than the other).

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.

Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

Object and Liquid Entry

Never push objects of any kind into the set through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.

Attach

Do not use manufacturer's

Clean

Unplug the cleaning or aerosol with water

Install

Water

Do not use for exarr sink, or la swimming

Power

Route the walked on against the plugs, rec exits from

Access

Do not pla tripod, bre causing se serious da tripod, bre manufact

Ventil

The slots a for necess; operation overheati; be blocke
- Never c or other
- Never b the set c surface.
- Never p a bookc ventilati
- Do not j heat reg sunlight

Use safety
rating
I for

cautions
or the
instructions



Use type
tag label.
Use power
cable or
grounded
sources,

Use ac
cable wider

Use only one
table to
reversing
, contact
installed.
Polarized

Use cords or
capacity,
check.

Use set
dangerous
and result
avoid any

Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.

Installation

Water and Moisture

Do not use power-line operated sets near water – for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

Power-Cord Protection

Route the power cord so that it is not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the plugs, receptacles, and the point where the cord exits from the appliance.

Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, or table. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer.

Ventilation

The slots and openings in the cabinet are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.
- Never block the slots and openings by placing the set on a bed, sofa, rug, or other similar surface.
- Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.
- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.

Lightning

For added protection for this set during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power-line surges.

Service

Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled or objects have fallen into the set.
- If the set has been exposed to rain or water.
- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.
- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.
- When the set exhibits a distinct change in performance – this indicates a need for service.

Service

Do not attempt to service the set yourself as opening or removing covers may expose you to dangerous voltage or other hazards.

Refer all servicing to qualified service personnel.

Replacement parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts.

Unauthorized substitutions may result in fire, electric shock, or other hazards.

Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition.

Read this first

CAUTION

Replace the battery with the specified type only. Otherwise, fire or injury may result.

Do not expose the batteries to excessive heat such as sunshine, fire or the like.

For Customers in the U.S.A.

RECYCLING LITHIUM-ION BATTERIES

Lithium-Ion batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you.



For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit <http://www.rbrcc.org/>

Caution: Do not handle damaged or leaking Lithium-Ion batteries.

Battery charger

This power unit is intended to be correctly orientated in a vertical or floor mount position.

IMPORTANT NOTE

To comply with FCC RF exposure requirements, the following antenna installation and device operating configurations must be satisfied: the antenna has been installed by the manufacturer and no change can be made.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low-level RF that does not produce heating effects causes no known adverse health effects. Many studies of low-level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. DSC-G3 has been tested and found to comply with FCC radiation exposure limits set forth for an uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65.

If you have any questions about this product, you may call:

Sony Customer Information Center
1-800-222-SONY (7669)

The number below is for the FCC related matters only.

Regulatory Information

Declaration of Conformity

Trade Name: SONY
Model No.: DSC-G3
Responsible Party: Sony Electronics Inc.
Address: 16530 Via Esprillo,
San Diego, CA 92127 U.S.A.
Telephone No.: 858-942-2230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note:

This equip comply wi pursuant t These limi protection residential uses, and t and, if not the instruc to radio co guarantee particular cause harr reception, the equipr to try to co of the folk
- Reorien
- Increase and rece
- Connec circuit c is conn
- Consult technici

The suppli the equipr for a digit: 15 of FCC



Hereby, Se DSC-G3 I with the e provisions please acc <http://www>



This produ with the li using cons (9.8 feet).

t show
with using
proof,
leaves
devices
y (RF) in
Whereas
acts (by
that
no known
w-level
ical
t some
findings
research.
mply
orth for
re FCC
ies in

duct, you

l matters

c.

e FCC
wing
t cause
e must
ing

this
rate this

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

For Customers in Europe

Hereby, Sony Corporation, declares that this DSC-G3 Digital Still Camera is in compliance with the essential requirements and other relevant provisions of the Directive 1999/5/EC. For details, please access the following URL:
<http://www.compliance.sony.de/>



This product has been tested and found compliant with the limits set out in the EMC regulation for using connection cables shorter than 3 meters (9.8 feet).

Attention

The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit.

Notice

If static electricity or electromagnetism causes data transfer to discontinue midway (fail), restart the application or disconnect and connect the communication cable (USB, etc.) again.

Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

GB

**Disposal of waste batteries
(applicable in the European Union
and other European countries with
separate collection systems)**



This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only.

To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment.

For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries.

For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

**Notice for the customers in the
countries applying EU Directives**

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany. For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.

**Notice for customers in the United
Kingdom**

A moulded plug complying with BS 1363 is fitted to this equipment for your safety and convenience.

Should the fuse in the plug supplied need to be replaced, a fuse of the same rating as the supplied one and approved by ASTA or BSI to BS 1362, (i.e., marked with an  or  mark) must be used. If the plug supplied with this equipment has a detachable fuse cover, be sure to attach the fuse cover after you change the fuse. Never use the plug without the fuse cover. If you should lose the fuse cover, please contact your nearest Sony service station.

For use in Norway

Use of this radio equipment is not allowed in the geographical area within a radius of 20 km from the centre of Ny-Alesund, Svalbard.

For use in Cyprus

The end user must register the RLAN (or WAS or WiFi) devices in the Department of Electronic Communications (P.I. 6/2006 and P.I. 6A/2006). P.I. 6/2006 is the Radiocommunications (Categories of Stations Subject to General Authorization and Registration) Order of 2006. P.I. 6A/2006 is the General Authorization for the use of Radiofrequencies by Radio Local area Networks and by Wireless Access Systems, including Radio Local Area Networks (WAS/RLAN).

Table of contents

IMPORTANT SAFEGUARDS	2
Read this first	4
Notes on using the camera.....	9

Getting started11

Checking the accessories supplied.....	11
Identifying parts	12
Charging the battery pack.....	13
Inserting the battery pack.....	15
Setting the clock.....	17
Setting the wireless network.....	18

Shooting/viewing images.....20

Shooting images	20
Viewing images.....	21
Storing images.....	22

Uploading images.....23

Uploading images via wireless connection.....	23
---	----

Using shooting functions25

Selecting the desired shooting mode.....	25
Detecting smiles and shooting automatically (Smile Shutter).....	26
Detecting the shooting conditions automatically (Scene Recognition).....	27
Shooting close-ups (Macro/Close focus).....	28
Using the self-timer.....	28
Selecting a flash mode.....	29
Focusing on a specific point of the frame.....	30
Focusing on the face of the subject (Face Detection).....	30
Selecting the image size to match the usage.....	31

Using viewing functions	33
Viewing an enlarged image (Playback zoom).....	33
Displaying images full-screen (Wide Zoom).....	33
Rotating a vertical orientation image (Temporarily rotated display).....	34
Viewing still images with music (Slideshow).....	34
Viewing images with the Scrapbook display.....	35
Searching for an image (Image Index).....	36
Selecting the display format (View Mode).....	36
Connecting to other devices	38
Viewing images on "BRAVIA".....	38
Sending images to "BRAVIA".....	39
Viewing images on a TV.....	41
Using the camera with a computer.....	42
Changing camera settings	47
Changing the screen display.....	47
Setting the password lock for the internal memory.....	48
Using the HOME screen.....	49
Using the MENU items.....	52
Using functions in Program Auto mode.....	54
Others	55
Viewing "Cyber-shot Handbook".....	55
List of icons displayed on the screen.....	56
Troubleshooting.....	58
Precautions.....	61
Specifications.....	62

Notes on using the camera

Internal memory and "Memory Stick Duo" back up

Do not turn off the camera, remove the battery pack, or remove the "Memory Stick Duo" while the access lamp is lit. Otherwise, the internal memory data or "Memory Stick Duo" may be damaged. Be sure to make a backup copy to protect your data.

On management files

When you insert a "Memory Stick Duo" without a management file into the camera and turn on the power, part of the "Memory Stick Duo" capacity is used to automatically create a management file. It may take some time until you can perform the next operation.

Notes on recording/playback

- Before you start recording, make a trial recording to make sure that the camera is working correctly.
- The camera is neither dust-proof, nor splash-proof, nor water-proof. Read "Precautions" (page 61) before operating the camera.
- Avoid exposing the camera to water. If water enters inside the camera, a malfunction may occur. In some cases, the camera cannot be repaired.
- Do not aim the camera at the sun or other bright light. It may cause the malfunction of the camera.
- Do not use the camera near a location that generates strong radio waves or emits radiation. Otherwise, the camera may not properly record or play back images.
- Using the camera in sandy or dusty locations may cause malfunctions.
- If moisture condensation occurs, remove it before using the camera (page 61).
- Do not shake or strike the camera. It may cause a malfunction and you may not be able to record images. Furthermore, the recording media may become unusable or image data may be damaged.
- Clean the flash surface before use. The heat of flash emission may cause dirt on the flash surface to become discolored or to stick to the flash surface, resulting in insufficient light emission.

Notes on the LCD screen

- The LCD screen is manufactured using extremely high-precision technology so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process, and do not affect the recording.
- If water droplets or other liquids splash on the LCD screen and make it wet, immediately wipe off the screen with a soft cloth. Leaving liquids on the LCD screen surface can harm the quality and cause a malfunction.

On image data compatibility

- The camera conforms with DCF (Design rule for Camera File system) universal standard established by JEITA (Japan Electronics and Information Technology Industries Association).
- Sony does not guarantee that the camera will play back images recorded or edited with other equipment, or that other equipment will play back images recorded with the camera.

Warning on copyright

Television programs, films, videotapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the provisions of the copyright laws.

No compensation for damaged content or recording failure

Sony cannot compensate for failure to record or loss or damage of recorded content due to a malfunction of the camera or recording media, etc.

On wireless network function

- The wireless network function built into this camera has been confirmed to conform with Wi-Fi specifications set forth by the Wi-Fi Alliance (WFA).


- The web browser does not necessarily work with all wireless access points or with all home pages. Depending on the region, access to a wireless LAN may not be available, may require a separate service charge, or communications may be blocked or suffer from intermittent outages. For details, check with your wireless LAN administrator and/or service provider.
- Sony makes no guarantees whatsoever in the provision of the web browser. Sony bears absolutely no responsibility for damages that may arise from the use of the web browser even in the case of claims made by a third-party.

Security precautions when using wireless network products

Security settings are absolutely critical when using a wireless network. Sony bears no responsibility for any damages that may arise due to security problems occurring due to failure to implement security measures or unavoidable circumstances associated with the use of a wireless network.

Checking the accessories supplied

- Battery charger BC-CSD (1)

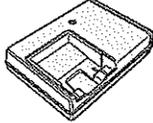


- Power cord (mains lead) (1)
(not supplied in the USA and Canada)




- Rechargeable battery pack NP-BD1 (1)/
Battery case (1)



- Paint pen (1)

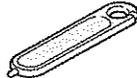


- USB, A/V cable for multi-use terminal (1)

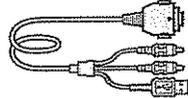

- Wrist strap (1)




- Station plate H (1)
The station plate is used when mounting the camera on Cyber-shot Station (not supplied).

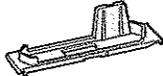

- CD-ROM (1)
 - Cyber-shot application software
 - “Cyber-shot Handbook”
 - “Cyber-shot Step-up Guide”
- Instruction Manual (this manual) (1)

Using the wrist strap

Attach the strap and place your hand through the loop to prevent the camera from damage by being dropped.

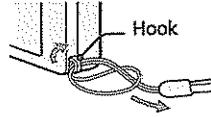

Using the paint pen

The paint pen is used when operating the touch panel. It attaches to the wrist strap.






Note

- Do not carry the camera by holding the paint pen. The camera may fall off.

Identifying parts

Getting started

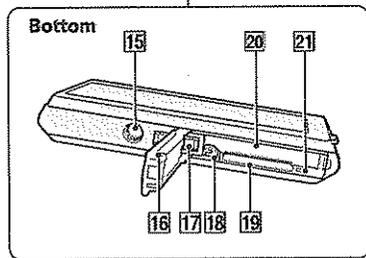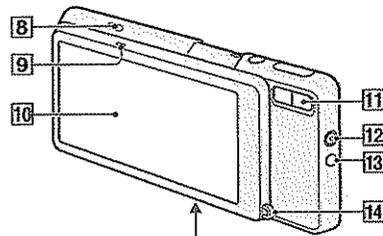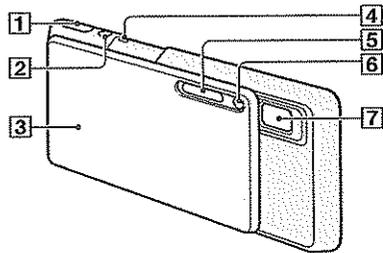

- 1 Shutter button
- 2 ▶ (Playback) button
- 3 Lens cover
- 4 Microphone
- 5 Flash
- 6 Self-timer lamp/Smile Shutter lamp/AF illuminator lamp
- 7 Lens
- 8 WLAN (Wireless network) lamp
- 9 Speaker
- 10 LCD screen/Touch panel
- 11 Zoom (W/T) button
- 12 POWER button/POWER lamp
- 13 WLAN (Wireless network) button
- 14 Hook for wrist strap
- 15 Tripod receptacle
- Use a tripod with a screw less than 5.5 mm (7/32 inch) long. Otherwise, you cannot firmly secure the camera, and damage to the camera may occur.
- 16 Battery/"Memory Stick Duo" cover
- 17 Multi connector
- 18 Battery eject lever
- 19 "Memory Stick Duo" slot
- 20 Battery insertion slot
- 21 Access lamp

Cha

1 In:
int
• Y
w

2 Cc
ch
(w
If y
pac
the
cha
cha


CH
Lit:
Off
cha

3 WI

Charging the battery pack

1 Insert the battery pack into the battery charger.

- You can charge the battery even when it is partially charged.

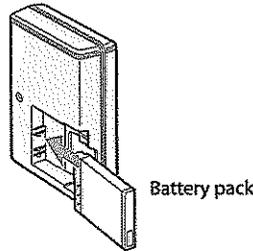

2 Connect the battery charger to the wall outlet (wall socket).


For customers in the USA and Canada

If you continue charging the battery pack for about one more hour after the CHARGE lamp turns off, the charge will last slightly longer (full charge).


CHARGE lamp

Lit: Charging

Off: Charging finished (normal charge)

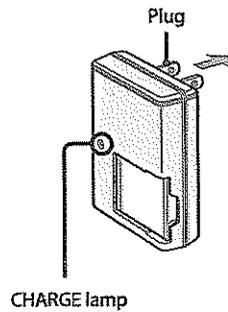

For customers in countries/regions other than the USA and Canada

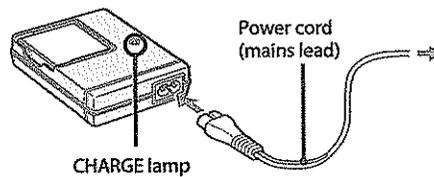

3 When charging is finished, disconnect the battery charger.

Getting started

lamp/

mp

P
itton

5.5 mm
not
ge to the

cover

Charging time

Full charge time	Normal charge time
Approx. 220 min.	Approx. 160 min.

Notes

- The table above shows the time required to charge a fully depleted battery pack at a temperature of 25°C (77°F). Charging may take longer depending on conditions of use and circumstances.
- Connect the battery charger to the nearest wall outlet (wall socket).
- Even if the CHARGE lamp is not lit, the battery charger is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet (wall socket). If some trouble occurs while using the battery charger, immediately shut off the power by disconnecting the plug from the wall outlet (wall socket).
- When charging is finished, disconnect the power cord (mains lead) from the wall outlet (wall socket), and remove the battery pack from the battery charger.
- Designed for use with compatible Sony batteries.

Battery life and number of images you can record/view

	Battery life (min.)	No. of Images
Shooting still images	Approx. 100	Approx. 200
Viewing still images	Approx. 170	Approx. 3400

- The measurement method is based on the CIPA standard. (CIPA: Camera & Imaging Products Association)

Note

- The battery life and the number of still images may vary depending on the camera settings.



Using the camera abroad

You can use the camera, the battery charger (supplied), and the AC-LS5K AC Adaptor (not supplied) in any country or region where the power supply is within 100 V to 240 V AC, 50/60 Hz.

Do not use an electronic transformer (travel converter). This may cause a malfunction.

Insert


1 Op

2 Ins
Aliq
the
batt
dire

3 Cl


Inserting the battery pack

1 Open the cover.

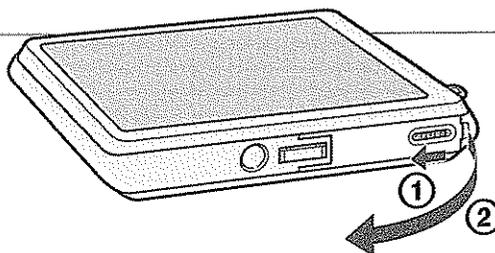


2 Insert the battery pack.

Align the ▲ mark on the battery with the battery eject lever, then insert the battery while pressing the lever in the direction of the arrow.

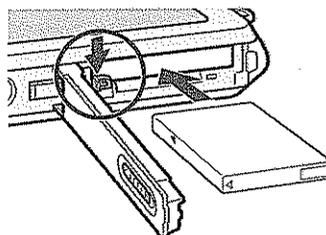

3 Close the cover.

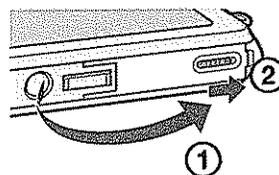

Getting started

perature of
s.

power
occurs
from the

wall


ducts

s.

ot

Checking the remaining battery charge


A remaining charge indicator appears on the upper left of the LCD screen.

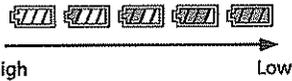

Notes

- It takes about one minute until the correct remaining charge indicator appears.
- The remaining charge indicator may not be correct under certain circumstances.
- If the NP-FD1 battery pack (not supplied) is used, the minute display is also shown after the remaining charge indicator.
- Battery capacity decreases over time and through repeated use. When the operating time per charge decreases markedly, the battery pack needs to be replaced. Purchase a new battery pack.

To remove the battery pack

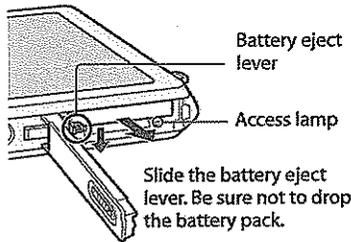

Note

- Never remove the battery pack/"Memory Stick Duo" (not supplied) when the access lamp is lit. This may cause damage to data.

Recording media that you can use

The camera has an approximately 4GB internal memory that lets you record many images even when a "Memory Stick Duo" (not supplied) is not inserted. When a "Memory Stick Duo" is inserted, images are recorded on the "Memory Stick Duo".

"Memory Stick Duo"




You can also use a "Memory Stick PRO Duo" or "Memory Stick PRO-HG Duo" with the camera.

For details on the number of images/time that can be recorded, see page 32. Other types of "Memory Stick" or memory card are not compatible with the camera.

"Memory Stick"

You cannot use a "Memory Stick" with the camera.

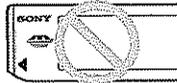


Note

- You cannot transfer images between the internal memory and a "Memory Stick Duo" inserted in the camera.

To insert the "Memory Stick Duo" (not supplied)

Open the cover, then insert the "Memory Stick Duo".

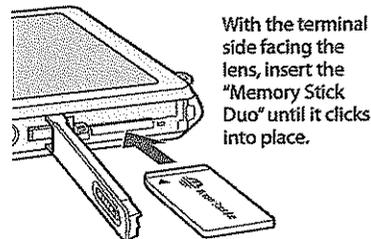

To remove the "Memory Stick Duo", push the "Memory Stick Duo" in once.

Set1

1 Still
illu
Pr
LC
th
The
• Y
pi

2 To
dis
to

3 To
to
nu
• M
ar

4 To


Notes

- The can CD-RO
- If the ca camera
- It may t


Setti
Touch H

Setting the clock

- 1 Slide the lens cover as illustrated. Press the frame on the LCD screen with your thumb until it opens fully. The camera is turned on.
 - You can also turn on the camera by pressing the POWER button.

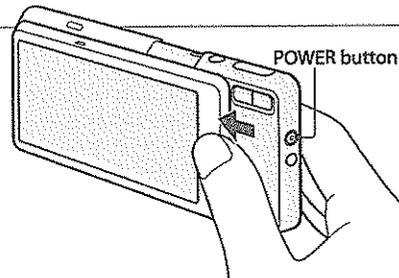


- 2 Touch the desired date display format, then touch .

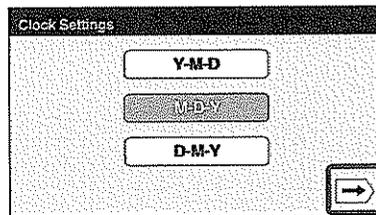

- 3 Touch each item, then touch / to set its numeric value.

- Midnight is indicated as 12:00 AM, and noon as 12:00 PM.

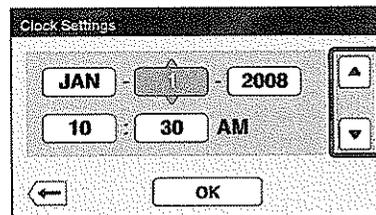

- 4 Touch [OK].

Notes

- The camera does not have a feature for superimposing dates on images. By using "PMB" in the CD-ROM (supplied), you can print or save images with the date.
- If the camera is running on and you do not operate the camera for about three minutes, the camera turns off automatically (Auto power-off function).
- It may take time for the power to turn on and allow operation.

Setting the date and time again


Touch **HOME** →  (Settings) → [Clock Settings] (page 51).

Setting the wireless network

A wireless LAN function is equipped with this camera.
Connect the camera to a network via an access point.


Getting started

- 1 Press the POWER button to turn on the camera.

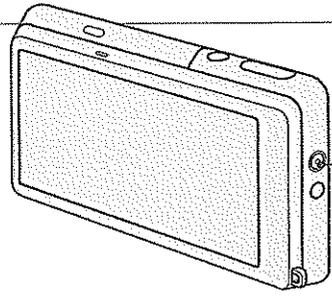

POWER button

- 2 Touch HOME → → (Communication) → [Network] → → [Network Settings] → .

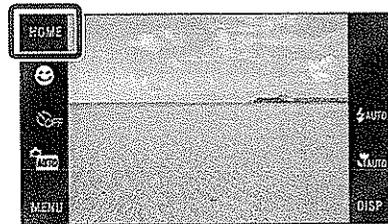

- 3 Touch [Time Zone] → → region in which you live.

- 4 Touch [Access Point] → → [Create New] → [Auto Scan] → → access point you want to use → .
The SSID information confirmation screen is displayed.

- 5 Confirm the SSID is displayed → .
If the SSID is not displayed, select [SSID] → Input using the keyboard → .

- 6 Select the desired encryption type → .
If you have selected [Disable], proceed to step 8.

7 To the

8 To

Notes

- Network
- The foll
 - An in
 - ADSL
 - Acces
 - Acces
- If you d point, a
- The aut
- When c camera establish



When i
When y
• The ir



7 Touch [Encryption Key] → Input the encryption key using the keyboard → [OK].

8 Touch [Easy] → [OK] → check your connection name → [OK] → check your settings on the confirmation screen → [OK] → [Save] → [OK] → [OK].

Notes


- Network device connections and setting methods differ according to the device.
- The following are needed to connect the camera to a network:
 - An internet service provider (ISP) contract
 - ADSL modem or other network device
 - Access point or wireless router
 - Access point setting information (SSID)
- If you do not know the settings to make, be sure to check with the person who set up the access point, administrator, or with your service provider.
- The auto power-off function does not operate.
- When connected to a network, if you do not operate the camera for about three minutes, the camera may disconnect from the network automatically to save battery power. In these cases establish the connection again.



Using the keyboard

When manual character input is needed, touch the input field to display the keyboard screen. When you are finished with input, touch [OK] on the bottom right of the screen.

- The input language is the display language of the camera.

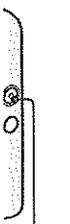

button



ve.


ito

ng

Shooting images


- 1 Slide the lens cover as illustrated.

The camera is turned on.

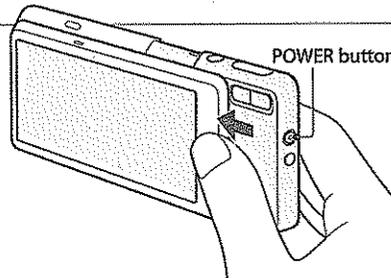


- 2 Hold the camera steady as illustrated.

- Press the T side of the zoom (W/T) button to zoom in.
- Press the W side to zoom out.

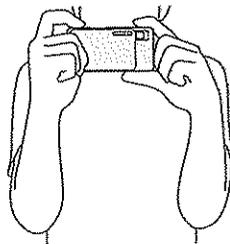


Zoom (W/T) button

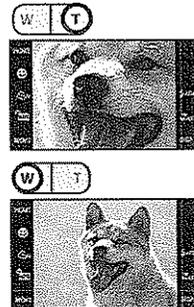


- 3 Press the shutter button halfway down to focus.

- ☞ is displayed to indicate that SteadyShot is working. When the image is in focus, a beep sounds and the ● indicator lights.
- The shortest shooting distance is approximately 8 cm (3 1/4 inches) (W)/50 cm (19 3/4 inches) (T) (from the lens).

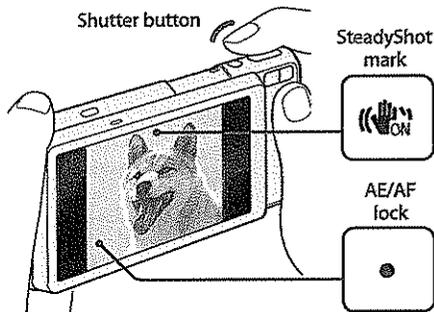

- 4 Press the shutter button fully down.

The image is shot.

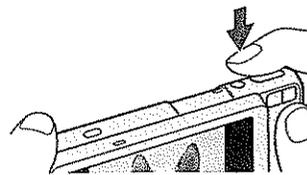

View

- 1 Press the button. The screen displays the image.

- 2 Select Touch screen.

- 3 Delete Touch screen.

- 4 Return Press the button.

- 5 Turn off Close the cover. You can turn off the camera.

Viewing images

R button



button



ReadyShot mark




AE/AF lock



- 1 Press the  (Playback) button.

The last image shot is displayed.

- When images on the “Memory Stick Duo” recorded with other cameras cannot be played back on this camera, view the images in [Folder View] (page 36).

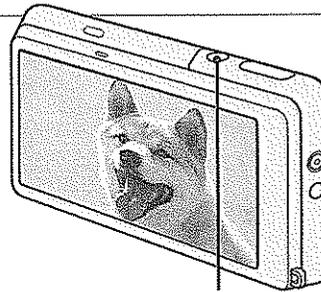

 (Playback) button

▶ Selecting next/previous image

Touch  (Next)/ (Previous) on the screen.



▶ Deleting an image

Touch  (Delete), then touch [OK].



▶ Returning to shooting images

Press the shutter button halfway down.

▶ Turning off the camera

Close the lens cover.

- You can also turn off the camera by pressing the POWER button.




Storing images

The camera has an approximately 4GB internal memory that can store many images. You can import images from a computer to the camera and view them anytime using the camera.

Shooting/viewing images


1 Export images to the camera using "PMB".

- For details on the computer connection or "PMB", see page 42.

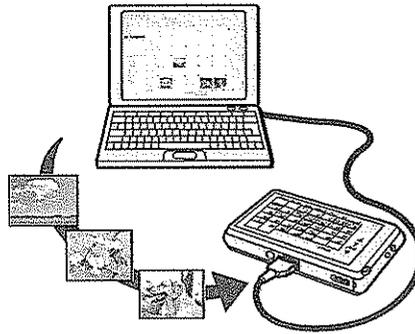


2 Viewing stored images


You can play back images stored in the camera using the Slideshow and Scrapbook functions. You can also organize large numbers of images using the desired View Mode and easily search through them.

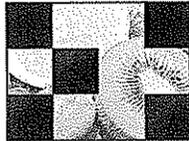

Slideshow (page 34)

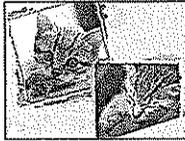

Scrapbook (page 35)

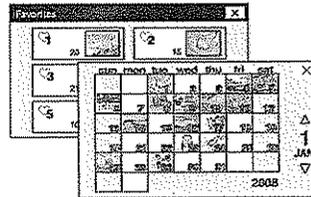

View Mode (page 36)