

SONY

4-278-207-11(1)

Personal Audio Docking System

Operating Instructions

RDP-X60iP



©2011 Sony Corporation

Printed in China

<http://www.sony.net/>

SONY

Portable Audio

LIMITED WARRANTY (U.S. Only)

Sony Electronics Inc. ("Sony") warrants this product against defects in material or workmanship for the time periods and as set forth below. Pursuant to this Limited Warranty, Sony will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications. **In the event of a defect, these are your exclusive remedies.**

Labor: For a period of one (1) year from the original date of purchase of the product ("Labor Warranty"), Sony will, at its option, repair or replace with new or refurbished product, product determined to be defective. If Sony elects to replace the product after this Labor Warranty has expired but while the Parts Warranty below is still in effect, it will do so for the applicable labor charge.

Parts: For a period of one (1) year from the original date of purchase of product ("Parts Warranty"), Sony will supply new or refurbished replacement parts in exchange for parts determined to be defective.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

Instructions: To obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the Sony authorized service facility specified. **It is your responsibility to backup any data, software or other materials you may have stored or preserved on your unit. It is likely that such data, software, or other materials will be lost or reformatted during service and Sony will not be responsible for any such damage or loss.** A dated purchase receipt is required. For specific instructions on how to obtain warranty service for your product,

Visit Sony's Web Site:
www.sony.com/service

Or call the **Sony Customer Information Service Center**
1-800-222-SONY (7669)

For an accessory or part not available from your authorized dealer, call:

1-800-488-SONY (7669)

Repair / Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of Sony.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to product issues due to commercial use, acts of God, misuse, limitations of technology, or modification of or to any part of the Sony product. This Limited Warranty does not cover Sony products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only in the United States.

LIMITATION ON DAMAGES: SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.

Owner's Record

The model number and the serial number are located on the bottom. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. RDP-X60iP

Serial No. _____

For customers in the USA
Please register this product on line at <http://www.sony.com/productregistration>. Proper registration will enable us to send you periodic mailings about new products, services, and other important announcements. Registering your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

The nameplate and important information concerning safety are located on the bottom exterior of the main unit and on the surface of the AC power adaptor.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This equipment must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same type.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

- Replace the battery for the remote commander with a Sony CR2025 lithium battery. Use of another battery may present a risk of fire or explosion.
- Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.
- Dispose of used battery promptly. Keep away from children.

Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including

amplifiers) that produce heat.

- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

 


- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

For the state of California USA only

Perchlorate Material - special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate
Perchlorate Material: Lithium battery contains perchlorate

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

On Copyrights and Licenses

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

Features

- Wireless Music Streaming
- Compatible with iPod® and iPhone®
- MEGA BASS
- Wireless remote commander supplied

Precautions

- To disconnect the AC power cord (mains lead), pull it out by the plug, not the cord.
- Since a strong magnet is used for the speaker, keep credit cards using magnetic coding or spring-wound watches, CRT-based TVs, or projectors, etc., away from the unit to prevent possible damage from the magnet.
- Do not leave the unit in a location near a heat source such as a radiator or air duct, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock.
- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on a surface (a rug, a blanket, etc.) or near materials (a curtain) which might block the ventilation holes.
- Should any solid object or liquid fall into the unit, unplug the unit and have it checked by qualified personnel before operating it any further.
- Do not handle the unit with wet hands.
- Do not place the unit anywhere near water.

NOTES ON LITHIUM BATTERY

- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

 
Note

- In these Operating Instructions, "iPod" is used as a general reference to functions on an iPod or iPhone, unless otherwise specified by the text or illustrations.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

On Bluetooth communication

- Bluetooth wireless technology operates within a range of about 10 meters (about 30 feet). Maximum communication range may vary depending on obstacles (human body, metal, wall, etc.) or electromagnetic environment.




■ Optimal performance
■ Limited performance

- The following conditions may affect the sensitivity of Bluetooth communication.
 - There is an obstacle such as a person, metal, or wall between this unit and iPod.
 - A device using 2.4 GHz frequency, such as a wireless LAN device, cordless telephone, or microwave oven, is in use near the unit.
 - The unit is installed on a shelf made of steel.
- Because Bluetooth devices and wireless LAN (IEEE802.11b/g) use the same frequency, microwave interference may occur and resulting in communication speed deterioration, noise, or invalid connection if this unit is used near a wireless LAN device. In such as case, perform the following.
 - Use this unit at least 10 m (about 30 ft) away from the wireless LAN device.
 - If this unit is used within 10 m (about 30 ft) of a wireless LAN device, turn off the wireless LAN device.
 - Install this unit and iPod as near to each other as possible.
- Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices. Turn off this unit and iPod in the following locations, as it may cause an accident.
 - where inflammable gas is present, in a hospital, train, airplane, or a petrol station
 - near automatic doors or a fire alarm
- This unit supports security capabilities that comply with the Bluetooth standard to provide a secure connection when the Bluetooth wireless technology is used, but security may not be enough depending on the setting. Be careful when communicating using Bluetooth wireless technology.
- We do not take any responsibility for leakage of information during Bluetooth communication.
- Connection with all Bluetooth devices cannot be guaranteed.
 - A device featuring Bluetooth function is required to conform to the Bluetooth standard specified by Bluetooth SIG, Inc. and be authenticated.
 - Even if the connected device conforms to the above mentioned Bluetooth standard, some devices may not be connected or work correctly, depending on the features or specifications of the device.
- Depending on the device to be connected, it may require some time to start communication.

Power sources

Preparing a power source

- 1) Connect the AC power cord (supplied) to the AC power adaptor (supplied).
- 2) Connect the AC power adaptor to the **DC IN 20V** jack on the back of this unit firmly and plug it into a wall outlet.

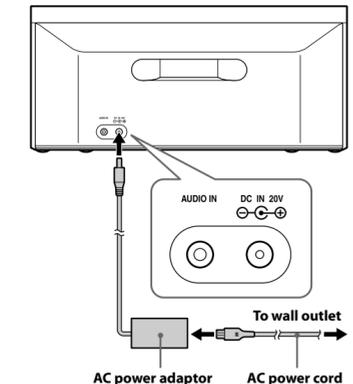

Note on the AC power adaptor

- Use the supplied Sony AC power adaptor only. The polarity of the plugs of other manufactures may be different. Failure to use the supplied AC power adaptor may cause the unit to malfunction.

Preparing the remote commander

Before using the remote commander for the first time, remove the insulation film.



When to replace the battery

With normal use, the battery (CR2025) should last for about 6 months. When the remote commander no longer operates the unit, replace the battery with a new one.



the '+' side facing up

Notes

- Do not attempt to charge the battery.
- If you are not going to use the remote commander for a long time, remove the battery to avoid any damage that may be caused by leakage and corrosion.

Specifications

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 4 ohm loads both channels driven, from 150 Hz - 10,000 Hz; rated 18 watts per channel minimum RMS power, with no more than 10 % total harmonic distortion.

Section for iPod

DC out: 5V
MAX: 500mA

General Speaker

Approx. 7.6 cm (3 inches) dia. 4 Ω

Input

AUDIO IN jack (ø 3.5 mm stereo minijack)

Power output

20 W + 20 W (at 1% harmonic distortion)

Power requirements

DC IN 20V

Dimensions

Approx. 356.0 mm × 158.1 mm × 151.9 mm (w/h/d)
(14 1/16 inches × 6 1/4 inches × 6 inches) (incl. projecting parts and controls)

Mass

Approx. 1.8 kg (3 lb 15 oz)

Output

Bluetooth Specification Power Class 2

Maximum communication range

Line of sight approx. 10 m (30 ft)^{*1}

Frequency band

2.4 GHz band (2.4000 GHz - 2.4835 GHz)

Communication System

Bluetooth Specification Version 2.0 + EDR (Enhanced Data Rate)

Compatible Bluetooth Profiles^{*2}

A2DP (Advanced Audio Distribution Profile)

AVRCP (Audio Video Remote Control Profile) Volume UP/DOWN

Supported codec^{*3}

SBC^{*4}

Supported contents protection

SCMS-T

^{*1} The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna's performance, operating system, software application, etc.

^{*2} Bluetooth standard profiles indicate the purpose of Bluetooth communication between devices.

^{*3} Codec: Audio signal compression and conversion format

^{*4} Subband Codec

Supplied accessories

Remote commander (1)

AC power adaptor (1)

AC power cord (1)


Universal Dock Adapter (Ⓜ) for iPhone (1)

Universal Dock Adapter (Ⓜ) for iPhone 3G/iPhone 3GS (1)

Universal Dock Adapter (Ⓜ) for iPhone 4 (1)

Design and specifications are subject to change without notice.

Operations

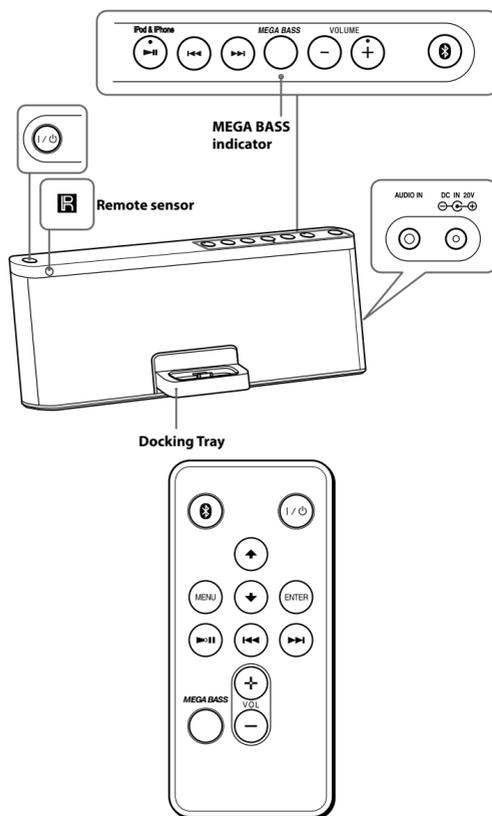

VOLUME + (VOL + on the remote commander) and ►|| buttons have a tactile dot.

Before using the unit

To turn on/off the unit

Press I/O (power).
The I/O (power) button indicator will light up in green when the unit is turned on.

To adjust the volume

Press VOLUME +/- (VOL +/- on the remote commander).

Tips

The I/O (power) button indicator flashes three times when the sound is set to either maximum or minimum volume.

To reinforce the bass sound

Press MEGA BASS.
The MEGA BASS indicator lights up.
You can achieve high quality bass sound. To return to normal sound, press the button again.

Power management system

After playback of the iPod (or component connected to AUDIO IN jack) has finished, if no operation is performed for about 30 minutes, the unit will automatically turn off.

Playing an iPod

When setting an iPod in the unit, use the supplied universal dock adapter with your iPod or commercially available products from Apple Inc.
If you are using an iPhone, iPhone 3G, iPhone 3GS or iPhone 4, attach the supplied universal dock adapter 12, 15, or 19. The respective adapter number is located on the underside of each adapter.

 
Supplied Universal Dock Adapter




Notes

- To use an iPod, refer to the user's guide of your iPod.
- The connector of the unit is exclusively for use with an iPod. If you use a device that does not match the connector, connect it to the AUDIO IN jack of this unit with the supplied audio connecting cable.
- Sony cannot accept responsibility in the event that data recorded on an iPod is lost or damaged when using an iPod connected to this unit.
- For details of environmental conditions for operating your iPod, check the website of Apple Inc.

- Attach the adapter for your iPod/iPhone.



- Set your iPod/iPhone in the Docking Tray.

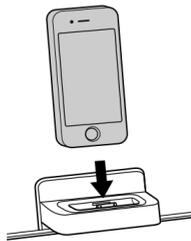

Tip

Remove the case or cover from your iPod before setting it in the tray to ensure a stable connection.

- Press ►|| (direct power-on).

The iPod begins to play back.
You can operate the connected iPod via this unit or the iPod itself.

To	Press
Turn off the iPod	Press and hold ► .
Pause playback	► To resume play, press it again.
Go to the next track	►► (forward)
Go back to the previous track	◄◄ (backward)*1
Locate a point while listening to the sound	►► (forward) or ◄◄ (backward) while playing and hold it until you find the point.
Locate a point while observing the display on iPod	►► (forward) or ◄◄ (backward) in pause and hold it until you find the point then press ► .
Go back to the previous menu	MENU*2
Go back to the main menu	Press and hold MENU*2
Select a menu item or a track for playback	▲ (up)/▼ (down)*2
Execute the selected menu item or begin playback	ENTER*2

*1 During playback, this operation returns to the beginning of the current track. To go back to the previous track, press twice.


*2 These operations are available only when using the supplied remote commander.

Notes

- When placing or removing the iPod, hold the iPod at the same angle as that of the connector on this unit, and do not twist or bend the iPod as it may result in connector damage.
- Do not carry the unit with an iPod set on the Docking Tray. Doing so may cause a malfunction.
- When placing or removing the iPod, hold the Docking Tray securely.
- Before disconnecting the iPod, pause playback.
- If the battery of your iPod is extremely low, charge it for a while before operation.
- An iPod touch/iPhone will not work unless it is turned on. Be sure to turn on the power of the iPod touch/iPhone before operation.

Using the Bluetooth Connection

By using the Bluetooth connection, you can listen to the sound from an iPod with the unit wirelessly.

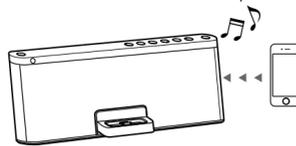

Note

For details on how to operate the iPod to be connected, refer to the user's guide of your iPod.

Supported iPod models

iPod touch 4th generation, iPod touch 3rd generation, iPod touch 2nd generation, iPhone 4, iPhone 3GS, iPhone 3G and iPad.

On pairing

Bluetooth devices need to be "paired" with each other beforehand.

Once Bluetooth devices are paired, there is no need for pairing again, except in the following cases:

- Pairing information is deleted after repair, etc.
- The unit is paired with 9 or more iPod models. The unit can be paired with up to 8 iPod models. If a new iPod is paired after 8 iPod models have been paired, the iPod whose latest connection time is the oldest among the 8 paired iPod models is replaced by the new one.


On Bluetooth indicator (JEITA*)

Status	Bluetooth indicator (blue)
Bluetooth off	Off
Bluetooth on	Flashes slowly
Pairing mode	Flashes quickly
Connecting or communicating	Lights up

To pair with an iPod

Keep the iPod and the unit within 1 meter (3 ft) of each other for this operation.

- Press I/O to turn on the unit.
- Press and hold B until the Bluetooth indicator flashes quickly.
Pairing mode of the unit is activated.

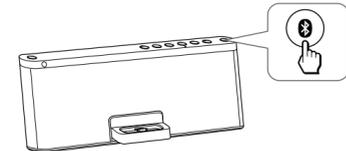

- Perform the pairing procedure on your iPod to detect the unit. Select "Bluetooth" from "General" under "Settings" on your iPod and turn Bluetooth on.
A list of detected devices appears on the display.
The unit is displayed as "RDP-X60iP".
If "RDP-X60iP" is not displayed, repeat from step 2.



- Select "RDP-X60iP" displayed on the screen of the iPod.

When "Connected" appears on the screen of the iPod, connection is complete.

If the below pop-up window appears, select "Pair."



Notes

- The display and operation may vary between iPod models. For details, refer to the user's guide of your iPod.
- Pairing mode is canceled after about 5 minutes. If pairing mode is canceled halfway, start over from step 2.
- If pairing is not complete, start over from step 2.
- To pair with another iPod, repeat steps 1 to 4.
- If you turn off the unit or the iPod before the Bluetooth connection is complete, pairing information will not be memorized, and pairing will not be completed.
- If Passcode input is required in the display, input "0000."
- Operation of Bluetooth devices (other than iPod) is not guaranteed.

To listen to the sound

Keep the iPod and the unit within 10 meters (about 30 ft) of each other for this operation.

Check the following before operating the unit.

- The Bluetooth function of your iPod is on.
- Pairing of the unit and your iPod is complete.

- Press I/O to turn on the unit.
- Press B to turn on the Bluetooth.
- Start the Bluetooth connection from your iPod.
The last connected device will be reconnected automatically when the Bluetooth function is activated again. Press "Connect" (on the screen of the iPod) to connect other devices memorized in the unit.
- Select music, video, game, etc., to play on your iPod.
For details, refer to the user's guide of your iPod.

To finish listening

Terminate the Bluetooth connection by any of the operations below.

- Press B to turn off the Bluetooth. (Bluetooth indicator turns off.)
 - Operate the iPod to terminate the connection.
 - Turn off the unit.
 - Operate the iPod to terminate the connection.
- For details, refer to the user's guide of your iPod.

To use this unit as a battery charger for your iPod

You can use the unit as a battery charger for your iPod. Charging begins when the iPod is connected to the unit. The charging status appears in the display on iPod. For details, see the user's guide of your iPod.


Connecting optional components

You can enjoy the sound from an optional component, such as a portable digital music player, through the speakers of this unit. Be sure to turn off the power of each component before making any connections.

- Firmly connect the line output jack of a portable digital music player (or other component) to the AUDIO IN jack on the back of the unit, using a suitable audio connecting cable (not supplied).

- Press I/O to turn on the unit.

- Turn the connected component on.

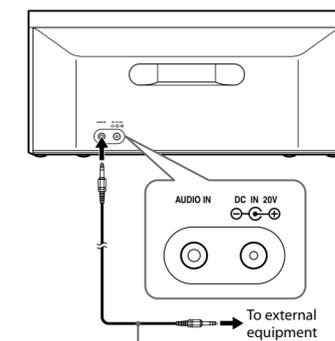

Notes

- The audio connecting cable required depends on the external equipment. Make sure the cable is correct for the external equipment to be connected.
- If the volume level is low, adjust the volume of the unit first. If the volume is still too low, adjust the volume of the connected equipment.
- When playing an external component connected to the AUDIO IN jack, stop playback of your iPod.
- Disconnect the audio connecting cable when audio-in is not in use.

Troubleshooting

General

The power is not on.

- Make sure the AC power cord is connected to the wall outlet firmly.

There is no audio.

- Adjust VOLUME +/- (VOL +/- on the remote commander).

Noise is heard.

- Ensure that the unit is not in the vicinity of in-use portable phones, etc.

The two different music sources will be mixed together during playback.

- Stop playback of your iPod or external component.

The I/O (power) button indicator flashes.

- If the unit often turns off automatically after flashing, even though the AC power cord is reconnected, consult your nearest Sony dealer.

iPod

There is no audio.

- Make sure the iPod is connected firmly.

Operation is not performed.

- Make sure the iPod is connected firmly.

The iPod does not charge.

- Make sure the iPod is connected firmly.
- Make sure the AC power adaptor is connected firmly.

Audio-in

There is no audio.

- Make sure the Audio connecting cable is connected firmly.

remote commander

The remote commander does not function.

- Replace the battery in the remote commander with a new one if it is weak.
- Make sure that you are pointing the remote commander at the remote sensor on the unit.
- Remove any obstacles in the path of the remote commander and the unit.
- Make sure the remote sensor is not exposed to strong light such as direct sunlight or fluorescent lamp light.
- Move closer to the unit when using the remote commander.

If the problem persists, consult your nearest Sony dealer.

When using the Bluetooth connection

No sound

- Ensure that this unit is not too far from the Bluetooth stereo audio source device, or this unit is not receiving interference from a wireless LAN, other 2.4 GHz wireless device, or microwave oven.
- Check that the Bluetooth connection is made properly between this unit and the Bluetooth stereo audio source device.
- Pair this unit and the Bluetooth stereo audio source device again.
- Keep away from metal objects or surfaces.

Sound skips or the correspondence distance is short.

- If a device that generates electromagnetic radiation, such as a wireless LAN, other Bluetooth device(s), or a microwave oven is nearby, move away from such sources.
- Remove any obstacle between this unit and iPod or move away from the obstacle.
- Locate this unit and iPod as near as possible.
- Re-position this unit.
- Re-position iPod.

Pairing cannot be done.

- Bring this unit and the iPod closer together.


Sound is delayed.

- If you watch a TV or a DVD through Bluetooth connection via this unit, sound may lag behind the picture.

If the problem persists, consult your nearest Sony dealer.

Compatible iPod/iPhone models

The compatible iPod/iPhone models are as follows.
Update software of your iPod/iPhone to the latest version before using it with this unit.

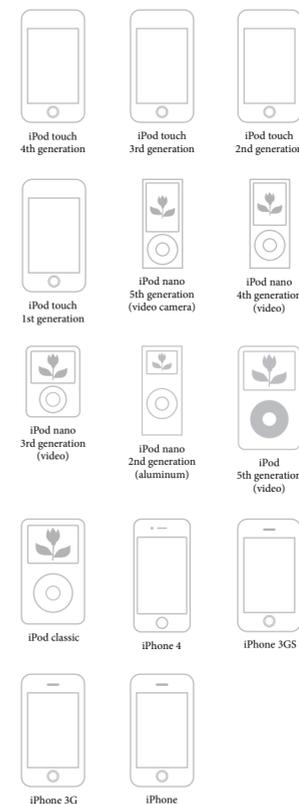

Notes

- The connector of the unit is solely for use with an iPod. If you use devices that do not have the same connector, connect to the AUDIO IN jack of this unit with the supplied audio connecting cable.
- Sony cannot accept responsibility in the event that data recorded to an iPod is lost or damaged when using an iPod connected to this unit.