




BT Module Location

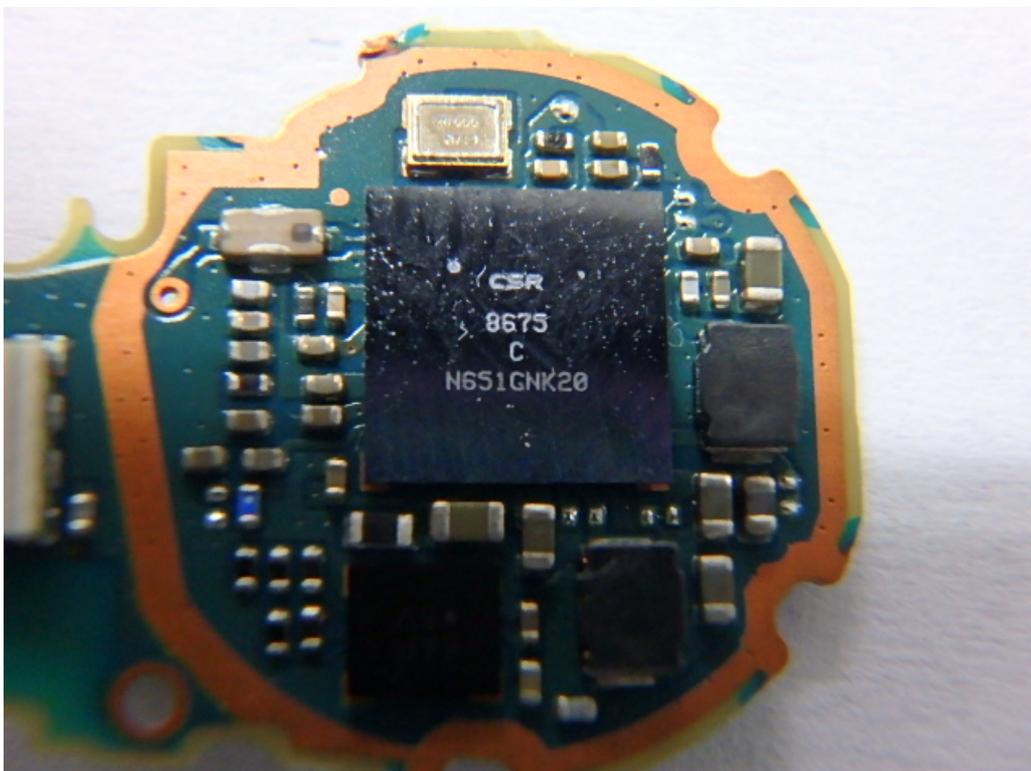

BT IC



Antenna Location