

SONY®

5-043-990-11(1)

## Wireless Stereo Headset

Reference Guide

[https://rd1.sony.net/help/mdr/2962/h\\_zz/](https://rd1.sony.net/help/mdr/2962/h_zz/)



WI-OE600

Model: YY2962

Model: YY2962

The term "product" in this document refers to the unit or its accessories.

### Owner's Record

The model and serial numbers are located on the product.  
Record them in the space below and store safely.  
Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like, for a long time. Do not subject the batteries to extreme low temperature conditions that may result in overheating and thermal runaway. Do not dismantle, open, or shred secondary batteries.

In the event of a secondary battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary batteries need to be charged before use. Always refer to the manufacturer's instructions or product manual for proper charging instructions.

After extended periods of storage, it may be necessary to charge and discharge the secondary batteries several times to obtain maximum performance. Dispose of properly.

### RECYCLING RECHARGEABLE BATTERIES

Rechargeable batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you. For more information regarding recycling of rechargeable batteries, visit <http://www.sony.com/electronics/eco/environmental-management>

Caution: Do not handle damaged or leaking rechargeable batteries.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this unit.

### If you have any questions about this product:

**Visit:** <https://www.sony.com/electronics/support>

**Contact:** Sony Customer Information Service Center at 1-800-222-7669

**Write:** Sony Customer Information Service Center 12451 Gateway Blvd., Fort Myers, FL 33913

Supplier's Declaration of Conformity

Trade Name: SONY

Model: YY2962

Responsible Party: Sony Electronics Inc.  
Address: 16535 Via Esprillo, San Diego, CA 92127 U.S.A.

Telephone Number: 858-942-2230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### NOTE:

This unit has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This unit generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this unit does cause harmful interference to radio or television reception, which can be determined by turning the unit off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the unit and receiver.
- Connect the unit into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This unit must not be co-located or operated in conjunction with any other antenna or transmitter.

This unit complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This unit has very low levels of RF energy.

High volume may adversely affect your hearing.

Do not use the unit while walking, driving, or cycling. Doing so may cause traffic accidents.

Do not use in hazardous areas unless the surrounding sound can be heard.

If water or foreign matter enters the unit, it may result in fire or electric shock. If water or foreign matter enters the unit, stop use immediately and consult your nearest Sony dealer. In particular, be careful in the following cases.

- When using the unit near a sink or liquid container  
Be careful that the unit does not fall into a sink or container filled with water.
- When using the unit in the rain or snow, or in humid locations

For details on the effects of contact with the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

Never insert the USB plug when the unit or charging cable is wet. If the USB plug is inserted while the unit or charging cable is wet, a short circuit may occur due to liquid (tap water, seawater, soft drink, etc.) or foreign matter on the unit or charging cable, and cause abnormal heat generation or malfunction.

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

### Note about static electricity

If you use the unit when the air is dry, you may experience discomfort due to static electricity accumulated on your body. This is not a malfunction of the unit. You can reduce the effect by wearing clothes made of natural materials that do not easily generate static electricity.

### IMPORTANT

The voice guidance for this unit is only available in English.

The voice guidance can be heard from the unit in the following situations:

- When powering on: "Power on"
- When powering off: "Power off"
- When the remaining battery level is low and recharge is recommended: "Low battery, please recharge headset"
- When automatically turning off due to low battery: "Please recharge headset. Power off"
- When checking the remaining battery level: "Battery fully charged" / "Battery about 70%" / "Battery about 50%"
- When entering pairing mode: "Bluetooth pairing"
- When establishing a Bluetooth connection: "Bluetooth connected"
- When disconnecting a Bluetooth connection: "Bluetooth disconnected"

©2022 Sony Corporation  
Printed in Thailand  
<https://www.sony.net/>



\* 5 0 4 3 9 9 0 1 1 \* (1)

## Precautions

The two-dimensional code or the URL on the cover will help you access the help guide that describes useful notes or procedures in details.

### On water resistant of the unit

- Unless the unit is used correctly, water may get into the unit and cause fire, electrocution, or malfunctions. Note the following cautions carefully and use the unit correctly.

(Make sure that the USB Type-C port cover is closed securely when you use the unit.)

### To maintain water resistant performance

Carefully note the precautions below to ensure proper use of the unit.


- Make sure the USB Type-C port cover is closed securely when using the unit. If there is any foreign material on the cover or it is not completely closed, the water resistant performance cannot be maintained. Water may get inside and cause the unit to malfunction.
- Do not splash water forcibly into the sound output holes.
- Do not drop the unit into water, and do not use underwater.
- Do not allow the unit to remain wet in a cold environment, as the water may freeze. To prevent malfunction, make sure to wipe off any water after use.
- Do not place the unit in water or use it in a humid place such as a bathroom.
- Do not drop the unit or expose it to mechanical shock. Doing so may deform or damage the unit, resulting in deterioration of water resistance performance.

### On BLUETOOTH® communications

- Microwaves emitting from a Bluetooth device may affect the operation of electronic medical devices. Turn off this unit and other Bluetooth devices in the following locations, as it may cause an accident:
  - in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.

### On charging the unit

- Be sure to use the supplied USB Type-C cable.
- Make sure to close the USB Type-C port cover securely after charging. Perspiration or water may cause damage.

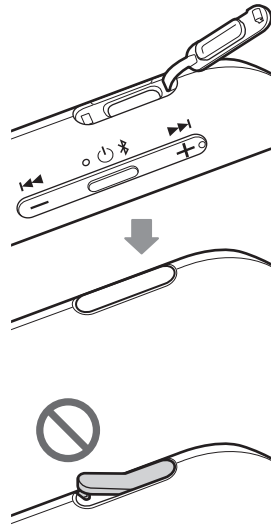

### Notes on wearing the unit

- After use, remove the headphones slowly.

### Other notes

- If you experience discomfort while using the unit, stop using it immediately.
- If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

## Specifications

### Headset

#### Power source:

DC 3.7 V: Built-in lithium-ion rechargeable battery

DC 5 V: When charged using USB

#### Operating temperature:

0 °C to 40 °C (32 °F to 104 °F)

#### Rated power consumption:

0.5 W

#### Mass:

Approx. ##xx## g (##yy## oz)

#### Included items:

Wireless Stereo Headset (1)  
USB Type-C® cable (USB-A to USB-C®)  
(approx. 20 cm (7.88 in.)) (1)  
Carrying pouch (1)

### Communication specification

#### Communication system:

Bluetooth Specification version 5.0

#### Output:

Bluetooth Specification Power Class 1

#### Frequency band:

2.4 GHz band (2.4000 GHz - 2.4835 GHz)

Design and specifications are subject to change without notice.

### System requirements for battery charge using USB

#### USB AC adaptor

A commercially available USB AC adaptor capable of supplying an output current of 0.5 A or more.

- Do not use a USB adaptor that exceeds the maximum output of 13 W (5 V, 2.6 A).

## Trademarks

- iPhone is a trademark of Apple Inc., registered in the U.S. and other countries.
- Android is a trademark of Google LLC.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

## Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.  
<https://rd1.sony.net/help/mdr/sl/22/>
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.