

 
# BackBeat FIT 3200 Series

User Guide

# Contents

Controls overview	3
Power, pair and charge	4
Power on the case	4
Pair first time	4
Pair mode	4
Charge	4
Install the app	6
The Basics	7
Power on/off your earbuds	7
Adjust the volume	7
Play or pause audio	7
Track selection	7
Make/Take/End Calls	7
Use Siri, Google Now	8
DeepSleep mode	8
Switch controls for better audio	8
Support	9

# Controls overview

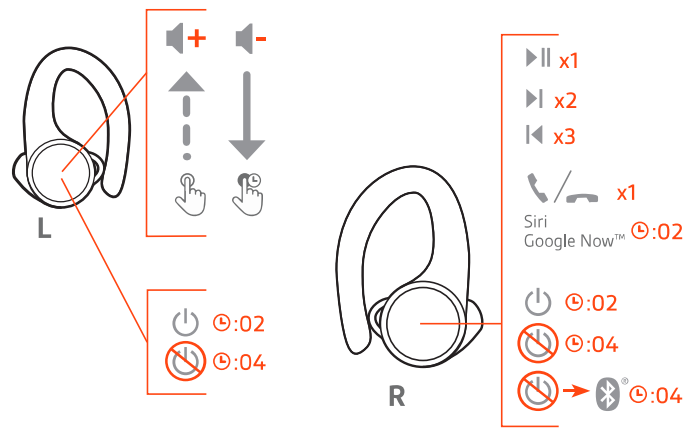

<b>Right</b>	<b>Primary earbud (pairs to phone)</b>
▶	Play/pause * Click 1 time
▶▶	Next track * Click 2 times
◀◀	Previous track * Click 3 times
☎	Call answer/end Click 1 time
Siri/ Google Now	Click and hold 2 seconds
⏻	Power on Click and hold 2 seconds
⏻	Power off Click and hold 4 seconds
📶	Pair With the earbud powered off, click and hold 4 seconds
	Reconnect to left earbud Tap each earbud 3 times
<b>Left</b>	<b>Secondary earbud (connects to right earbud)</b>
🔊+	Volume up Tap to increase levels (touch sensor)
🔊-	Volume down Touch and hold
⏻	Power on Click and hold 2 seconds
⏻	Power off Click and hold 4 seconds
	Reconnect to right earbud Tap each earbud 3 times


**NOTE** \*Functionality varies by application. May not function with web-based apps.

# Power, pair and charge
 
## Power on the case

Your charge case is shipped from the factory in a Deepsleep mode to conserve battery. Power on your charge case to power your earbuds for first use.


Click and hold the charge case button for two seconds to power it on. The charge case LEDs light up.

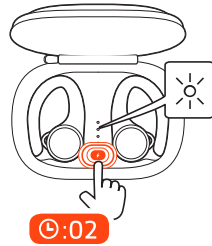

## Pair first time

The first time you take your earbuds out of the charge case, the pairing process begins.

 - 1 Take the earbuds out of the case. The LED, located on the right earbud, flashes red and white to indicate pairing mode.

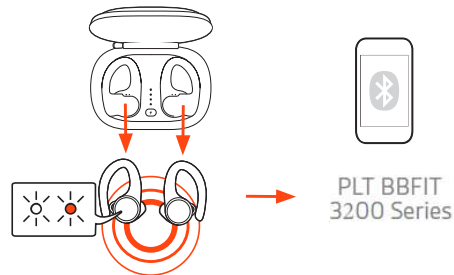


- 2 Activate Bluetooth® on your phone and set it to search for new devices.
  - iPhone Settings > Bluetooth > On\*
  - Android™ Settings > Bluetooth: On > Scan for devices\*

**NOTE** \* Menus may vary by device.

- 3 Select "PLT BBFIT3200 Series."  
Once successfully paired, you hear "pairing successful" and the earbud LED stops flashing.


## Pair mode

 With the headset powered off, click and hold the right earbud until you hear "pairing."

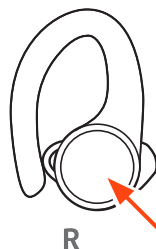

## Charge

 To charge your earbuds, place them in the charge case. Charge the case by plugging it into a computer or USB charging device. For fastest charging, plug them into a wall charger.

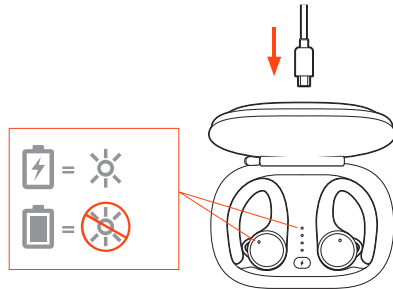

**NOTE** *If the charge case has no charge, first charge the case separately, then charge the earbuds.*

---

LEDs on earbuds/case

---

Earbuds charging    On

---

Case charging    Flashing

---

Earbuds fully charged    Off

---

Case fully charged    Off

---

# Install the app

 
Get the most from your earbuds by downloading our free app, BackBeat for iOS/Android.

With this app, you can:

- Stream a **playlist**, use a stopwatch, customize volume settings and more on your earbuds (My Tap)
- Change earbud **language**
- Turn settings on/off
- Switch earbud controls from the right earbud to the left earbud
- Find MyHeadset
- View the user guide




# The Basics

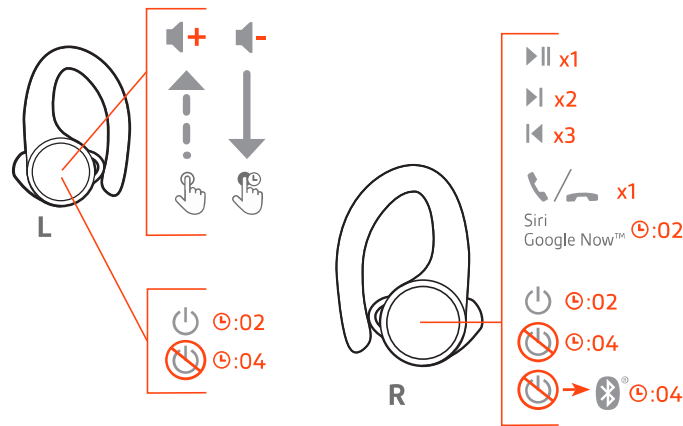

## Power on/off your earbuds

You can automatically or manually power on/off the earbuds.

 - **Automatic** Taking the earbuds out of the case, automatically powers your earbuds on. Conversely, putting them back in the case automatically powers them off and starts charging them.

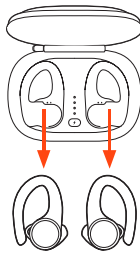

- **Manual** Click and hold the earbud button for 2 seconds to manually power it on. To manually power them off, click and hold for four seconds.  
**NOTE** Turning off the right earbud, turns off the left earbud. To power on, power the earbuds on individually.

### Power transfer

If your right earbud loses power, all functions and audio transfers to the left earbud.

## Adjust the volume

The left earbud has a touch sensor button. Only a light touch is required.

- 1 To **increase volume**, tap the left earbud.
- 2 To **decrease volume**, touch and hold the left earbud.

## Play or pause audio

Click the right earbud.

**NOTE** Functionality varies by application.

## Track selection

Double-click the right earbud to skip to the next track or triple-click the right earbud to play the previous track.

**NOTE** Functionality varies by application. May not function with web-based apps.

## Make/Take/End Calls

### Answer or end a call

Click the right earbud.

### Answer a second call

First, click the right earbud to end current call, then click the right earbud again to answer new call.

### Use Siri, Google Now

Your earbuds support Virtual Personal Assistants (VPA) such as Siri and Google Now.

Click and hold the right earbud for two seconds to use your device's VPA.

### DeepSleep mode

If you leave your earbuds powered on but out of range of your paired device, they conserve power by entering DeepSleep mode after 120 minutes and power off mode after 7 days.

To exit DeepSleep mode, choose:

- **After 120 minutes**, power on each earbud.
- **After 7 days**, reset by powering off and on.

### Switch controls for better audio

For best Bluetooth performance, keep your phone/audio device on the same side of your body as the primary earbud.

Your right earbud is the primary earbud by default. It pairs to your phone/audio device and the left earbud automatically connects to the right.

If you prefer having your phone/audio device on the left side of your body, use the Switch Primary Earbud feature in the BackBeat app to make the left earbud the primary earbud. This moves the Bluetooth connection as well as primary controls to the left earbud and move the volume and My Tap controls to the right earbud.



# Support

## NEED MORE HELP?

[plantronics.com/support](https://plantronics.com/support)

### **Plantronics, Inc.**

345 Encinal Street  
Santa Cruz, CA 95060  
United States

### **Plantronics B.V.**

Scorpius 171  
2132 LR Hoofddorp  
Netherlands

© 2019 Plantronics, Inc. BackBeat and Plantronics are trademarks of Plantronics, Inc. registered in the US and other countries, and Plantronics Hub is a trademark of Plantronics, Inc. Bluetooth is a registered trademark of Bluetooth SIG, Inc. and any use by Plantronics, Inc. is under license. All other trademarks are the property of their respective owners.

Patents pending.

XXXXXX-XX 06.19

Stereo Bluetooth Headset  
Model ID: BF3200S



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

#### Australia/New Zealand



#### Canada

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. Cet équipement est conforme aux limites d'exposition de radiation IC énoncés pour un environnement non contrôlé.

**China**  
型号核准代码显示在产品本体上

#### Europe



**en** A crossed-out wheellie bin symbol denotes that waste electrical and electronic equipment and batteries must not be disposed of as unsorted municipal waste, but collected separately. For more detailed information, please go to plantronics.com.

**bg** Задрасканият контейнер на колела означава, че непотребното електрическо и електронно оборудване и батерии не трябва да се изхвърля с останалата част от неразделените битови отпадъци,

a трябва да се събира отделно. За повече информация посетете [plantronics.com](http://plantronics.com).

**cs** Symbol přeškrtnutého kontejneru na odpady připomíná, že odpad z elektrických a elektronických zařízení a baterie se nesmí vyhazovat spolu s netříděným odpadem z domácnosti, ale je nutné je likvidovat samostatně. Podrobnější informace získáte na našich webových stránkách [plantronics.com](http://plantronics.com).

**de** Das durchgestrichene Mülltonnen-Symbol bedeutet, dass elektrische und elektronische Geräte sowie Batterien nicht im Hausmüll entsorgt werden dürfen. Sie müssen speziellen Sammelstellen zugeführt werden. Weitere Informationen erhalten Sie auf [plantronics.com](http://plantronics.com).

**el** Το σύμβολο του τροχήλατου κάδου απορριμμάτων με ένα μεγάλο X μπροστά υποδηλώνει ότι ο χρησιμοποιούμενος ηλεκ-τρικός και ηλεκτρονικός εξοπλισμός και οι μπαταρίες δεν πρέπει να απορρίπτονται ως μικτά δημοτικά απόβλητα, αλλά αντίθετα θα πρέπει να συλλέγονται χωριστά. Για περισσότερες λεπτομέρειες, επισκεφθείτε τη διεύθυνση [plantronics.com](http://plantronics.com).

**es** El contenedor de basura tachado indica que los residuos de aparatos eléctricos y electrónicos no se deben desechar con los desechos municipales sin clasificar, sino que deben recogerse por separado. Para obtener más información, visite [plantronics.com](http://plantronics.com).

**fi** Roska-astian päällä oleva rasti tarkoittaa, että sähkö- ja elektroniikkaromua tai akkuja ei saa hävittää kotalousjätteen mukana, vaan ne on toimitettava erilliseen keräyspisteeseen. Lisätietoja on osoitteessa [plantronics.com](http://plantronics.com).

**fr** Le symbole représentant une poubelle à roulettes barrée signifie que les déchets d'équipements électriques et électroniques et les batteries ne peuvent pas être mis au rebut avec le reste des déchets ménagers, mais doivent être collectés séparément. Pour de plus amples informations, consultez notre site Web à l'adresse : [plantronics.com](http://plantronics.com).

**hr** Prekrižena kanta za smeće znači da se otpadna električna i elektronička oprema i baterije ne smiju odlagati kao komunalni otpad, nego se trebaju odložiti zasebno. Detaljnije informacije potražite na stranici [plantronics.com](http://plantronics.com).

**hu** Az áthúzott szemetes jelzi, hogy az elektromos és elektronikus berendezések és az akkumulátorok nem kezelhetők válogatás nélkül, normál lakossági hulladékként, hanem külön gyűjtendőék. További információért keresse fel [weboldalunkat: plantronics.com](http://weboldalunkat: plantronics.com).

**it** L'etichetta con il simbolo di divieto su un bidone dell'immondizia, indica che le apparecchiature elettriche ed elettroniche e le batterie non devono essere smaltite con i normali rifiuti, ma raccolti separatamente. Per ulteriori informazioni, visitate il sito all'indirizzo [plantronics.com](http://plantronics.com).

**lt** Perbraukto atliekų konteinerio su ratukais simbolis reiškia, kad elektros ar elektroninės įrangos bei maitinimo elementų negalima išmesti su nerūšiuotomis buitinėmis atliekomis, jas reikia surinkti atskirai. Išsamesnės informacijos ieškokite interneto svetainėje [plantronics.com](http://plantronics.com).

**lv** Pārsvitrotas atkritumu tvertnes simbols nozīmē, ka lietotas elektriskās un elektroniskās iekārtas, kā arī to akumulatorus nedrīkst utilizēt kopā ar nešķirotiem sadzīves atkritumiem; iekārtas un akumulatori ir jāsavāc atsevišķi. Papildinformāciju skatiet tīmekļa vietnē: [plantronics.com](http://plantronics.com).

**pl** Przekreślony pojemnik na odpady oznacza, że zużytego sprzętu elektrycznego i elektronicznego oraz baterii nie należy wyrzucać wraz z normalnymi, nieposegregowanymi odpadami gospodarstwa domowego, ale oddzielnie. Więcej informacji można znaleźć na stronie internetowej [plantronics.com](http://plantronics.com).

**pt** O símbolo do caixote do lixo com uma cruz sobreposta indica que o equipamento eléctrico e electrónico e baterias não deverão ser eliminados como resíduos municipais indiferenciados mas sim em separado. Para obter mais informações, visite [plantronics.com](http://plantronics.com).

**ro** Simbolul pubelă dublu barată denotă faptul că echipamentele electrice și electronice și bateriile nu trebuie aruncate ca gunoi menajer nesortat, ci trebuie colectate separat. Pentru informații mai detaliate, vizitați [plantronics.com](http://plantronics.com).

**ru** Значок зачеркнутого мусорного бака указывает на то, что использованное электрическое и электронное оборудование, а также элементы питания не должны утилизироваться вместе с неосортированными бытовыми отходами; утилизация данного вида отходов должна производиться отдельно от других отходов. Для получения дополнительной информации посетите веб-сайт [plantronics.com](http://plantronics.com).

© 2019 Plantronics, Inc. All trademarks are the property of their respective owners.



Recyclable where facilities exist

211685-01 Rev B 05.19