

12018英文、中文說明書
每折页尺寸：80 x 75mm 共10折頁
材質：108g 双铜纸彩色双面印刷

专色PANTONE Hexachrome Orange C

Jabees®

Love Life Love Music

Beebud

 
Quick Reference Guide

www.jabees.com

Beebud is a V5.0 Bluetooth Stereo Earbuds supporting True Wireless Stereo Technology, voice prompt in Chinese, English and other features specified in this QRG.

OVERVIEW of Beebud

- (1) LED Light
- (2) MF Button (Multifunction Button)
 - Turn Off
 - Play/Pause Music
 - Answer/Reject the Call
 - Redial
 - Transfer the Call
 - Language Selection
 - Volume Up/Down (Right Earbud)
 - Next Song (Left Earbud)
- (3) Microphone
- (4) Charging Contact Points
- (5) Speaker

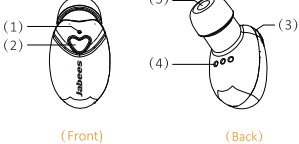

INTRODUCTION

 
Thank you for purchasing Jabees Beebud True Wireless Stereo Earbuds. This manual will help you understand the operation of your Bluetooth headphones. You should also familiarize yourself with the Bluetooth function of your mobile phone or other devices before using the Beebud Bluetooth headphones.

CHARGING THE BATTERY

Beebud have charging contact points on the earbud bodies and the Charging Case for storage and charging.

CHARGING THE BEEBUD BLUETOOTH STEREO EARBUDS

- Place the Beebud into the charging slots of the Charging Case individually, the earbuds will be charged automatically.
- Double-click 'ON/OFF' button on the Charging Case to stop charging the Beebud.
- The LED light of the Charging Case will be turned on in green and the red LED light of the earbuds will show when charging.
- When the battery is fully charged, the red LED lights of two earbuds will show in solid blue. When the charging case goes into non-working mode, the solid blue LED lights of two earbuds will be turned off then.

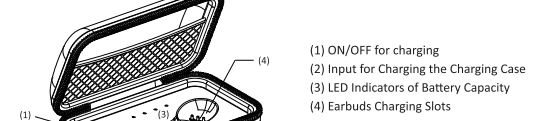

WHEN THE BATTERY IS LOW

You will hear the voice prompt 'Battery Low'. At this point please charge the Beebud. You can also refer to the Battery Meter on iPhone and other iOS devices.

Remarks:

The Battery Meter only shows the remaining battery capacity of the Left Channel Earbud. So if the Right Channel earbud is running out of power, it won't be reflected on the Battery Meter.

IMPORTANT

- Charge Beebud before your first use.
- You should recharge Beebud if it has not been used for more than 12 months.
- Use only the authorized charger to charge up Beebud.

CHARGING THE CHARGING CASE

The Charging Case has a built-in 500mAh battery. It provides approximately 3 additional charges for 2 earbuds. The 4 green LED indicators show remaining battery capacity. Please charge the Charging Case when it is running out of power.

- Plug one end of the USB charging cable into the charging port of the Charging Case, and put the other end into your computer or AC charger with USB port.
- When the Charging Case is fully charged, all 4 LED indicators will show in solid green.
- It takes around 1-2 hours to fully charge the Charging Case.

LED Indicator of Battery Capacity
(During charging the Earbuds & Being Charged)

Battery Capacity	LED 1	LED 2	LED 3	LED 4
0-25%	Flashing	Off	Off	Off
25%-50%	On	Flashing	Off	Off
50%-75%	On	On	Flashing	Off
75%-99%	On	On	On	Flashing
99%-100%	On	On	On	On

MULTIFUNCTION BUTTON

Answer/End/Reject/Transfer Calls; Volume Up/Down (Right Earbud); Next Song (Left Earbud); Play/Pause Music; Redial; Language Selecting; Factory Reset; Pairing.

TURNING Beebud ON/OFF

To turn Beebud on:

Take out the earbuds from the Charging Case. The blue LED light flashes with a voice prompt. The earbuds are now turned on automatically.

To turn Beebud off:

Put the earbuds into the Charging Case and the earbuds are turned off automatically. Or you can manually long press MF button for 5 seconds. The red LED light flashes with a voice prompt. The earbuds are now turned off.

NOTE:

When the 2 earbuds enter in-sync mode, turning off one earbud will cause the other to switch off automatically along with the voice prompt 'Power Off'.

USE Beebud AS A PAIR

STEP 1. In-sync wireless stereo connection with mobile phone.

- Take out the earbuds from the Charging Case. The LED light flashes in blue, now two earbuds are switched on and connected to each other automatically after 3 seconds.
- Left earbuds flash in red and blue, and turn into pairing mode for a mobile phone.

NOTE:

If two earbuds fail to connect each other automatically when taking them out from the charging case, you will need to follow the factory reset instruction to use Beebud.

STEP 2. Connecting with Mobile Phone or Other Bluetooth Devices.

- Turn on the Bluetooth function of your mobile phone or other Bluetooth devices, start searching for the Bluetooth devices on your mobile phone. Select 'Beebud' to complete the connection.
- If your phone asks for passkey or PIN-code, confirm with '0000' (4-zero).

USE Beebud INDIVIDUALLY

You may need to repeat the pair and connect Beebud procedure with your mobile phone or other Bluetooth devices if you want to use each earbud individually.

1. How To Pair And Connect With The 1st Mobile Phone.

- Take out one earbud from the Charging Case to turn on Beebud, the LED light flashes in blue, then double click MF button, the LED lights flash in red and blue, the earbud enters into pairing mode and the LED light flashes in blue after pairing.
- Turn on the Bluetooth function of your mobile phone or other Bluetooth devices, start searching for the Bluetooth devices on your mobile phone. Select 'Beebud' and follow the instruction. If your phone asks for passkey or PIN-code, confirm with '0000' (4-zero).
- When Beebud and your mobile phone are paired and connected, you will hear the voice prompt.

NOTE: If no pairing is possible for a period of time (approximately 5 minutes), the earbud will be turned off automatically.

2. How To Pair And Connect With The 2nd Mobile Phone.

Beebud support Multipoint Technology for 2 phones when the connection is used for individual earbuds.

- Pair and connect Beebud with the 1st mobile phone. (Please refer to the '1. How To Pair And Connect With Mobile Phone'.)
- Turn off Beebud.
- Turn off the Bluetooth function of the 1st mobile phone.
- Turn on Beebud, pair and connect the earbud with the 2nd mobile phone.
- Turn off Beebud once the connection completed, and turn on again.
- Turn on the Bluetooth function of the 1st mobile phone, the earbud will be connected with both mobile phones automatically.

NOTE: When Beebud enter in-sync mode they do not support Multipoint connection for 2 phones.

MAKING CALLS

Once Beebud is successfully connected to your mobile phone, you can use it to make and receive calls. Please consult your mobile phone's manual for more information.

1. Normal Dialing

Enter and dial the number on your mobile phone as you normally do. Once the call has been set up, the sound will be transmitted to your earbuds automatically.

2. Redial

Double click MF Button to redial the last number you called.

ANSWERING/ENDING/REJECTING CALLS

When the earbuds are turned on, and there is an incoming call, you will hear a musical tone.

- Press MF button to answer the call.
- Press MF button to end the call.
- Long press MF button for 2 seconds to reject the call.

PUT THE CALL ON HOLD

Press and hold the MF-button for 2 seconds to put the current call on hold and accept the call waiting. Short press the MF Button to hang up current talk and resume to the first call.

VOICE BROADCAST FUNCTION

Beebud supports voice prompts and reading incoming number.

TRANSFERRING CALLS

To transfer a call from Beebud back to your phone, double click the MF-button. The blue LED light will flash with a 'beep'. If you want to transfer the call back to Beebud, double click MF-button again. More procedures may be involved for some mobile phones.

ADJUSTING THE VOLUME

Beebud supports volume adjustment in reverse cycle. Long press the MF button of the Right Channel earbud to increase the volume and the volume will reverse back to decrease when it reaches the maximum.

PLAYING/PAUSING MUSIC

Playing Music: Short press the MF button.

Pausing Music: Short press the MF button.

Next Song: Press and hold the MF button of the Left Channel Earbud for around 2 seconds to play the next song.

(Note): This can only be done by the Left Channel Earbud, and please release your finger when hearing the 'beep'. Keep pressing the MF button will turn the earbud off.

LANGUAGE SELECTING

Beebud supports voice prompt in English and Chinese. Turning on one earbud and enters pairing mode, then double click the MF button of earbud to select the language you need and listen for the voice prompt. At this time, earbud has been switched to a different language. You will need to repeat this procedure to change the language for second earbud.

CONNECTING WITH A PC OR PDA

You can connect Beebud with a Bluetooth-enabled PC or PDA that supports headphones or hands free profiles. Please refer to the user manual of your Bluetooth-enabled PC or PDA for setup information.

FACTORY RESET

To restore the earbuds to factory setting, double click the MF button when Beebud are placed in the Charging Case. The LED lights flash in red and blue twice, then the factory reset is successful.

NOTE:

After the factory reset, you will have to pair and connect two earbuds manually:

- Take out the earbuds from Charging Case and they will be turned on automatically.
- Press and hold the MF button of each earbud for 2 seconds, the LED light flashes in red and blue, they are now in pairing mode.
- The LED light flashes in blue when the connection is successful.

GUARANTEE

Jabees is a registered trademark of FreeTek International Co, Ltd. Other brands and product names are trademarks of their respective owners. Jabees warrants this product against all defects in material and workmanship for a period of twelve (12) months from the date of original purchase of the product. The conditions of this guarantee and the extent of responsibility of Jabees under this guarantee can be read in the Warranty Card.

WARNING

Permanent hearing loss may result from long-term exposure to sound at excessive levels. Use as low a volume as possible and avoid prolonged use of the earphone at sound levels. Please read the safety guidelines below prior to using this earphone.

Prior to using this product follow these steps

- Before putting on the earphone, turn the volume control to its lowest level.
- Put the earphone on, and then slowly adjust the volume control to a comfortable level.

During the use of this product

- Keep the volume at the lowest level as possible.
- If increased volume is necessary, adjust the volume control slowly.
- If you experience discomfort or ringing in your ears, immediately discontinue using the earphone. With continued use at high volume, your ears may become accustomed to the sound level, which may result in permanent damage to your hearing without any noticeable discomfort.

SAFETY INFORMATION

- If you have a cardiac pacemaker or other electronic medical equipment, you should consult your physician before using this product.
- This product contains small parts that may be hazardous to children. Keep out of the reach of children. The bags themselves or the many small parts they contain may cause choking if ingested.
- Never attempt to disassemble the product yourself, or push other objects into this product, as this may cause a short circuit, which could lead to fire or electrical shock.
- None of the components can be replaced or repaired by users. Only an authorized dealer or service center may open the product.
- If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact your dealer.
- If the product overheats, has been dropped or damaged or has been submerged in a liquid, discontinue use.

REMEMBER:

Drive safely, avoid distractions and follow local laws.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: ALE12018

BTHS171227_V2.0

Jabees®

Love Life Love Music

Beebud

 
快速參閱指南

www.jabees.com

Beebud is V5.0版本的藍牙運動耳機，支持True Wireless Stereo Technology (真正無線立體聲技術)，中英文語音提示以及在本「快速參閱指南」中提到的其它功能。

圖示

- (1) LED指示燈
- (2) 多功能鍵
 - 關機
 - 播放/暫停音樂
 - 接聽/拒接電話
 - 重撥
 - 呼叫轉移
 - 切換語言
 - 音量加減鍵 (右聲道耳機)
 - 下一曲 (左聲道耳機)
- (3) 麥克風
- (4) 電池充電觸點
- (5) 喇叭

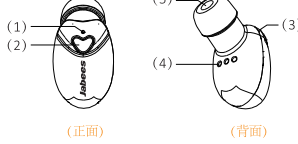


介紹

感謝您購買我們的Beebud藍牙運動耳機。此用戶手冊將幫助您正確使用本耳機。在使用之前，您必須先瞭解和熟悉您的手機的藍牙功能或其他藍牙設備的藍牙功能的使用。

為Beebud充電

在包裝中，您可以找到一個專為Beebud設計的充電包，此充電包電池容量500mAh，Beebud機身上帶有充電觸點可與該充電盒連接充電。

 - 將Beebud分別放入充電包的兩個充電槽內，充電包自動為耳機充電；
- 雙擊充電包開關鍵，可停止為耳機充電；
- 充電時充電包上綠色指示燈常亮，耳機紅燈常亮；
- 當耳機充滿電時，藍燈常亮，當充電包停止工作時，藍燈熄滅。

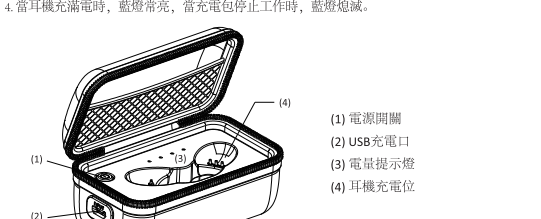

- (1) 電源開關
- (2) USB充電口
- (3) 電量指示燈
- (4) 耳機充電位

當電量低時

當耳機處於低電狀態時，您會聽到語音提示。此時，請給Beebud充電。iPhone以及其他iOS設備上顯示電量（如圖）。

注意：

此電池電量顯示僅代表左聲道耳機的電池電量情況，如右聲道耳機電量低或者沒電時，相關設備上不會有顯示。

溫馨提示

- 首次使用，請先將耳機充滿電。
- 如果耳機超過12個月沒有使用，請重新為其充電。
- 必須選擇正規廠家生產認證過的充電器。

為充電包充電

Beebud配備的充電包，內置電池容量500mAh，可為Beebud提供接近3個回合的充電。您可以通過查看電池剩餘電量指示燈查看是否需要為充電包充電。

- 將USB線的MICRO USB一端插入充電盒的充電接口，另外一端插入帶有USB接口的充電器或者電腦USB接口；
- 充滿電時，四個LED綠燈常亮。
- 將充電盒充滿電大約需要1-2小時。

LED指示燈（充電中）

電池容量	LED 1	LED 2	LED 3	LED 4
0-25%	閃亮	關閉	關閉	關閉
25%-50%	亮	閃亮	關閉	關閉
50%-75%	亮	亮	閃亮	關閉
75%-99%	亮	亮	亮	閃亮
99%-100%	亮	亮	亮	亮

多功能鍵

按聽/掛斷/接/轉接來電；音量調節（右聲道耳機）；下一曲（左聲道耳機）；播放/暫停音樂；重撥；切換語言；恢復出廠設置；配對。

開機/關機

開機：

將耳機從充電包中取出，藍色LED燈閃爍，語音提示開機。

關機：

將耳機放入充電包或者長按多功能鍵5秒，紅色LED燈閃爍，語音提示關機。

注意：

Beebud兩個耳機處於組合使用狀態時（即TWS連接），主機（即左聲道耳機）沒電關機時，右聲道耳機也會同時關機。

如何組合使用Beebud

第一步：TWS開機連接兩個耳機並進入與手機配對模式

- 將兩個耳機從充電包中取出，藍色LED燈閃爍，此時兩個耳機開機並且在3秒後會自動連接；
- 左聲道耳機紅藍燈閃爍，此時進入與手機配對模式。

注意：

當Beebud從充電盒中取出後，如無法自動配對的情況，可通過恢復出廠設置解決此問題。

第二步：將耳機與手機或其它藍牙設備做連接

- 將您手機或其它藍牙設備的藍牙功能打開，在手機上搜索藍牙設備，選擇 'Beebud'，根據手機指示完成連接；
- 如果您的手機有提示需要輸入密碼，請輸入 "0000" (4個零)；



如何單獨使用Beebud

當您需要單獨使用Beebud時，則需重新將耳機與手機或其它藍牙設備做配對連接。

1. 如何將單獨Beebud與手機配對連接

- 開機狀態下，雙擊多功能鍵，紅藍燈閃爍後進入配對模式，配對完成後藍燈閃爍。
- 將您手機或其它藍牙設備的藍牙功能打開，在手機上搜索藍牙設備，選擇 'Beebud'，根據手機指示完成連接。如手機有提示需要輸入密碼，請輸入 "0000" (4個零)；
- 當Beebud與您的手機配對連接成功時，您會聽到語音提示。

注意：如果耳機在開機後5分鐘內還未能找到配對的設備，則會自動關機。

2. Beebud與兩部手機進行配對連接

Beebud支持多點連接技術，單個Beebud能同時與兩部帶藍牙功能的手機配對連接並使用。

- 開啟Beebud並與第一部手機配對連接(連接方法請參考“1.如何將單獨Beebud與手機配對連接”)
- Beebud關機
- 關閉第一部手機的藍牙功能
- 開啟Beebud，與第二部手機配對連接
- 連接完成后，關閉Beebud，然後重新開啟Beebud
- 開啟第一部手機的藍牙功能，Beebud就會自動與這兩部手機配對連接。

注意：當Beebud兩個耳機處於組合使用狀態時（即TWS連接），則不支持多點連接功能

撥打電話

只要Beebud與手機連接成功，就可以使用Beebud撥打和接聽電話，更多信息，請參考手機使用手冊。

1. 通過手機按鍵撥號

在手機上進行撥號，電話接通後將自動轉移到耳機上。

2. 重撥

雙擊多功能鍵，即可重撥最近一次撥打的電話號碼。

接聽/結束/拒接電話

當耳機保持開機並與手機保持在連接狀態，來電時，將通過耳機聽到鈴聲。

- 按多功能鍵接聽來電。
- 按多功能鍵結束通話。
- 長按多功能鍵2秒拒接電話。

設置呼叫等待

長按多功能鍵2秒鐘將正在進行的通話轉為等待，並接聽正在等待的電話。

短按多功能鍵掛斷正在進行的通話，繼續另一方通話。

語音報號功能

當有來電時，Beebud會有語音提示並讀出來電號碼。

呼叫轉移

來電或撥出電話時，雙擊多功能鍵，呼叫將被轉移到手機，藍色LED燈會閃爍並伴有語音提示；如果是要將呼叫轉移回耳機，再次雙擊多功能鍵；有些手機可能需要更多操作步驟。

調節音量

長按右聲道多功能按鍵可以調節音量大小。

播放/暫停音樂

播放音樂：短按多功能鍵

暫停音樂：短按多功能鍵

下一曲：短按左聲道多功能鍵約2秒換下一曲播放

溫馨提示：

此“下一曲”播放功能只適用於左聲道耳機，當聽到耳機提示音后，即可鬆開手指，以避免“按壓”時間過長導致左聲道耳機被關機。

切換語音提示語種

Beebud支援中英文語音提示，當單隻耳機開機並在配對模式下時，雙擊多功能按鍵即可切換到不同的語種，並伴有語音提示。第二隻耳機也需按此操作步驟來切換到不同語種。

連接電腦或PDA時

您可以將耳機與帶藍牙功能的電腦進行連接使用。詳情請參閱您的藍牙電腦說明書以獲取相關設置信息。

恢復出廠設置

如需恢復出廠設置，需在充電狀態下，雙擊多功能鍵。當紅藍燈同時閃爍兩次，即說明恢復出廠設置成功。

溫馨提示：

恢復出廠設置後，您需要參照以下步驟使Beebud配對后再使用：
將耳機從充電包中取出，待藍色LED燈閃爍，此時耳機開機，長按多功能鍵2秒，紅藍燈閃爍後進入配對模式，配對完成后藍燈閃爍。

質量保證

Jabees樂蜂是飛利特國際有限公司註冊的商標。其他品牌 and 產品名稱是其各自所有者的商標。產品的原始購買之日起12個月內，如發現產品材料及工藝有缺陷，Jabees樂蜂將予以保修。保修條件和Jabees樂蜂承擔的責任範圍可參照保修卡。

警告

長期曝露於高音量可能導致永久性聽覺受損。請儘量調低音量，避免在過度聲音壓力水準下長時間使用耳機。在使用此耳機前，請先閱讀以下的安全指導原則。

（請在使用本產品前遵照執行以下步驟）

- 在戴上耳機前，將音量調至最低程度。
- 戴上耳機，然後慢慢地將音量控制調整到感覺舒適的水準。

（使用本產品時）

- <