

## TK-380 Tuning procedure

Before attempting to tune the transceiver, connect the unit to a suitable power supply. Whenever the transmitter tuned, unit must be connected to a suitable dummy load, unless the instruction specify otherwise. The speaker output connector must be terminated with a 4 Ohm dummy load at any time during the tuning and connected to an AC voltmeter and an audio distortion meter or a SINAD measurement at all the time during the tuning.

Power sw on during "A" push to test mode [1-1] then push "S" to tuning mode.  
This \*\*\* mean using 3 numbers from CHANNEL NOB.

### 1 Transmitter section

#### 1.1 Frequency adjustment

Set test mode CH1, Push "S" to enter tuning mode, Select [FREQ\*\*\*], then PTT on.  
470.100MHz $\pm$ 50Hz.

#### 1.2 TX High power adjustment

Set test mode CH1, Push "S" to enter tuning mode, Select [Hpow\*\*\*], Push "A" to 5 points.

- Select [L Hpow\*\*\*] then PTT on 3.8W $\pm$ 0.1W.
  - Push "C" to select [L2 Hpow\*\*\*] then PTT on, push "B" after tuned.
  - Push "C" to select [C Hpow \*\*\*] then PTT on, push "B" after tuned.
  - Push "C" to select [H2Hpow\*\*\*] then PTT on, push "B" after tuned.
  - Push "C" to select [H Hpow\*\*\*] then PTT on, push "S" to return test mode.
- The TX current is 2.2A or less.

#### 1.3 TX Low power adjustment

Set test mode CH1, Push "S" to enter tuning mode, Select L pow, Push "A" to 5 points.

- Select [L Lpow\*\*\*] then PTT on 0.8W $\pm$ 0.1W.
  - Push "C" to select [L2 Lpow\*\*\*] then PTT on, push "B" after tuned.
  - Push "C" to select [C Lpow\*\*\*] then PTT on, push "B" after tuned.
  - Push "C" to select [H2 Lpow\*\*\*] then PTT on, push "B" after tuned.
  - Push "C" to select [H Lpow\*\*\*] then PTT on, push "S" to return test mode.
- The TX current is 1.0A or less.

#### 1.4 DQT BAL adjustment

Set test mode CH1, Push "S" to enter tuning mode, Select [BAL\*\*\*], Push "A" to enter 3 Points,

- Select [LBAL\*\*\*] adjustments mode then PTT on Push "B" after tuned .
- Push "C" to select [C BAL\*\*\*] then PTT on push "B" after tuned.
- Push "C" to select [H BAL\*\*\*] then PTT on push "B" after tuned.  
Push "A" to return to tuning mode.
- Push "Lamp" to narrow adjustment mode [n BAL\*\*\*], then PTT on push "B" after tuned.  
Push "Lamp" to return tuning mode.  
Make the de-modulation waves into square waves.

#### 1.5 Max deviation adjustment

Set test mode CH1, push "S" to enter tuning mode, Push "A" to 3 points adjustment mode.

- Select [L MAX\*\*\*] then PTT on push "B" after tuned.
- push "C" to select [C MAX\*\*\*] then PTT on push "B" after tuned.
- push "C" to select [H MAX\*\*\*] then PTT on push "B" after tuned  
Push "A" to return tuning mode.

Deviation  $\pm$ 3.80KHz(Wide),  $\pm$ 1.75KHz(Narrow)

Push " Lamp" to narrow adjustment mode [n MAX\*\*\*] then PTT on push "Lamp" to return

tuning mode.

#### 1.6 QT Deviation adjustment

- a) Push "S" to enter tuning mode select [FQT\*\*\*] push "A" to adjustment mode.  
Select [L FQT\*\*\*] then PTT on push "B" after tuned.

Deviation  $\pm 0.75\text{KHz}(\pm 0.05\text{KHz})$

- b) same [C FQT\*\*\*]  
c) same [H FQT\*\*\*]  
d) same [n FQT\*\*\*]

#### 1.7 DQT Deviation adjustment

- a) Same as QT. Select [FDQT\*\*\*]

b) same as [L FDQT\*\*\*]

c) same as [C FDQT\*\*\*]

d) same as [H FDQT\*\*\*]

e) same as [n FDQT\*\*\*]

Deviation  $\pm 0.75\text{KHz}(\pm 0.05\text{KHz})$

#### 1.8 LTR Deviation adjustment

- a) Select [FLTR\*\*\*]

b) Select [L FLTR\*\*\*]

c) Select [C FLTR\*\*\*]

d) Select [H FLTR\*\*\*]

e) Select [n FLTR\*\*\*]

Deviation  $\pm 1.0\text{KHz}(\pm 0.05\text{KHz})$ (Wide)  $\pm 0.75\text{KHz}(\pm 0.05\text{KHz})$ (Narrow)

#### 1.9 DTMF Deviation adjustment

- a) Select [DTMF\*\*\*] Deviation  $\pm 2.5\text{KHz}(\pm 0.05\text{KHz})$ (Wide)

b) Select [n DTMF\*\*\*] Deviation  $\pm 1.25\text{KHz}(\pm 0.05\text{KHz})$ (Narrow)

#### 1.10 MSK Deviation adjustment

- a) Select [FMSK\*\*\*] Deviation  $\pm 2.5\text{KHz}(\pm 0.05\text{KHz})$ (Wide)

b) Select [n MSK\*\*\*] Deviation  $\pm 1.25\text{KHz}(\pm 0.05\text{KHz})$ (Narrow)

### 2 Receiver section

#### 2.1 Sensitivity

- a) Select [SENS\*\*\*] 12dB SINAD or more.

#### 2.2 Tight squelch adjustment

- a) Select [SQL\*\*\*] Adjust to point of opening squelch.(Wide)

b) Select [n SQL\*\*\*] Adjust to point of opening squelch.(Narrow)

## TK-380 Circuit Description

The KENWOOD model TK-380 is a UHF/FM hand-held transceiver designed to operate in the frequency range of 450 to 490MHz (FCC ID: ALH24623110). The unit consists of a receiver, a transmitter, a phase-locked loop (PLL) frequency synthesizer, a digital control unit, power supply circuits and a signaling unit.

### 1. RECEIVER CIRCUIT

The receiver is double conversion superheterodyne, designed to operate in the frequency range of 450 to 490MHz (FCC ID: ALH24623110).

#### 1.1 FRONT-END RF AMPLIFIER

An incoming signal from the antenna is applied to an RF amplifier (Q24) after passing through a transmit/receive switch circuit (D12 and D14 are off). After the signal is amplified, the signal is filtered by a Band-shift type band-pass filter to eliminate unwanted signals before it is passed to the first mixer.

#### 1.2 FIRST MIXER

The signal from the RF amplifier is heterodyned with the first local oscillator signal from the PLL frequency synthesizer circuit at the first mixer (IC18) to become a 44.85MHz first intermediate frequency (1st IF) signal. The first IF signal is fed through two monolithic crystal filters (MCFs: XF1) to further remove spurious signals.

#### 1.3 IF AMPLIFIER

The first IF signal is amplified by Q12, and then enters IC12 (FM processing IC). The signal is heterodyned again with a second local oscillator signal within IC12 to become a 455kHz second IF signal. The second IF signal is fed through a 455kHz ceramic filter, CF1 (for Wide), CF2 (for Narrow) to further eliminate unwanted signals before it is amplified and FM detected in IC12.

#### 1.4 AUDIO AMPLIFIER

The recovered audio signal obtained from IC12, is amplified by IC13 (control board), low-pass filtered by IC13, high-pass filtered by IC13 and band-eliminate filtered by IC13. The audio signals then pass through an audio frequency switch (Q15) and de-emphasized by IC13. The processed audio signal passes through an audio volume control and is amplified to a sufficient level to drive a loud speaker by an audio power amplifier BTL (IC300) display board.

#### 1.5 SQUELCH AND MUTE CIRCUIT

The output signal from the squelch circuit, which consists of IC12 and Q4, is applied to the microprocessor. The microprocessor passes information to the shift register (IC21, IC22) and it controls the mute control lines (AMP SW, INT, AFC and EXT AFC) according to the input signal (noise pulse) and the microprocessor task condition.

### 2. TRANSMITTER

#### 2.1 MICROPHONE CIRCUIT

The signal from the microphone is high-pass filtered by IC13, passed through microphone mute circuit (Q17), limited and pre-emphasized by IC13, D8.

#### 2.2 MODULATOR CIRCUIT

The output of the Audio-processor (IC13) is passed to the D/A converter (IC8) for maximum deviation adjustment and the summing amplifier (IC1) before being applied to a varactor diode in the voltage controlled oscillator (VCO) located in the frequency synthesizer section.

### **2.3 DRIVER AND FINAL POWER AMPLIFIER CIRCUITS**

The transmit signal obtained from the VCO buffer amplifier Q17, is amplified to approximately 13dBm by Q18 and Q20. This amplified signal is passed to the power module (IC100). The power module consists of a 2-stages amplifier and is capable of producing up to 4.0W of RF power.

### **2.4 TRANSMIT/RECEIVE SWITCHING CIRCUIT**

The power module output signal is passed through a transmit/receive switching circuit before it is passed to the antenna terminal. The transmit/receive switching circuit is comprised of D12 and D14. D12 and D14 are turned on (conductive) in transmit mode and turned off (isolated) in receive mode.

### **2.5 AUTOMATIC POWER CONTROL CIRCUIT AND TRANSMITTER**

#### **OUTPUT LEVEL SWITCH**

The automatic power control (APC) circuit stabilizes the transmitter output power at a pre-determined level by sensing the collector current of the final amplifier transistor in the power module. The voltage comparator (IC23) compares the voltage obtained by the above collector current with a reference voltage, set using the microprocessor and Q22. An APC voltage proportional to the difference between the sensed voltage and the reference voltage appears at the output of IC23. This output voltage controls Q25, which in turn controls the voltage at pin 2 of the power module, which keeps the transmitter output power constant. The transmitter output power can be varied to 1W output power by the microprocessor, which in turn changes the reference voltage and hence the output power.

## **3. PLL FREQUENCY SYNTHESIZER**

### **3.1 PLL**

The frequency step of the PLL circuit is 5 or 6.25 or 7.5kHz. A 16.8MHz reference oscillator signal is divided at IC14 by a fixed counter to produce the 5 or 6.25 or 7.5kHz reference frequency. The VCO output signal is buffer amplified by Q16, then divided in IC14, by a dual-modules programmable counter in this case. The divided signal is compared in phase with the 5 or 6.25 or 7.5kHz reference signal in the phase comparator also in IC14. The output signal from the phase comparator is low pass filtered and passed to the VCO to control the oscillator frequency.

### **3.2 VOLTAGE CONTROLLED OSCILLATOR (VCO)**

The operating frequency is generated by Hybrid Integrated Circuit (HIC) in transmit mode and HIC in receive mode. The oscillator frequency is controlled by applying the VCO control voltage, obtained from the phase comparator, to the varactor diodes. The T/R pin is set high in receive mode causing IC21, and turn on.

### **3.3 UNLOCK DETECTOR CIRCUIT**

If a pulse signal appears at the LD pin of IC14, an unlock condition occurs, The voltage applied to the UL pin of the microprocessor to go low. When the microprocessor detects this condition, the transmitter is disabled by ignoring the push-to-talk switch input signal.

## **4. DIGITAL CONTROL CIRCUIT**

#### **4.1 KEY SWITCHES CIRCUIT**

The key switches channel switches (channel selector) information are entered directly into the display microprocessor (IC19).

#### **4.2 RESET CIRCUIT**

When the power is initially turned on, the reset circuit (IC3).

#### **4.3 LAMP CIRCUIT**

An LED is provided to illuminate the LCD and its operation is controlled by the display microprocessor.

#### **4.4 SHIFT REGISTER CIRCUIT**

Serial data is sent to the shift register (IC21,IC22) from the microprocessor to control various functions in the unit.

### **5. POWER SUPPLY CIRCUIT**

#### **5.1 POWER SWITCHING CIRCUIT**

A 5V reference voltage is derived from an external power supply or internal battery by IC9. This reference is used to provide a 5V supply in transmit mode [5T], and a 5V supply in receive mode [5R] and a 5V supply common in both modes [5C] and [5M] based on the control signal sent from the microprocessor or shift register. IC21 in the control unit provide a 5V supply for the control and display circuits.

### **6. ADDITIONAL CIRCUIT**

#### **6.1 QT, DQT ENCODE**

The QT, DQT encoder tone is set by the data from the microprocessor. QT, DQT tone is generated by the microprocessor (IC19). The output is applied to the VCO(A10) and TCXO (XI) after passing through the D/A converter (IC8) for tone deviation adjustment and the summing amplifier (IC1).

#### **6.2 QT, DQT DECODE**

A part of the recovered audio signal obtained at the amplifier IC4 are the QT and DQT tones and are low pass filtered by IC11 and passed to the microprocessor for decoding.

#### **6.3 DTMF ENCODE**

Once a signal is passed from the DTMF key pad to the microprocessor. The microprocessor passes this information to the DTMF encoder. The encoded signal is then passed to IC8 (D/A converter) for DTMF deviation adjustment. This signal provides a TX DTMF tone and a RX DTMF tone. The TX DTMF tone is passed to the pre-emphasis circuit (mic. amplifier) and then to the VCO. The RX DTMF tone is passed to the de-emphasis circuit, audio power amplifier and then to the speaker.

#### **6.4 DTMF DECODE**

The DTMF input signal from the IF IC is amplified by IC4(2/2) and goes to IC1 16 DTMF decoder. The decoded information is then processed by the microprocessor.

使用半導体一覧表

98/10/21

- 2 -

X57-5750-10 TK-380 TX/RX

部品番号 PART NUMBER	部品名 PART NAME	REF	REF NO.
AT2408N10SI2.5	IC	IC	20
AT29C020-90TI	IC	IC	17
BU4094BCFV	IC	IC	21,22
GN2011(Q)	IC	IC	18
LC3872M	IC	IC	16
M62364FP	IC	IC	8
NJM2904V	IC	IC	23
NJU7201U50	IC	IC	6
RN5VL42C	IC	IC	3
S-81350HG-KD	IC	IC	5
SA7025DK	IC	IC	14
TA31136FN	IC	IC	12
TA75S01F	IC	IC	10
TA75W01FU	IC	IC	1,11
TC35453F	IC	IC	13
TC7S66FU	IC	IC	24
TC75W51FU	IC	IC	2,4,7
TK11250BM	IC	IC	9
30612M4A-407GP	IC	IC	19



# 使用半導体一覧表

98/10/21

- 1 -

X54-3210-10 TK-380 DISPLAY

部品番号 PART NUMBER	部品名 PART NAME	REF	REF NO.
2SB1132(Q,R)	トランジスタ TRANSISTER	Q	307
2SB798(DL,DK)	トランジスタ TRANSISTER	Q	305
2SC4617(S)	トランジスタ TRANSISTER	Q	302,303,304,306,309
UPA672T	トランジスタ TRANSISTER	Q	301,308
2SJ243	トランジスタ TRANSISTER	Q	300
2SK1824	トランジスタ TRANSISTER	Q	310
IMN10	ダイオード DIODE	D	318
MA2S111	ダイオード DIODE	D	304,317
1SS373	ダイオード DIODE	D	302
B30-2019-05	ダイオード DIODE	D	301
B30-2171-05	ダイオード DIODE	D	305,306
015AZ6.8	ダイオード DIODE	D	319,320,321
NNCD6.8G	ダイオード DIODE	D	300
015AZ2.4-X	ダイオード DIODE	D	303
MC74HC4017F	IC	IC	301
TDA7053AT	IC	IC	300



