

## Memory Recall

Display



**Frequency**

**Memory Channel**

Press **[MR]** to enter Memory Recall mode.

To exit Memory Recall mode, press **[VFO]**.

<b>Frequency Range (MHz)</b>
136.000 ~ 173.995

### memory List

Memory Channel	Received Frequency	Transmitted Frequency
00	136.050MHz	136.050MHz
01	155.050MHz	155.050MHz
02	173.950MHz	173.950MHz