# SX327 SX329

Battery Level Meter

radio

Vibrate

ALERT

• 3 AA NiMH batteries per

MicroUSB Charging Port

Weather Channels with

• 10 Hours Battery Life

Channel Monitor

NOAA Emergency /

· Emergency Strobe

Channel Scan

· 22 FRS Channels

S

-Way radios

THANK YOU FOR PURCHASING A UNIDEN PRODUCT CK OUT THE LATEST ACCESSORIES

ACCI iden.

J

- 7 Weather Channels
- 121 Privacy Codes
- Internal VOX Circuitry
- Up to 32 Mile Range\* Backlit LCD Display
- Headset Jack
- 10 Selectable Call Tone
- Alerts · VOX earbuds (selected
- models)
- Power Boost PTT
- Roger Beep
- Belt Clips
- · Battery Charging Cradle

\* Range may vary depending on environmental and/or topographical conditions.



1	Antenna	9	Speaker
2	Push to Talk (PTT)	10	Charging Contacts
3	Boost (Change transmission power from 1.0W to 2.5W.)	11	LCD
4	MicroUSB port and earbud jack	12	Volume Up
5	Channel Up	13	Volume Down
6	Channel Down	14	Light
7	MENU/Power	15	WX/MON
8	Call/Lock	16	Microphone

Congratulations on your purchase of a Uniden SX327 series radio. This lightweight, palm-sized radio is a state-of-the-art device, equipped with many valuable features. Use it at sporting events, to stay in contact with family and friends, hiking, skiing, outdoors, or in a neighborhood watch for vital communication

## PACKAGE CONTENTS

Each radio uses 3 AA rechargeable Ni-MH batteries, included.

If your model number contains a "C," your package contains a microUSB Y charging cable

- If your model number contains "CK," it contains a charging kit (including a charging cradle).
- If your models number contains "HS," it contains earbuds.

Refer to the packaging for other specific contents.

## **INSTALL THE BATTERY**

The SX327 and SX329 series radios each use 3 AA rechargeable NiMH AA batteries (included).

#### To install the batteries:

Remove the belt clip if necessary.

- Unscrew and remove the battery compartment cover. 3. Install the batteries into the battery compartment. Be certain to follow the instructions indicated inside the battery compartment. Installing the batteries incorrectly will prevent the unit from operating.
- 4. Replace and screw in the battery compartment cover. 5. Replace the belt clip if necessary.
- Note: If the rubber seal appears worn, nicked, or dried out, replacement seals are available from www.uniden.com.

## BATTERY LEVEL AND LOW BATTERY ALERT

This unit has a battery level meter on the display to indicate the status of the batteries. When the battery in the unit is low, the battery level meter icon I flashes. Recharge the batteries Weather Resistant (IPX4) immediately.

## **CHARGING THE RADIO**

Two radios can be charged directly by using the supplied charging cradle. A single radio can charge using the miniUSB port to connect to a USB power source. For fastest charging, turn off the radio before charging

Warning! To avoid the risk of personal injury or property damage from fire or electrical shock, only use the Uniden accessories specifically designated for this product.

### Using the miniUSB Port

- 1. Connect the included AC adapter with miniUSB connector cable to the radio's miniUSB port. Connect the other end to an outlet that provides USB charging power (NOT to a USB hub)
- 2. Charge the batteries for 16 hours until the battery indicator stops flashing.

### Using the Charging Cradle

- 1. Connect the included AC adapter with USB connector cable to the charging cradle's miniUSB port. Connect the other end to a standard 120V AC wall outlet.
- 2. Set the charging cradle on the desk or tabletop, and place the radio in the charging cradle with the keypad facing forward.

3. Charge the batteries for 14 hours.

## Note:

- Use only the supplied batteries, charger, and AC adapter or approved accessories from Uniden.
- Charge time may vary depending on the battery life remaining The batteries must be installed for the unit to operate, even if
- the unit is also connected to external power.

If battery power is low, you cannot operate the radio even using external power. Allow the batteries to charge before using. If you try to transmit while power is low, the radio will automatically turn off.

## USING EARBUDS

Not all SX327/329 radios come with VOX earbuds. If your model number has -HS, that model comes with earbuds. You can use earbuds for more private communications. To use the earbud, lift the rubber cover from over the headset jack, then plug in the earbud.

Important: Your radio is not weather resistant when using earbuds. After removing the earbuds from tha radio, be sure to fully press the jack cover into place to restore the radio's weather resistant capability

## **USING THE RADIO**

#### Turning the Radio On and Adjusting the Volume 1. Press and hold MENU/ to turn the radio ON. lincrease the

- speaker volume by pressing  $\textit{VOL} \blacktriangle$  . To decrease the
- volume, press VOL ▼. 2. Press and hold *MENU*/ <sup>()</sup> again to turn the radio OFF.

#### Adjusting the Sound (Key Beeps)

Your radio emits a beep each time one of the keys (except for the PTT and CALL/LOCK) is pressed. To turn this sound OFF, press and hold CALL/LOCK while turning ON the radio. Repeat to turn the sound back ON.

#### **Choosing a Channel**

Your radio has 22 channels and 121 Privacy codes you can use to talk to others. In order to speak to someone, each of you must be set to the same channel and Privacy code.

With the radio in "Normal" operating mode, press the  $\textit{CH} \blacktriangle /\textit{CH} \blacktriangledown$ keys to increase or decrease the channel number displayed.

Note: Channels 1-7 have a typical range of up to 32 miles. Channels 8-14 have a typical maximum range of up to 5 miles.

Channels 15-22 have a typical range of up to 32 miles. You can see which channel is active by the icon. The **hi** icon is displayed while on high power channels, and the lo icon is displayed while on low power channels.

#### Talking on Your Radio

To talk to others using the radio:

- 1. Press and hold the PTT button and speak in a clear, normal voice about 2-3 inches away from the microphone. While you are transmitting, the **tx** icon appears on the display. To avoid cutting off the first part of your transmission, pause slightly after pressing the PTT button before you start talking.
- 2 When you have finished speaking release the PTT button You can now receive incoming calls. While receiving, rx displays.

#### Monitor Mode Feature

Your radio allows you to listen for weak signals on the current channel at the press of a key.

To turn ON Monitor mode:


Press and hold WX/MON for 2 seconds until two beeps sound. The receiver circuit stays open, and both noise and weak signals can be heard. The rx icon blinks.

To turn OFF Monitor mode:

Press and hold WX/MON for 2 seconds to return to "Normal" mode; two beeps sound and the **rx** icon stops blinking and disappears.

#### Advanced Functions (Menus)

Press MENU/ to access your radio's advanced functions.

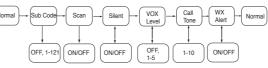

- Press MENU/ (1) to enter the menus
- 2. Additional presses of MENU/ d advance you through the menus until exiting to "Normal" operating mode (a double beep sounds).
- You can also press any key except CH  $\blacktriangle$  / CH  $\blacksquare$  or VOL  $\blacktriangle$ / VOL ▼. Tap PTT to exit Menu mode.

### Privacy Code

Each of the channels may have a Privacy code (oF or 1-121) selected. Code oF (OFF) indicates no Privacy code selected and your radio can receive a signal regardless of the code settings of the transmitting radio.

- 1. Press  $\textit{MENU} / \circlearrowright$  to enter Menu mode. The Privacy code indicator flashes.
- 2. Press CH ▲/ CH ▼key to increase or decrease the Privacy code number displayed. You can also select oF (OFF) at this
- 3. To exit the Menu, press the MENU/ to key to advance through the Menu until exiting to "Normal" mode.
- 4 Press any key other than CH ▲ /CH ▼ or VOL ▲/VOL ▼ or press PTT and the radio returns to Idle mode in 10 seconds.

Scan

Your radio has a channel scan feature that allows you to easily scan all 22 channels. When an active channel is detected, the radio pauses on that channel until the channel is clear. Then, after a 2 second delay, the radio continues scanning. Pressing the PTT button while the scan is paused on a channel allows you to transmit on that channel.

To turn ON channel scan:

- 1. Press MENU/ C repeatedly until the scan... icon and oF blink
- 2. Press CH ▲ / CH ▼ to select Scan mode and press MENU/ to start it.

To turn OFF channel scan:

- 1. To exit the Scan menu, press the MENU/ to key to advance through the Menu until exiting to "Normal" mode
- 2. Press any key other than CH ▲ / CH ▼, VOL ▲/VOL
  - ▼, or Flashlight to turn channel scan off in 10 seconds.

#### Voice Operated Transmission

Your radio is equipped with a user selectable Voice Operated Transmitter (VOX) that can be used for automatic voice transmissions. The VOX feature is designed to be used with a headset with a microphone. Transmission is initiated by speaking into the microphone instead of pressing PTT.

To select VOX level:

- 1. Press *MENU*/ <sup>()</sup> repeatedly until the vox icon and the VOX sensitivity level (oF, 1-5) blink.
- 2. Press CH ▲ / CH ▼ to change the VOX sensitivity levels.

Use level 1 to increase sensitivity to voice in normally quie environments, and use a higher level to reduce undesired activation in very noisy environment

transmitted when CALL/LOCK is pressed.

Tone start to blink on the display.

3. Exit Call Tone to set the selected tone.

the tone you want to select.

Call Tone

To select a call tone:

Setting Silent Mode

or press any other button.

to blink on the display.

appears.

1

To turn OFF Silent mode:

disappears.

Missed Call Alerts

Key Lock

To lock the keypad:

Volume Adjust

Power Off

Flashlight

**Automatic Power Save** 

To unlock the keypad:

LCD Backlight

turning OFF.

Roger Beep

PTT Transmission

Press CH ▼ to display oF.

channel is detected even during Silent mode.

every minute after the call for 3 minutes.

Press and hold CALL/LOCK; D displays.

These functions are not affected by Key Lock:

Press and hold CALL/LOCK again; disappears.

still able to receive transmissions in this mode.

Roger Beep will neither be heard nor transmitted.

To change Roger Beep setting:

LED Flashlight with SOS

respond, the radio will turn on the Missed Call icon.

To turn ON Silent mode:

3. To exit the Menu, press the MENU/ to key to advance through the Menu until exiting to "Normal" mode.

Your radio is equipped with 10 selectable call tones that are

1. Press  $\textit{MENU} / \bigcirc$  repeatedly until the CALL icon and Call

2. Press CH A / CH A to move through the available call tones. Each tone will be heard through the speaker but will not be transmitted. Cycle through these tones and stay on

When you turn on Silent mode, all incoming calls are muted; if you receive a call, the unit vibrates and the backlight flashes. If you do not respond to the call within 15 seconds, the backlight turns off. The radio will also vibrate to remind you that you missed a call Silent mode is disabled for 15 seconds when you transmit, receive

Press MENU/ C repeatedly until vibe and the current setting start

Press CH ▲ to turn Silent mode on; on displays. 2. To exit the Menu, press the MENU/ to advance through the Menu until exiting to "Normal" mode. vibe

2. To exit the Menu, press the  $\textit{MENU} / \circlearrowright$  key to advance through the Menu until exiting to "Normal" mode. vibe

Note: To prevent unwanted silent alerts, be sure to use a Privacy code whenever you use the Silent mode feature. You can hear the received voice when you turn on channel scan and an active

If you receive an incoming call while Silent mode is on and do not

The radio will additionally remind you of a missed call by vibrating

The radio is equipped with an LED flashlight that can also flash an SOS signal during emergencies. Press *LIGHT* to cycle through the options

- · Press turn on flashlight. (Quick press turn off flashlight)
- · Press and hold turn on SOS signal.
- From SOS Press to turn off SOS signal and return to
- · From flashlight Press to turn off flashlight.

Note: The flashlight will also work when the radio is off.

**USING THE WEATHER RADIO** 

Your radio can receive weather broadcasts from the NOAA National Weather Service When in the Weather Radio Alert mode the system functions as it does in standard mode but also monitors the selected weather channel for alerts when not communicating. While using the Weather Radio, you are not able to receive FRS communications

- To turn on the Weather Radio Broadcast mode, press WX/ MON. The 🕈 icon appears
- 2. Press CH ▲/CH ▼ to increase or decrease the number to the desired Weather Channel.
- 3. To exit the Weather Radio Broadcast mode, press WX/MON. The 🕈 icon disappears.

## Choosing an Emergency/Weather Channel

There are 7 NOAA channel frequencies available and these frequencies are common between the US and Canada. You need to know what frequency is being transmitted in your location.

Press MENU/ O repeatedly until the alert icon and the current setting start to blink on the display.

To turn ON Weather Alert

- 1. Press CH ▲ to display on.
- 2. To exit the Menu, press the *MENU*/  $\bigcirc$  key to advance you through the Menu until exiting to "Normal" mode. alert icon appears
- 3. When the unit receives a warning signal, it beeps for 5 seconds. alert and channel indicator flash.

To turn OFF Weather Alert:

- 1. Press CH ▼ to display oF.
- 2. To exit the Menu, press the  $\textit{MENU}/ \bigcirc$  key advance you through the Menu until exiting to "Normal" mode. alert icon disappears.
  - · When Weather Alert is activated, the highest priority is given to this function. It checks the weather alert signals every 5 seconds. When the unit finds a warning signal, it switches to the warning receive mode automatically · Weather Alert is activated even if Beep Tone is turned off.

## **NOAA Weather Radio Frequency List**

Ch.	Frequency (MHz)	CH.	Frequency (MHz)
1	162.550	5	162.450
2	162.400	6	162.500
3	162.475	7	162.525
4	162.425		

SPECIFICATIONS

Channels Privacy Codes

Operating Freq. GMRS/FRS WX Power Source Range

22 FRS/7 Weather 38 Sub-Codes 83 DCS Codes

462.5500 - 467.7125 MHz 162.4000 - 162.5500 MHz 3 AA Rechargeable NiMH Batteries Up to 32 miles

## FREQUENCY CHART

CH.	Freq.	Cross-Ref.	CH.	Freq.	Cross- Ref.
1	462.5625	FRS & GMRS 1	12	467.6625	FRS 12
2	462.5875	FRS & GMRS 2	13	467.6875	FRS 13
3	462.6125	FRS & GMRS 3	14	467.7125	FRS 14
4	462.6375	FRS & GMRS 4	15	462.5500	GMRS 11
5	462.6625	FRS & GMRS 5	16	462.5750	GMRS 8

Enter Monitor Mode

Call Tone Transmission

Boost

Your radio has a circuit designed to dramatically extend the life of the batteries. If there is no transmission or an incoming call within 3 seconds, your radio switches to Power Save mode. The radio is

The LCD Backlight automatically turns ON when any key (except the PTT button) is pressed. It stays lit for 10 seconds before

Roger Beep is a beep sound that that is sent to indicate the end of transmission (both PTT and VOX transmission). Roger Beep can be heard through the speaker when both Roger Beep and Key Beep are set to ON. When Roger Beep is set to ON and Key Beep is set to OFF, Roger Beep will not be heard from the speaker but it will be transmitted to your party. When Roger Beep is set to OFF.

Press and hold VOL A while turning the radio on and off. If Roger Beep is ON, it will be turned off: if it is OFF, it will be turned on.

Freq.	Cross-Ref.	CH.	Freq.	Cross- Ref.
462.6875	FRS & GMRS 6	17	462.6000	GMRS 12
462.7125	FRS & GMRS 7	18	462.6250	GMRS 9
467.5625	FRS 8	19	462.6500	GMRS 13
467.5875	FRS 9	20	462.6750	GMRS 10
467.6125	FRS 10	21	462.7000	GMRS 14
467.6375	FRS 11	22	462.7250	GMRS15
	462.6875 462.7125 467.5625 467.5875 467.6125	462.6875 FRS & GMRS 6   462.7125 FRS & GMRS 7   467.5625 FRS 8   467.5875 FRS 9   467.6125 FRS 10	462.6875 FRS & GMRS 6 17   462.7125 FRS & GMRS 7 18   467.5625 FRS 8 19   467.5875 FRS 9 20   467.6125 FRS 10 21	462.6875 FRS & GMRS 6 17 462.6000   462.7125 FRS & GMRS 7 18 462.6250   467.5625 FRS 8 19 462.6500   467.5875 FRS 9 20 462.750   467.6125 FRS 10 21 462.7000

Note: This product is considered FRS only with 22 FRS channels in the US market. It is considered a GMRS product in the Canadian market

#### DCS CODE LIST

Tone No.	Octal Code	Tone No.	Octal Code	Tone No.	Octal Code
39	023	67	174	95	445
40	025	68	205	96	464
41	026	69	223	97	465
42	031	70	226	98	466
43	032	71	243	99	503
44	043	72	244	100	506
45	047	73	245	101	516
46	051	74	251	102	532
47	054	75	261	103	546
48	065	76	263	104	565
49	071	77	265	105	606
50	072	78	271	106	612
51	073	79	306	107	624
52	074	80	311	108	627
53	114	81	315	109	631
54	115	82	331	110	632
55	116	83	343	111	654
56	125	84	346	112	662
57	131	85	351	113	664
58	132	86	364	114	703
59	134	87	365	115	712
60	143	88	371	116	723
61	152	89	411	117	731
62	155	90	412	118	732
63	156	91	413	119	734
64	162	92	423	120	743
65	165	93	431	121	754
66	172	94	432		

### CTCSS Chart (Hz)

Code	Freq.	Code	Freq.	Code	Freq.
oF	OFF	13	103.5	26	162.2
1	67.0	14	107.2	27	167.9
2	71.9	15	110.9	28	173.8
3	74.4	16	114.8	29	179.9
4	77.0	17	118.8	30	186.2
5	79.7	18	123.0	31	192.8
6	82.5	19	127.3	32	203.5
7	85.48	20	131.8	33	210.7
8	88.5	21	136.5	34	218.1
9	91.5	22	141.3	35	225.7
10	94.8	23	146.2	36	233.6
11	97.4	24	151.4	37	241.8
12	100.0	25	156.7	38	250.3

# **RBRC INFORMATION**

As part of our commitment to protect the environment and conserve natural resources, Uniden voluntarily participates in an RBRC® industry program to collect and recycle used Ni-MH batteries within the US.

Please call 1-800-8-BATTERY for information on Ni-MH battery recycling in your area. (RBRC<sup>®</sup> is a registered trademark of the Rechargeable Battery Recycling Corporation.)

# MAINTENANCE

0.822

### To be safe and sure:

Never open your radio's case

· Never change or replace anything in your radio except the hatteries

### Care and Safety

To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit and leak inside, causing permanent damage. Use a dry, lint-free cloth to clean the battery contacts. Do not submerge the unit in water. If the unit gets wet, turn it off and remove the batteries immediately.

Dry the battery compartment with a soft cloth to minimize potential water damage. Leave the battery compartment cover off overnight to ensure complete drying. Do not use the radio until the unit is completely dry

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by moving your radio away from the receiver. If you cannot eliminate the interference, the FCC requires that you stop using the radio

#### **Hazardous Environments**

Do not operate the radio in hazardous environments. Explosion or fire may result. Do not operate the radio near unshielded electrical blasting caps.

Under certain conditions, radios can interfere with blasting operations and may cause an explosion. Turn your radio OFF to prevent accidental transmission when in a blasting area or in areas posted: "Turn off two-way radio." Construction crews often use remote control RF devices to set off explosives

WARNING! Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards

Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines

# FCC RF EXPOSURE

WARNING! It is up to the user to properly operate this radio transmitter to insure safe operation. Please adhere to the following:

Do not use the radio with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for a replacement antenna

### Hand-Held Operation (Held-to-Face)

This device was evaluated for typical hand-held (held-to-face) operations with a 1 inch spacing from the front of the radio. For hand-held operation, the radio should be held 1 inch from the user's face in order to comply with FCC RF exposure requirements.

#### **Body-Worn Operation**

This device was evaluated for body-worn operations with the supplied belt-clip accessory. (All necessary accessories are included in the package; any additional or optional accessories are not required for compliance with the guidelines.) Third party accessories (unless approved by the manufacturer) should be avoided as these might not comply with FCC RF exposure guidelines.

For body worn operation, this device has been tested and meets the Industry Canada RF exposure guidelines when used with Uniden accessories supplied or designated for this product. Use of other accessories may not ensure compliance with Industry Canada RF exposure guidelines.

Fonctionnement de l'appareil, lorsque porté sur le corps. Cet appareil a été testé et s'est avéré conforme aux normes d'Industrie Canada et approuvé pour le port sur le corps à l'aide des accessoires Uniden inclus et conçus pour cet appareil. L'utilisation d'accessoires ne respectant pas les exigences d'exposition RF d'Industrie Canada doit être évitée



#### FCC PART 15

This device complies with Part 15 of the FCC rules. Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Avis de conformité à la FCC : Ce dispositif a été testé et s'avère conforme à l'article 15 des règlements de la Commission fédérale des communications (FCC). Ce dispositif est soumis aux conditions suivantes: 1) Ce dispositif ne doit pas causer d'interférences nuisibles et; 2) Il doit pouvoir supporter les parasites qu'il reçoit, incluant les parasites pouvant nuire à son fonctionnement.

Tout changement ou modification non approuvé expressément par la partie responsable pourrait annuler le droit à l'utilisateur de faire fonctionner cet équipement.

## IC Compliance

This device complies with Industry Canada license-exempt RSS standard(s).Operation is subject to the following two conditions: 1 This device may not cause interference and

2. This device must accept any interference, including

interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Cet appareil est conforme aux normes RSS exemptes de licences. d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes

1. Cet appareil ne doit pas causer d'interférences nuisibles et 2. Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement non désiré de l'appareil

Tout changement ou modification non approuvé expressément par la partie responsable pourrait annuler le droit à l'utilisateur de faire fonctionner cet équipement.

# **ONE-YEAR WARRANTY**

IMPORTANT: SAVE YOUR RECEIPT! Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden")

ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is: (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden. (C) improperly installed. (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty. (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect. warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW. INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OVERPAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Corporation C/O Saddle Creek 743 Henrietta Creek Road, Suite 100 Roanoke, TX 76262





© 2019 Uniden America Corporation All rights reserved