

ROOF MOUNT MONITOR/DVD PLAYER



FLIP DOWN MONITOR/DVD PLAYER

USER'S MANUAL

Compatible with MP4/DVD/VCD/CD/MP3/CD-R/CD-RW

er does not work, or no disc

he disc or not

the disc is placed up side down or not, place the disc with the k sidedown.

is dirty. Clean the disc

is moisture inside, take off the disc and power off unit for about r.

ect the power cord and plug the power cord into the wall outlet y again to reset unit.

ote control does not work properly

s an obstacle in the path of the remote control and this unit. the obstacle. Check if remote control point to receiver or not. batteries in the remote control are exhausted. Replace the batteries w ones.

ase contact with the dealer or approved service center help if the bles can't be solved by the methods offered.

Please read the manual carefully before using and keep it for your future reference.**Important instruction for safety:**

For your safety, do not turn on, watch or operate the unit while In some countries and regions, it may be against the laws. The product is comprised of many precision electronic components. Self-renovation or disassembling may cause malfunction to the unit.

Note:

To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.

High voltage inside! Do not open or dismantle the unit. Do not yourself. Refer servicing to qualified personnel. The product is a laser product. Make sure to read instruction manual before operating.

Do not try to open the covers to avoid direct laser radiation. When the cover of the unit is opened or the interlocking system unlocked, the Laser light can be visible. Direct vision of Laser hazardous to your eyes.

In order to prolong the life of the unit which has a large scale of circuits and precision pick-up device, Frequent Turn On/Off of the unit. More than 5 seconds interval is required.

nt

es-----	01
tion-----	02
re Battery -----	04
ction Method-----	05
re Controller-----	06
on Explanation-----	10
re Shooting-----	17
cal Specifications -----	19

Trouble Shooting

Please consult the Trouble shooting sheet to deal with these problems you are in trouble:

No Sound or bad sound effect

Please check if cables are connected properly
Please check audio shift setup.
Please adjust the receiving frequency to harmonized with the transmission frequency.

No Picture

Check if cables are connected properly.
Video Input is not yet set up correctly.
The monitor is on or off.

Poor picture

The color is not properly adjusted; please operate the remote control
adjust it
The disc is scratched or spotted.

Attention please:
had buy the unit just monitor without DVD function will not include
D/FM/GAME.

ages, signal shows on the screen.
Number buttons to select the picture album.

ection by the disc menu

he disc to the loader correctly; player starts searching messages, menu shows on the screen, select from NO.1 by Direction Button, play to confirm.

Direction Buttons to select picture in current picture album, press start
Direction Buttons to select other pictures during stop.
to previous menu by selecting File during stop. Then Press Play.

Features:

- (1) Easy of Installation, Non hazardous design
- (2) The display unit has built in DVD player.
- (3) Built in IR wireless and FM Modulator transmitter.
- (4) AV input/output
- (5) Support USB/SD
- (6) Wireless Games controller (Optional)
- (7) TV function (Optional)

Discs for playback

Type	Icon	Content	Size
MP4		Audio/Video	12cm/8cm
VCD		Video & Audio (dynamic image)	12cm/8cm
CD		Audio	12cm/8cm
MP3		Audio	12cm/8cm

Disc-related terms

- **Title (DVD Only)**

The main film content or accompanying feature content or additional feature content, or music album. Each title is assigned a title reference number enabling you to locate it easily.

tion**Basic Operation**

Check the voltage in the car as the machine required before playing. Hold the plug tightly, and avoid dragging the power cords when inserting or pulling out it from the jack.

Machine has laser system which is harmful for the eyes, please do not touch the crust. Any repair you need, it is necessary to ask for the specialized unit.

nt

Storage temperature ranges from -30°C to -75°C, operating temperature from -10°C to 55°C. keep the pick-up clean and away the dust. If so, the cleaning disc help deal with this problem. For detailed operation instructions for the pick-up, you can consult the user's manual of pick-up cleaning

expose this unit to rain or moisture. Avoid dropping or impact to the

convex mirror and Trouble shooting

liquid on convex mirror in following cases, is normal phenomena. sudden change in Temperature and car air-conditioner is turned ON

on Buttons Direction Buttons to make free selection in title, content and setup easily. Direction buttons on the player can perform Fast Forward/Fast Backward, Previous/Next functions.

their will be a vapor formation on convex mirror. To de-vaporize it please takeout the disc and power ON the unit about one hour. Please wipe the machine with soft and dry cloth dipped optional was liquor in case of scratching the screen.

Note

Handling discs:

Do not touch the playback side of the disc. Hold the disc by the edge that fingerprints will not get on the surface.
Do not stick paper or tape on the disc.


Storing discs:

After playing, store the disc in its case.
Do not expose the disc to direct sunlight or sources of heat, or leave parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

Cleaning discs:

Fingerprints and dust on the disc can cause poor picture quality and distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out. Do not use strong solvents such as alcohol, benzine, thinner.

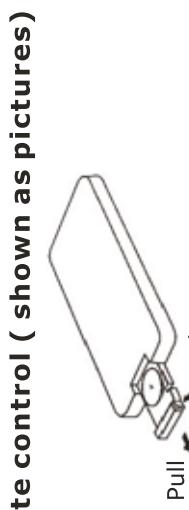

**Instructions for Remote control (shown as pictures)****A-B**

While playing DVD/VCD disc, press A-B for the first time to repeat one chapter, A appear in screen, press A-B for the second time to playing A-B chapter, A-B appear in screen, press A-B for the third cancel

Zoom

In this mode, the dynamic or still picture can be zoomed in/out at 4 folds. Press Zoom for three times, the picture is zoomed in by 2X 1/2, 1/3, 1/4 folds per order. And press Zoom again to return to the playing mode.

Repeat

(1) While playing DVD disc, press Repeat for the first time to repeat one chapter, press Repeat for the second time to repeat playing one chapter, press Repeat for the third time to repeat playing the entire disc, a Repeat to cancel.

(2) In PBC off mode:

While playing VCD disc, press Repeat for first time to repeat one song, press Repeat for the second time to repeat the entire disc. Press Repeat for the third time to cancel.

1e While playing DVD disc with multi-subtitles, choose the desired subtitle, it will show on the screen when this feature is not available on the disc. This feature setting is valid only for the current disc. the subtitle language can be changed from DVD setting menu.

There is multi-language feature while DVD disc is playing. In playing discs with this function, you can select the desired voice by using Audio.

Left audio, right audio and the stereo shows on the screen while playing disc. You can select the desired one when playing story disc with dual languages.

 
This feature setting is valid only for the current disc which has multi-language settings.

Note: When a title on a disc has more than one chapter or a disc has more than one track, using chapter function can move to another desired chapter to play. If there is no Chapter/track on the disc, the above function disabled automatically.


Functions Explanation

Fast Forward/Fast Backward (◀▶)

While DVD disc is playing, Press Fast Forward to play at 2X, 4X, speed circularly, screen shows as following:



 Press Fast Backward to play at 2X, 4X, 8X, 16X, 32X speed circularly, screen shows as following:




Press Play to shift to normal playing mode.

Previous/Next (◀▶)

To select previous item or chapter by pressing Previous button, next item or chapter, press Next button.

SECTION SKETCH METHOD

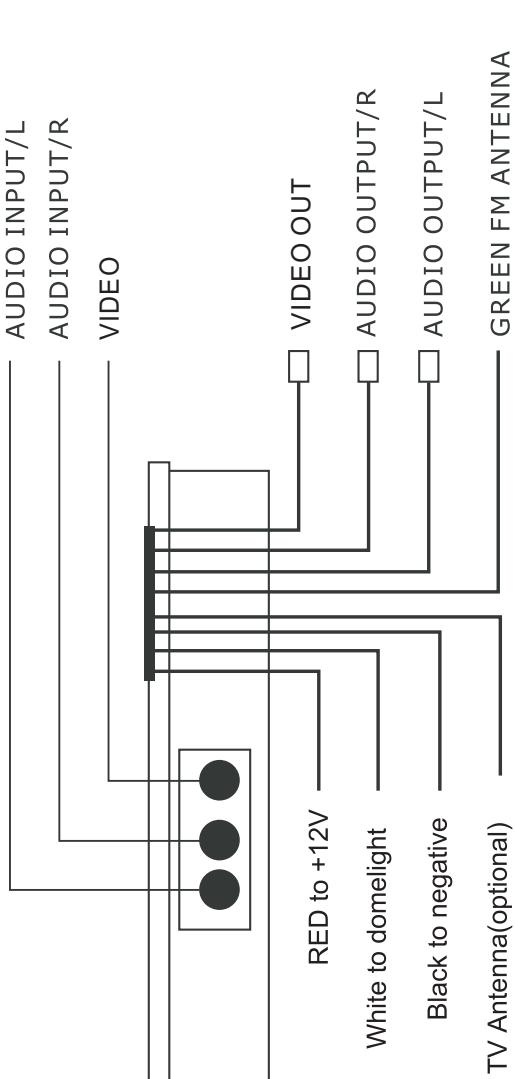


Menu/DVD

- (1) Press DVD Menu/PBC to return to the main menu or the Title menu while playing DVD disc.
- (2) While playing VCD disc, Press Menu/PBC to turn PBC on or off. (Unfunctional in DVD disc playing)
- (3) Only return to the main menu to select one song in PBC-on mode.
- (4) Pressing Number buttons to select one song in PBC-off mode.

Title/Return


- (1) While playing DVD disc, press Title to enter into title menu directly; select the desired item by pressing the Direction buttons or Number buttons.
- (2) While playing VCD2.0, press Title to return to previous menu; this function is disabled in PBC-off mode (Only for functional disc).

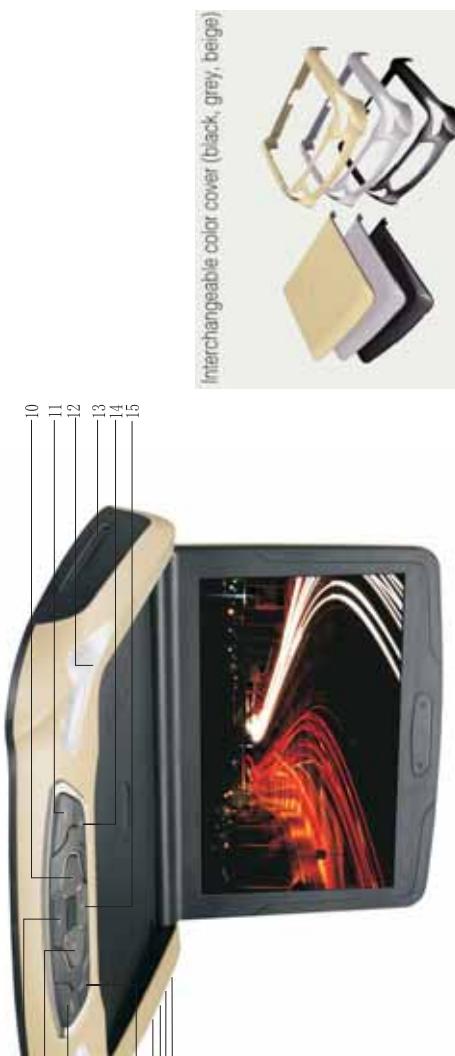


NU : Backward
TV/AV Shift
t t switch

6.Game2
7.SD card reader
8.USB Port
9.Game1
10.Fast Forward

11.Eject disc
12.Light
13.Disc In/Out
14.Play/Pause
15.Power on/off

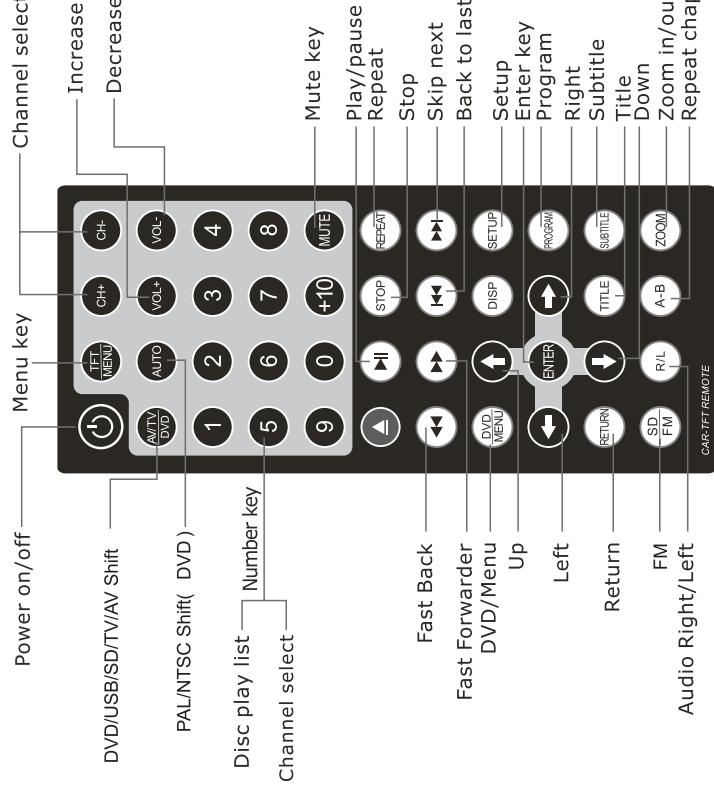


Installation and connection Method

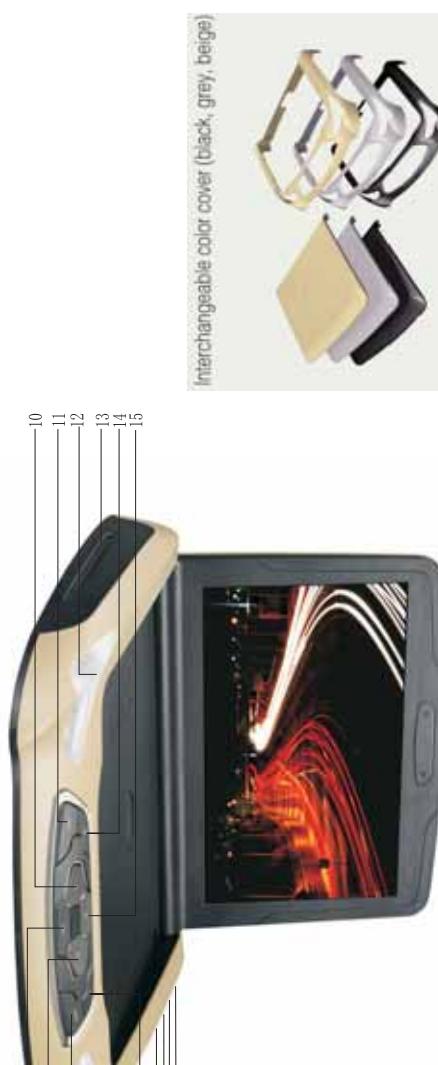

- 1. Game2
- 2. Backward
- 3. DVD/TV/AV Shift
- 4. Input switch
- 5. Fast Forward
- 6. SD card reader
- 7. USB Port
- 8. Game1
- 9. Title
- 10. Fast Forward
- 11. Eject disc
- 12. Light
- 13. Disc In/Out
- 14. Play/Pause
- 15. Power on/off



Remote control 10.2-12.1 inch

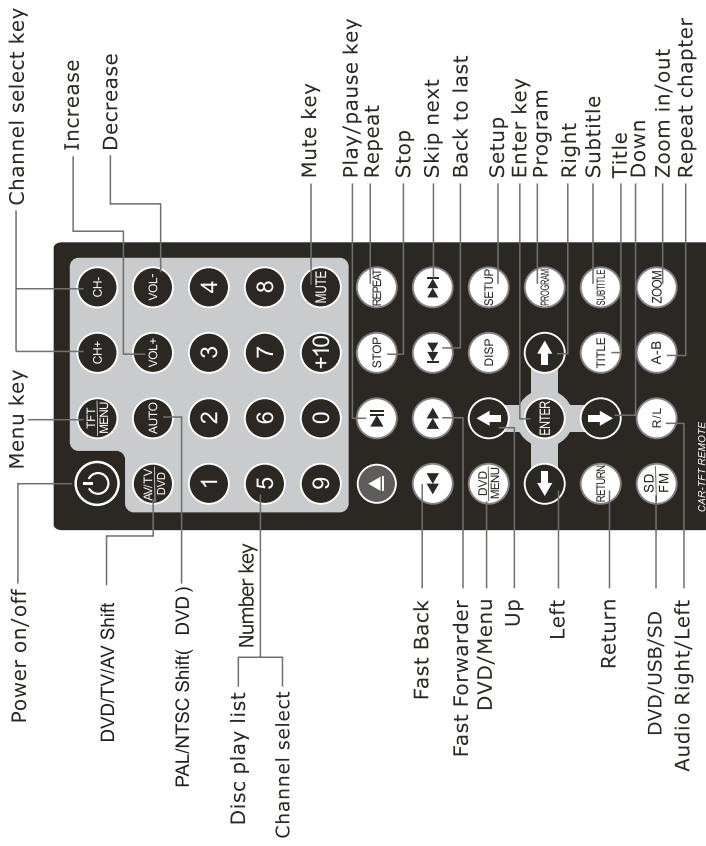

Compatible with MP4/DV/D/VCD/CD/MP3/CD-R/CD-RW

Technical Specifications

Screen Size	9 inch	10.2 inch	12.1 inch
Panel	TFT-LCD		
Pixel	800*R.G.B*480	1024*R.G.B*600	1366*R.G.B*720
Temperature	Storage temperature -20°C~75°C		
Backlight	White LED	White LED	White LED
Brightness	350cd/m ²		
Color System	PAL/NTSC/Auto matically		
Resolution	≥500		
S/N	≥90dB		
Isolation	≥65dB		
Audio Input/Output	1.6V±20%		
Video Input/Output	1Vp_p±20%		
Power Supply	DC12V		
Power Consumption	≤12W		

Your attention please:

The design and specifications are subject to change without notice,

FCC Notice: this device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: change or modifications not expressly approved by Kingyou may void the user's authority to operate this device.

FCC ID: AOU-DSVZ

Note: this equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient or relocate the receiving antenna
- increase the separation between the equipment and receiver
- connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- consult the dealer or an experienced radio/TV technician for help