

## 9. SYSTEM TEST CONFIGURATION

The EUT was configured for testing in a typical fashion (as a customer would normally use it). The manufacturer activated the Eut to transmit continuous. It just need to insert the battery and turn the Eut on. Please refer to the following photograph for actual setup.



Radiated Open Site Test Set-up