



# JBL PARTY XPERT

**HIGH POWER AUDIO SYSTEM WITH BLUETOOTH CONNECTIVITY, LED SHOWS,  
MIC AND MUSICAL INSTRUMENTS INPUTS**

SISTEMA DE ÁUDIO DE ALTA POTÊNCIA COM CONECTIVIDADE  
BLUETOOTH, LUZ E ENTRADAS PARA MICROFONE E INSTRUMENTOS MÚSICAIS

SISTEMA DE AUDIO DE ALTA POTENCIA CON CONECTIVIDAD  
BLUETOOTH, LUZ Y ENTRADAS PARA MICROFONO Y INSTRUMENTOS MUSICALES



Owner's manual

Manual do proprietário

Manual del propietario

— | | —

## Contents

---

Features .....	2
For your Attention.....	3
Panel.....	4-5
Connections.....	6-7
Basic playback.....	8-10
Trouble shooting.....	11
Specifications.....	11

## Features

Congratulations for your purchase of our product. Please read through this manual before making connections and operating this product. Retain this manual for future reference.

- Bluetooth playback
- Line input
- FM tuner
- USB slot
- Microphone function
- Multiple EQ sound effect mode

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Package Contents:

User manual



AC power cord



FM antenna



Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## For Your Attention

 
---

### IMPORTANT NOTES:

- Please read through this manual before making connections and operating this product. Retain this manual for future reference.
- Don't open the cabinet of this unit. No user-serviceable parts inside. Refer servicing to qualified personnel only.
- Switch off the unit when you don't use it. Switch off the unit and disconnect it from the AC power supply when it is not being used for a long time.
- Don't install the unit in a place exposed to heating sources or direct sunshine.
- Don't install the unit in a place exposed to moisture or rain.
- The apparatus shall not be exposed to dripping or splashing and any object filled with liquids, such as vases shall not be placed on it.
- Install the unit on a horizontal, flat and firm surface with good ventilation. Never block the vents which will cause malfunction resulted from overheating.
- Use a soft and clean rag to clean the outside of the unit. Never clean it with chemicals or detergent.
- This book is only a guide for user's operation, not a criterion for configuration.
- Only use attachments/accessories specified by the manufacturer.

# Panel


## TOP PANEL:

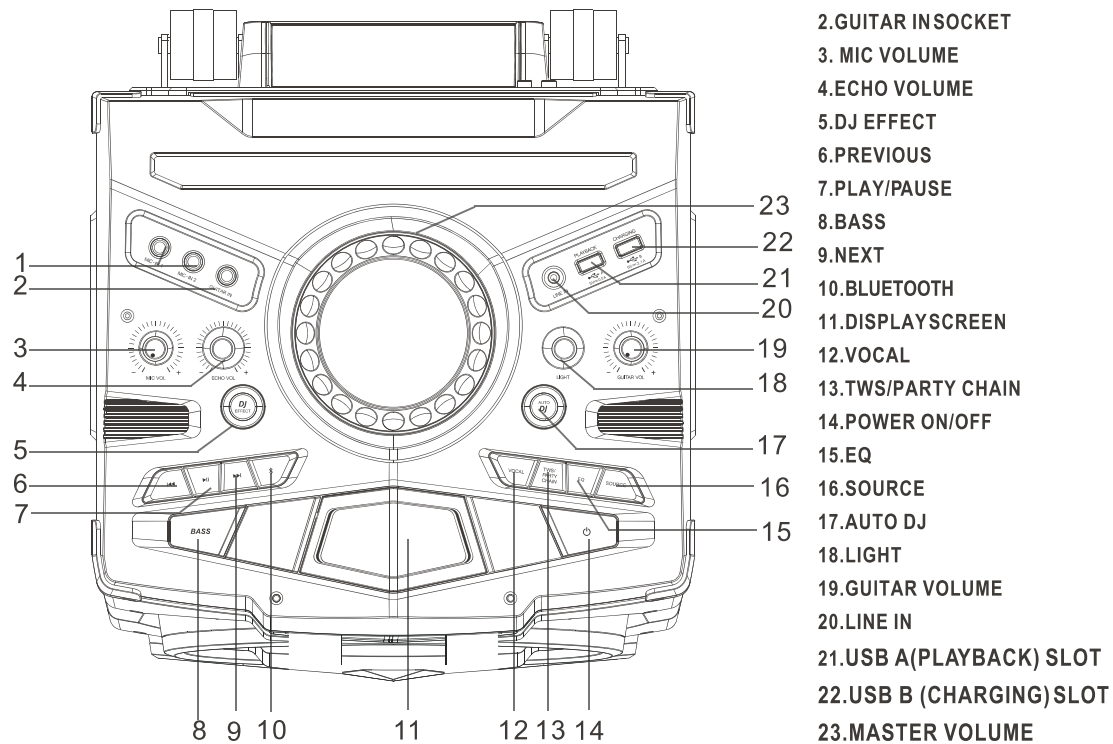

## Panel

---
 
### REAR PANEL:

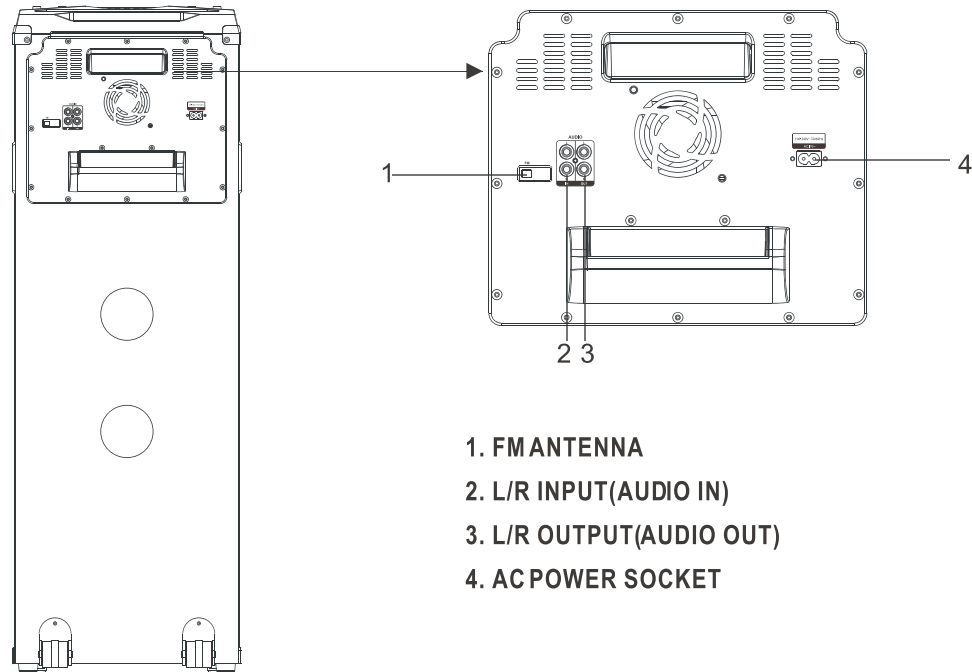

- 1. FM ANTENNA
- 2. L/R INPUT(AUDIO IN)
- 3. L/R OUTPUT(AUDIO OUT)
- 4. AC POWER SOCKET

## Connections

---

### LINE IN/AUDIO IN

This unit has two audio input terminals. You can input the analogue stereo audio signals from extra devices such as VCD, CD, VCR, MP3 player, etc.

Use the audio cable (not included) to connect the input terminal **LINE IN/AUDIO IN (L,R INPUT)** on the top panel/on the rear panel of the unit, press [SOURCE] button to switch to the LINE IN /AUDIO IN mode when the display screen on the unit appears "LINE"/"AUDIO".

### Bluetooth Connection

The bluetooth pairing mode of the unit is JBL PARTY XPERT, press [SOURCE] button on the top panel to switch to the corresponding signal source, the bluetooth icon (📶) will be flashing quickly on the display screen, the party speaker is in searching bluetooth signal status, use your mobile phone to search the bluetooth signal of the unit, then input the password 0000 if necessary, the unit will synchronize to play songs on your mobile phone while the display "BT" on the display and the bluetooth icon (📶) keep solid light on the display screen means to connect successfully.

Disconnect the bluetooth on the mobile phone to switch off the bluetooth connect.

The bluetooth is connected to your audio device successfully for the first time, power off the player then power on, the speaker will reconnect automatically. press [PLAY/PAUSE] to resume the playback.

Note:

- Bluetooth connection range in 10 meters.
- The model JBL PARTY XPERT in your device was not deleted.
- In bluetooth mode, [PLAY/PAUSE], [VOLUME], [MUTE] etc. are also active.

## Connections

---

### TWS Connection

- This TWS (TRUE WIRELESS STEREO) bluetooth connection only use between the same two speakers.
- Power on both speakers, press and hold TWS button on both speakers simultaneously, the both speakers will display ON-TWS on the display screen and press next/previous button to select between HOST and SLAVE, wait a few seconds to pair automatically, once connected successfully, the display HOST on the display of the speaker is configured as the master, the other display SLAVE on the display of the speaker is configured as the slave.
- Enable your bluetooth device and make sure it is in searching mode.
- Select "JBL PARTY XPERT" from the list of discovered devices and connect to it.
- The master speaker will act as the left channel during TWS and will receive the bluetooth signal, the other speaker will act as the right channel to play music.
- Press and hold TWS button to disconnect the HOST and the SLAVE speaker connection in TWS connection mode.

### PARTYCHAIN

Use an AUDIO RCA (not included) cable to connect the AUDIO L/ROUT sockets of this party speaker to another active speaker's AUDIO L/R IN sockets.



# Basic Playback

## TOP PANEL FUNCTION OPERATION

POWER ON/OFF



● Press to switch on/off the unit.

SOURCE



● Press repeatedly to select a signal source Bluetooth ,USB ,RADIO FM ,LINE IN or AUDIO IN mode.

BASS



● Press to enter BASS ON sound effect mode, press it again to enter to BASS OFF mode.

BT



● Press to enter the BT (bluetooth) mode.

TWS/  
PARTY CHAIN



● Press repeatedly to switch among in LEFT PARTY SPEAKER ,RIGHT PARTY SPEAKER and STEREO PARTY SPEAKER.

● Hold down to switch between TWS ON and TWS OFF .

LIGHT



● Press repeatedly to switch the different lighting mode of LED indicator light on the speaker (such as LED\_1, LED\_2, LED\_3, LED\_4, LED\_5, LED\_6 and OFF).

● Use the light knob also to adjust the different lighting colour of LED indicator light on the speaker in LED\_1 or LED\_2 lighting mode.

● Press and hold to switch BLINK ON or BLINK OFF for the wall and floor flashlight function.

▶||



● Press to temporarily pause a playback; press it again to resume the playback.

● Hold down to disconnect bluetooth connection in bluetooth connection mode.

▶▶|



● Press to skip to the next track.

◀◀














● Press to return to the previous track.

AUTO DJ



● Press repeatedly to switch the different AUTO DJ sound mode among in DJ A1, DJ A2, DJ A3 and OFF.

## Basic Playback

- VOCAL**  

- Press to turn VOCAL effect ON or OFF.
- EQ**  

- Press repeatedly to switch the different(BASS OFF mode only) equalizer mode SAMBA, POP, BALANCE, FUNK, ROCK, JAZZ.
- DJ EFFECT**  

- Press to switch the diffeccent DJ effect mode and rotate the master volume knob to demonstrate the differnt DJ effect sound.
- MASTER VOLUME KNOB**  

- Use the master volume knob to adjust the volume value of the speaker.
- MIC VOL**  

- The volume that is used for sing or making announcements can be adjusted via the microphone volume knob.
- MIC ECHO**  

- The microphone echo volume that is used for sing or making announcements can be adjusted via the microphone echo volume knob.
- GUITAR VOL**  

- The volume of your connected instrument can be controlled by guitar volume control knob on the top panel.
- MIC SOCKET**  

- An external microphone can be connected via microphone socket stereo jack for sing or for making announcements.
- GUITAR SOCKET**  

- The guitar socket on the top panel is used to connect an instrument.
- USB A SLOT**  

- USB storage devices can be connected to the USB A SLOT on the top panel for MP3 music
- USB B SLOT**  

- The external devices can be connected to the USB B SLOT on the top panel for charging(Note:the USB B SLOT can not be used to play music only available for charging for external device. Output: 5Vdc / 2.1A

## Basic Playback

---

### USB DRIVE PLAYBACK

● Insert a USB drive into the USB slot on the top panel, press [SOURCE] button on the top panel to select USB mode and the unit will play start automatically the MP3 track in connected USB drive, if play does not start automatically, press [play/pause] button on the top panel . Capacity: **64GB**. Format: **FAT32**.

### MICROPHONE PLAYBACK

● Insert two microphones into the microphone socket on the top panel and adjust to a low level use the microphone volume knob on the top panel.

● Adjust the microphone volume and echo level to your desired level use the microphone volume knob on the top panel.

Now ,enjoy the karaoke singing!

### Tuner Operation

The following buttons are used in tuner mode. Press [SOURCE] repeatedly to select RADIO(FM) mode.

PLAY/PAUSE



● Hold down to do auto scanning for the broadcasting radio channels, press it again to stop auto scanning

● Press to switch between preset station and frequency.



● Press to skip to the next preset station when the display screen appear station in the tuner mode.

● Press to fine tune (increase) the frequency manually when the display screen appear frequency in the tuner mode.



● Press to skip to the previous preset station when the display screen appear station in the tuner mode.

● Press to fine tune (decrease) the frequency manually when the display screen appear frequency in the tuner mode.

**NOTE:** In Tuner mode, [VOLUME+/-], etc buttons are also active.

---

## Troubleshooting

---

Before resorting to maintenance service, please kindly check by yourself with the following chart.

Symptom	Cause(s)	Remedy
<b>No Power</b>	●The AC power cord is not connected to the power supply or is not connected to a power supply securely.	●Please check that the AC power cord is connected securely.
<b>Sound</b> There is no sound or the sound is distorted.	●The volume is set to the minimum level.	●Turn up the volume.
<b>The buttons on the unit doesn't work.</b>	●The unit is being interfered with static electricity etc.	●Switch off and unplug the unit. Then connect the plug to the power supply and switch it on again.

## Specifications

Power supply		AC ~100-240V, 50/60Hz
Power consumption		500W
Working environment	Temperature	0~+35℃
	Relative humidity	5%~90%
Amplifier power output		350W RMS
FM tuner band range		87.5MHz-108MHz
Frequency response		± 3dB(50Hz~20kHz)

---