



WIND

&]b`%!`Cb`h YfcUX`UbX`cb`h Y[c`gdYU_Yf



Owner's manual

Product Overview

Ó[]*iæ |æq̄ }•Á{ |Á~ |&@æ^Á-ÁY @ÖÄV[Á)•~ |^Áá[|] ^iÁ•^Á-ÁY @Ö
] |^æ^Á^æáÁ@Á á } æÁ^{| ^Á[~ ÁæóÁ Á•^É[É] [É] |^æ^Áæ^ | Á^ ^
@Á á } æÁ{| Á~ c |^Á^~| ^) &^Áá áÁ[~ à|^Á @[ç *É

Package Contents

1. 1x WIND BT Speaker main unit
2. 1x USB charging cable
3. 1x Aux cable
4. 1x Carabiner
5. 1x Bracket
6. 1x User's manual

Compatibility


The product is compatible with BT enabled devices, including I phone, I Pad, I Pod, Android Phone, tablets and etc. It is also compatible with devices which have 3.5mm earphone jack to connect to the product.

Features

- Wireless and To-Go
Easy connection with your electronic devices wirelessly and use it portably. The wireless working range is around 8-10 meters (30 feet), no cords and no hassle.
- Hand free calling on-the-go
With a built-in microphone, the unit takes on your calls just free and easy.
- 2-in-1 design for use in bicycle and backpack

- Carabiner and bicycle bar mounter with bracket are provided for two uses in carrying it over.

Product Interface

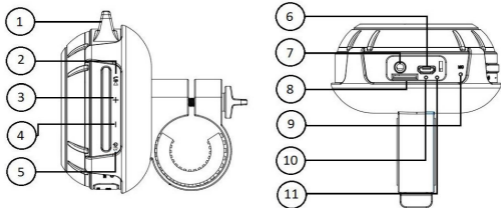

- (1) Handle for hanging a carabiner
- (2) Play/pause (BT, aux and micro SD / TF), FM Scan and Mute (Radio)
- (3) Volume + (Long press) - All functions
Next (Short press) - BT, micro SD / TF and radio functions
- (4) Volume – (Long press) - All functions
Lap (Short press) - BT, micro SD / TF and radio functions
- (5) "ON / OFF" and "Source" button (BT, aux, micro SD TF and radio)
- (6) Connection for USB charging
- (7) AUX input
- (8) Micro SD / TF Card
- (9) Microphone
- (10) LED battery charge indicator
- (11) BT connection LED indicator

Getting Started

Two easy steps to get your JBL WIND ready to enjoy.

Step 1: Charging before use

Connect your WIND BT Speaker to a USB power source using the enclosed USB charging cable.

Step 2: Connecting to play

● BT connection

1. Turn on the speaker. Press the power button (marked with a power symbol) to turn on the speaker. The speaker will start to charge and the LED indicator will be red.

2. Turn on your smartphone or tablet. Go to the Bluetooth settings and search for "JBL WIND".

3. Tap on "JBL WIND" to connect. The speaker will be connected to your device and you can start playing music.

● FM Radio connection

1. Turn on the speaker. Press the power button (marked with a power symbol) to turn on the speaker. The speaker will start to charge and the LED indicator will be red.

2. Turn on your smartphone or tablet. Go to the FM Radio settings and search for "JBL WIND".

3. Tap on "JBL WIND" to connect. The speaker will be connected to your device and you can start playing FM radio.

● Direct Connection

1. Turn on the speaker. Press the power button (marked with a power symbol) to turn on the speaker. The speaker will start to charge and the LED indicator will be red.

2. Turn on your smartphone or tablet. Go to the Direct Connection settings and search for "JBL WIND".

3. Tap on "JBL WIND" to connect. The speaker will be connected to your device and you can start playing music.

● Micro SD / TF card

1. Turn on the speaker. Press the power button (marked with a power symbol) to turn on the speaker. The speaker will start to charge and the LED indicator will be red.

2. Insert a Micro SD / TF card into the speaker. The speaker will start to play music from the card.

Speaker Phone

After paired your mobile phone to WIND with BT, the speaker phone function can be used.

- Make call: Call will automatically transfer to the speakerphone. If not, tap play/pause button;
- Answer call: Tap play/pause button to answer the incoming call;
- End call: Tap play/pause button during the call to end the call;
- Reject call: Hold play/pause button to reject the incoming call;
- Redial last number: Double tap play/pause button to redial last number when it is not in a call.

Charge

When the power is low, a beep will comes out from the speaker, please charge the speaker when you hear the beep.

1. Connect the standard USB end of the supplied USB cable to a USB power source (like PC, USB power adapter...etc.);
2. Connect the Micro USB jack to the USB charging port in the unit. The charging indicator will light up while charging;
3. It will take about 2 hours to fully charge the BT speaker;
4. The LED indicator will stay on while charging, and goes off after fully charged.

Note: *if the unit is not used longer than 7 days, please charge the unit for 10 minutes before turn on the unit.*

Connection

Laptop / notebook / PC

As the BT versions for these types of devices vary greatly, the connection methods will differ as well. If you cannot connect with the WIND BT Speaker using the previous method instructed, you may need to install a new version of the BT driver.

Please refer the instructions of device for details.

Technical parameters

Note: All specifications are subject to change without notice.

Product name: Wind

Ú[, ^!ÁÛ]] | ^ÁVÚÓÁ XÉFCE

Ó ăăă Šăăă { ÁŦ } Áăăă ^! ^Á Ę XÁ €€ @

U ˘ đ ˘ ó [, ^! ^Á Y ÁÛ T Û

ÓVÁU! [ă ÁÛ]] [! ă á k Ŧ ÖÜ Ę K Ü Ö U

ÓVÁ ^! ă } ^Á Ę

Y [! ă * Áă * ^Á] Á Ę F €

Y [! ă * Áă [•] @ ! ^Á Ę » ÓÁ € » Ó Á Ę Ę Á Ę Ę Á Ü P

T ^ { [! ^ Áă á Áă } áă Ę Á Ę Ó Ó

SPL Max: 80dB

Ŧ ! Á Ŧ Ŧ Ŧ Á Ŧ @ Á Ŧ } } ^ & á } • Á Ŧ ç ^! Á Ŧ [• ^ á D

Maintenance

Please follow the instructions below before cleaning the unit:

- Power off the unit first before clear
- Use a soft, dry, lint-free cloth to wipe gently
- Do not use alcohol, benzene, thinners or other chemical detergents as these can cause the casing to be warped or discolored

Storage

- If the unit will not be used for an extended period of time, power off the unit and place the unit with accessories into the package
- Do not set the unit in a damp, high temperature or a sun point-blank place

Troubleshooting

Issue: Pairing is unsuccessfully after multiple attempts

Solution:

- Check if the BT indicator light is on. If the indicator light is off, please press the power button to turn the unit on. If the BT indicator light still doesn't come on after pressing the power button, please charge the unit.

- Check for other BT devices around the surroundings that may interfere with searching and turn devices off.
- Power off and then power on the unit to restart the BT function of the unit or your BT device.
- Unplug any cables plugged into the AUX IN, restart all devices and then attempt pairing again.

Issue: Interference or static during playback

Solution:

- Avoid using the device between concrete or other building structures that may interfere with the signal.
- Please check if the battery level of the unit and the BT device and charge if necessary.

Issue: Radios are not working well.

Solution:

- Check that the radios have been scanned according to instructions on page 4

Safety Instructions

This product is specially designed based on the full attention to safety; in order to make sure the accident free operation, please abide by the guidelines listed below:

- Always position the unit on a stable and level surface. Unstable surface can cause the unit to topple and fall, resulting in possible damage or injury;
- Do not drop, unpack, open, beat, curve, prick and burn the unit;
- Avoid using the unit nearby basins or sinks where it may come in contact with water;
- Do not place any ware with full water on the top of the unit, such as vase, glass, pot, and please avoid placing candle on the speaker surface as well;
- Protect the using of the unit from any overheating devices (such as radiator, heating installation, cooking stove or other heating devices);

- Regardless of what reasons cause the unit damage, have the repair performed only by an authorized JBL dealer or service center;
- If you want to do the cleaning, please turn off the unit and unplug the power cable from the outlet first;
- Set the volume properly to prevent injury to the unit and your health;



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

WARNING:

- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Warning: WIND is designed as multipurpose speaker which includes common and casual use on a bicycle as an entertaining device. We are not liable to risk

ã Á•ã *Á Ð ÖÁ @^Á [~ Áã ^Á) Áãã & ^Á |Á] ^^ áÁãã * ÉÖT ÝÁ ^! -! { } & É
á [,) Áã |Áãã * Éã { }] ã * Áã áÁã ÖÉÜ ^ã ^Áã, æ • Á • ^Á Ð ÖÁ) Áãã á ^Á Áãã } ^!
[-Á æ ^Áããã * É



HARMAN International Industries, Inc.

Headquarters:

400 Atlantic St.

Stamford, CT 06901 - USA.

www.harman.com

© 2017 HARMAN International Industries, Incorporated. All rights reserved.
Harman do Brasil Indústria Eletrônica e Participações Ltda. is a trademark of
Harman International Industries, registered in the United States and/or other
countries. Features, specifications and appearance are subject to change without
notice.