
INTERTEK TESTING SERVICES

EXHIBIT 7

INSTRUCTION MANUAL

INTERTEK TESTING SERVICES

7.0 Instruction Manual

Attached is a preliminary copy of the Instruction Manual.

FCC information to user can be found in this manual.

This manual will be provided to the end-user with each unit sold/leased in the United States.

ELMO ROBOT

MADE IN CHINA

©1997 TYCO PRESCHOOL TOYS, INC.

A SUBSIDIARY OF MATTEL, INC. NEW YORK, N.Y. 10010

©1997 CHILDREN'S TELEVISION WORKSHOP. SESAME STREET MUPPETS

©1997 THE JIM HENSON COMPANY. ALL RIGHTS RESERVED.

CONFORMS TO EN71 AND ASTM F963 AT DATE OF MANUFACTURE.

**WARNING: TO AVOID SUFFOCATION, KEEP THIS
AND ALL OTHER PLASTIC BAGS AWAY FROM BABIES AND CHILDREN.
DO NOT USE IN CRIBS, BEDS, CARRIAGES OR PLAYPENS.
THE THIN FILM MAY CLING TO NOSE AND MOUTH
AND PREVENT BREATHING.**

**HOW TO OPERATE: LOCATE THE SWITCH ON THE BACK OF THE ROBOT
AND TURN IT ON. THE ROBOT WILL BEGIN TO ROTATE IN PLACE.
PRESS THE LARGE BUTTON ON THE RADIO CONTROL TRANSMITTER TO
MAKE THE ROBOT MOVE IN A STRAIGHT LINE. ELMO AND THE SPACE SHIP
ARE REMOVABLE FROM THE TOP OF THE ROBOT. AFTER PLAY, ALWAYS
SHUT THE ROBOT OFF TO PRESERVE BATTERY LIFE.**

MATERIALS: PLASTIC**TO REMOVE OR INSTALL BATTERIES ON TRANSMITTER AND ROBOT:**

**1. LOOSEN SCREW AND LIFT OFF BATTERY BOX COVER. 2. INSERT (2) AA BATTERIES
FOR ROBOT AND (1) 9 VOLT BATTERY FOR TRANSMITTER INTO BATTERY COMPARTMENT
CAREFULLY NOTING THE DIRECTION OF THE (+) AND (-) SYMBOLS AS SHOWN
IN COMPARTMENT. 3. REPLACE THE COVER AND TIGHTEN THE SCREW.**

CAUTION

- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
- RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE PRODUCT BEFORE THEY ARE CHARGED.
- IF REMOVABLE RECHARGEABLE BATTERIES ARE USED, THEY ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.
- DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NICKEL-CADMNIUM) BATTERIES.
- DO NOT MIX OLD BATTERIES AND NEW BATTERIES.
- ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
- BE SURE TO INSERT BATTERIES WITH THE CORRECT POLARITIES AND ALWAYS FOLLOW THE TOY AND BATTERY MANUFACTURERS' INSTRUCTIONS.
- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE PRODUCT.
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

SHOULD THIS PRODUCT CAUSE LOCAL
ELECTRICAL INTERFERENCE WE RECOMMEND
MOVING IT AWAY FROM OTHER EQUIPMENT.

**PLEASE NOTE: FOR BEST RESULTS, ALWAYS USE ALKALINE BATTERIES.
BE SURE TO CHECK THE EXPIRATION DATE BECAUSE FRESH BATTERIES
WILL ENSURE UNINTERRUPTED USAGE/ENJOYMENT OF THE PRODUCT.
REMOVE THE BATTERIES IF THE PRODUCT WILL NOT BE USED FOR AN
EXTENDED PERIOD. IF THE PRODUCT DOES NOT PERFORM AS EXPECTED,
CHECK FOR PROPER BATTERY CHARGE AND CORRECT BATTERY
INSTALLATION, OR TRY A FRESH SET OF BATTERIES.**

**WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY
APPROVAL BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID
THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**