

Optional Accessories

Available optional parts:

- BPRP1100-Battery Pack, 7.2V, 1100mAh
- SMRP-Speaker Microphone
- BCRP-Battery Charger



Troubleshooting

| Trouble | Solution |
|---|--|
| No power | <ul style="list-style-type: none"> • Battery may be used up. Please change battery or recharge it. • Probably, battery is not properly installed. Remove the battery and install it again. |
| Power doesn't last long even if fully charged | Battery may be out of use, please replace it with new battery. |
| Can't talk to or hear other users in your group | <ul style="list-style-type: none"> • Make sure you are using the same frequency and CTCSS/DCS tone as the other users in your group. • Other group users may be too far away. Make sure you are within range of the other transceiver. |
| Other voices (Non-group users) are present on the channel | <ul style="list-style-type: none"> • Change CTCSS/DCS tone. Be sure to change the tone on all transceivers in your group. |