

The EUT don't interfaces with PC (Personal Computer).

System Configuration Diagram

- ◆ RTMS Application Program
- ◆ PIZM(PC Interface ZigBee Module) : 1 Set
- ◆ SIZM(Sensor Interface ZigBee Module) : Maximum 4 sets



2012-01-09

15

