

1. Apply Audio Signal 400mVrms into Audio L/R of the FM transmitter box.
2. Select the frequency to transmit (Channel 1 : 88.7 MHz, Channel 2 : 89.1 MHz) then search the Car FM Radio to receiver the concern frequency.