


VOH10FR  **READY**
10.2" OVERHEAD LCD
MONITOR

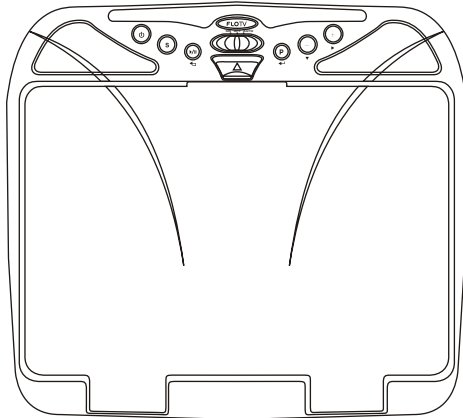

OPERATION
MANUAL



128-8826

Important Notice

Installation of overhead products requires careful planning and preparation. Be extremely careful when working on a vehicle with side curtain air bags. Do not route wires near any portion of the side curtain air bag assemblies. This includes any anchor points in A, B, C or D pillars of the vehicle. Routing wires in these areas or running wires by the side curtain air bags can prevent the side curtain air bag from fully deploying which can result in personal injury to vehicle occupants. If you have any questions regarding wire routing in a vehicle, please contact Audiovox Technical Support at 1-800-225-6074.

When connecting power and ground in a mobile video installation ensure that the ACC wire is fused at the point where it is connected to the vehicle ACC wiring. Failure to do so can result in damage to the vehicle if a short circuit develops between the vehicle connection point and the mobile video product.

An LCD panel and/or video monitor may be installed in a motor vehicle and visible to the driver if the LCD panel or video monitor is used for vehicle information, system control, rear or side observation or navigation. If the LCD panel or video monitor is used for television reception, video or DVD play, the LCD panel or video monitor must be installed so that these features will only function when the vehicle is in "park" or when the vehicle's parking brake is applied.

An LCD panel or video monitor used for television reception, video or DVD play that operates when the vehicle is in gear or when the parking brake is not applied must be installed to the rear of the driver's seat where it will not be visible, directly or indirectly, to the operator of the motor vehicle.

Warnings

- Do not use any solvents or cleaning materials when cleaning the video monitor.
- Do not use any abrasive cleaners, they may scratch the screen.
- Use only a lightly dampened lint free cloth to wipe the screen if it is dirty.
- Lock the LCD screen in the fully closed position when not in use.
- Before putting on headphones always adjust the volume setting to the lowest position.
- Remember to leave the dome light switch in the off or auto positions when the vehicle is unattended, as the dome lights, if left on, can drain the vehicle's battery.
- Do not put pressure on the screen.
- Caution children to avoid touching or scratching the screen, as it may become dirty or damaged.

Licensed under one or more of the following patents,
Patent NOS. 5,775,762 , 5,927,784 and 6,678,892

Congratulations

Congratulations on your purchase of the AUDIOVOX VOH10FR DVD Player with Drop-Down Video / Monitor. The VOH10FR has been designed to give you and your family many years of video entertainment in the mobile environment. Please read the directions that follow to familiarize yourself with the product to ensure that you obtain the best results from your equipment.

Please note: Installation options vary, see the individual owner's manuals for each component in your system to obtain a full understanding of each component's operation.


Safety Precaution

For safety reasons, when changing video media it is recommended that the vehicle is not in motion, and that you do not allow children to unfasten seat-belts to change video media or make any adjustments to the system. System adjustments can be accomplished using the remote control, while seat-belts remain fastened. Enjoy your AUDIOVOX entertainment system but remember the safety of all passengers remains the number one priority.

FEATURES

- 10.2" TFT (Thin Film Transistor) Active Matrix LCD (Liquid Crystal Display) Monitor.
- OSD (On Screen Display) for Control of Picture Quality and Functions.
- Single Channel Infrared Transmitter for IR Wireless Headphones.
- Five Audio/Video Source Inputs (FLO TV, USB, CMPT, AV and AUX).
- Dome Lights with Built-in Three Way Switch.
- Built-in 16 Channel Wireless FM Modulator.
- Screen Mode Selection (4:3, 16:9).
- Full Function Remote Control.
- Backlit Controls.
- 1 AV Output via RCA Pigtail.
- FLO TV Ready.

CONTROLS AND INDICATORS DIAGRAM (FRONT VIEW)

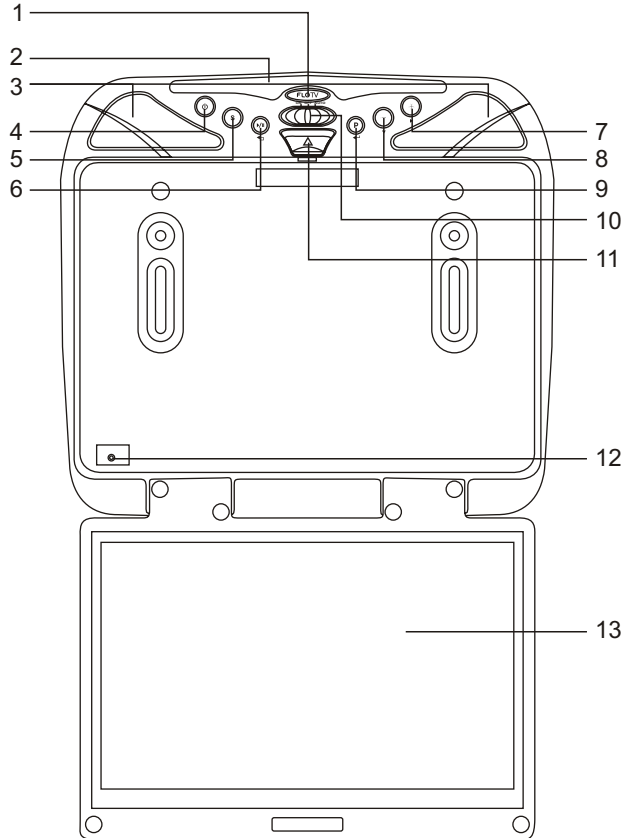

1. FLO TV Control

This control is direct local key to function with FLO TV. The mode LED will change from white to purple when the FLO TV is connected.

2. Infrared Transmitter and Sensor

Transmits audio to wireless headphones, allows the remote control to operate the VOH10FR and to control other accessories in the system.

3. Dome Lights

Provide additional interior illumination.

4. POWER (⏻) Control

Used to turn the system on/off.

5. Source Select

Use to select one of the five sources: FLO TV, USB, CMPT, AV and AUX.

6. PLAY (▶) / PAUSE Button (⏸) / BACK (⏪) Control

a.) PLAY (▶)

This control is used to start playback of a multimedia file.

b.) PAUSE Button (⏸)

Press to pause playback. Pressing the PAUSE button again or pressing the PLAY Button will resume normal playback.

c.) BACK Button (⏪)

Press and hold the button when user back one screen.

7. (+) Button / CURSOR (▶) Control

a.) (+) Button

- Press and hold the (P) button to adjust the control by + (increase).
- Use these buttons for channel changing (up), navigating menus and selecting items in FLO TV mode.

b.) CURSOR (▶) Control

This button is only active for USB mode. Selecting your favorite by cursor (▶) and press “OK” button on your remote control or press (←) button on unit. Information slide show will begin while playing your favorite file.

8. (-) Button / CURSOR (▼) Control

a.) (-) Button

- Press and hold the (P) button to adjust the control by – (decrease).
- Use these buttons for channel changing (down), navigating menus and selecting items in FLO TV mode.

b.) CURSOR (▼) Control

This button is only active for USB mode. Selecting your favorite by cursor (▼) and press “OK” button on your remote control or press (←) button on unit. Information slide show will begin while playing your favorite file.

9. (P) PICTURE Button / (↵) ENTER Control

a.) (P) PICTURE Button

Press and hold the (P) button until monitor display picture adjustment mode for (BRIGHTNESS, CONTRAST, COLOR, TINT & RESET)

b.) (↵) ENTER Control

For USB mode, used to implement a selected setting.

10. Three Position Dome Light Switch

ON - Turns on the dome lights.

OFF - The dome lights will not turn on in this position.

AUTO - Automatically switches on the dome lights in Conjunction with the vehicle's interior illumination.

11. Screen Release


Moves in direction of the arrow to release the drop down screen.

12. LCD Cut Off Switch

Used to turn off the LCD monitor when in the closed position.

13. LCD Panel

CONTROL FUNCTION DESCRIPTION (SIDE VIEW)

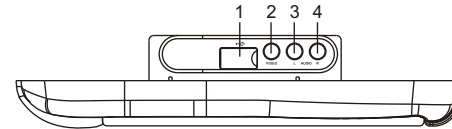

1. USB INPUT FOR USB MEMORY DEVICE

Allows for the connection of an USB or memory device..

2. Auxiliary Video Input

3. Auxiliary Audio Left Input

4. Auxiliary Audio Right Input

ACCESSORIES

WIRELESS HEADPHONES

The VOH10FR includes a built-in infrared transmitter for use with the supplied wireless headphones. The headphone volume is adjusted using the controls on each headset. Any number of wireless headphones may be used but they must be used within a line of sight from the transmitter, as infrared transmissions, like visible light travel only in a straight line. See the documentation accompanying your wireless headphones.

SOURCE FEATURE

FLO TV

The VOH10FR is designed to function with FLO TV. This function control is available when the overhead unit is used with an optional plug in FLO TV Harness and FLO TV Module. Once the FLO TV Harness and FLO TV Module are connected press the source button until the screen displays FLO TV. For specific instructions refer to Appendix A ,FLO TV.

USB

USB Port is built-in on the right side of the unit. Version 2.0 and supported multimedia. Also charging IPOD when it is selected to AUX mode.

CMPT

CMPT (Y Pb Pr) Input, Supported 480i/P, 576i/P and 720P.

AV

The AV input may be connected to a external video source, video game system, or other audio / video devices. To access the audio/video inputs, turn the unit on and press the S (source) button on the VOH10FR or the Source button on the remote control until "AV" is displayed on the screen. Turn the video source component on with its power button or remote control and it is now ready to play the audio and video signals from the source connected .

Note: AV sources are available only if pre-installed during your video product installation.


AUX

The AUX input may be connected to an external video source, video game system, or other audio/video devices. To access the audio / video inputs, turn the unit on and press the S (source) button on the VOH10FR or the Source button on the remote control until "AUX" is displayed on the screen.

IPOD Playback & Charging

For iPod playback & charging the unit must be selected to AUX source and user can play the iPod thru the AUX input and at the same time charge the iPod thru the USB. But must use original Apple Composite AV Cable.

REMOTE CONTROL OPERATION

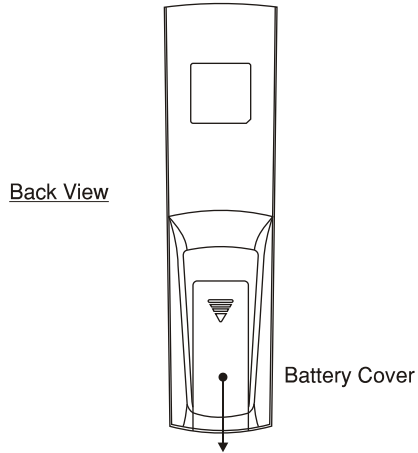


Battery Installation

Before attempting to operate your Remote Control, install the batteries as described below.

- 1) Turn the Remote Control face down. Using your finger, slide the battery cover off in the direction of the arrow.
- 2) Install Two "AAA" batteries. Make sure that proper polarity (+ or -) is observed.
- 3) Align the cover tabs with the remote control and slide the cover until it locks.

The remote control will operate the VOH10FR It is not a universal remote control and will not control equipment from other manufacturers.

MAIN FUNCTION OPERATION

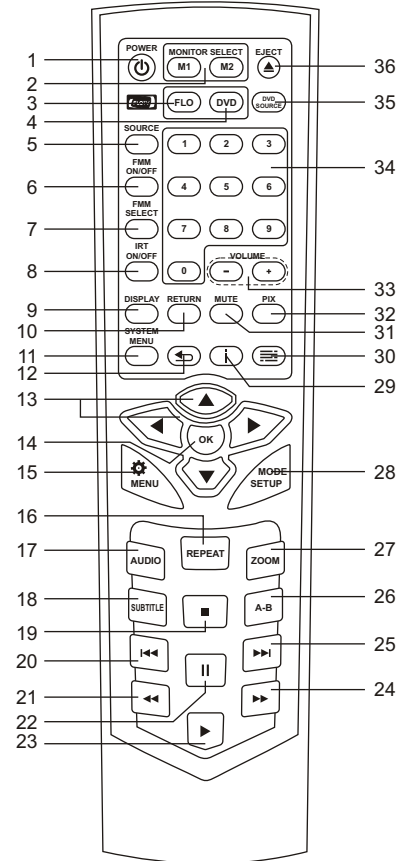

- * Function control is available on the unit and the Remote Control.
- ** Function not available in this model.
- *** FLO TV function only available when optional FLO TV module is installed.

Note: Refer to Appendix A FLO TV for FLO TV operating instructions..

1. POWER Button*

Press this button to turn the unit ON and OFF.

2. MONITOR SELECT Button

M1 Button – Sets the remote control code to allow control of the unit set to M1 mode.

M2 Button** – Sets the remote control code to allow control of the unit set to M2 mode.

3. FLO TV Button***

Press this button to access the FLO TV mode. Also switches the function keys on the remote control to correspond to FLO TV functions.

4. DVD Mode Select Button

Press this button when playing multimedia file. Switches certain function keys on the remote control for multimedia file functions.

5. SOURCE Button*

Each time the button is pressed, the unit will select various sources in the following sequence:(FLO TV, USB, CMPT, AV and AUX).

6. FMM ON/OFF Button

Turns the FM Modulator on/off.

7. FMM SELECT Button*

Select the wireless FM Modulator Frequency:

(**CH1** 88.1MHz, **CH2** 88.3MHz, **CH3** 88.5MHz, **CH4** 88.7MHz, **CH5** 88.9MHz, **CH6** 89.1MHz, **CH7** 89.3MHz, **CH8** 89.5MHz, **CH9** 89.7MHz, **CH10** 89.9MHz, **CH11** 90.1MHz, **CH12** 90.3MHz, **CH13** 90.5MHz, **CH14** 90.7MHz, **CH15** 90.9MHz, **CH16** 91.1MHz).

8. IRT ON/OFF Button

Turns the Infrared Transmitter ON or OFF for IR Wireless Headphones.

9. DISPLAY Button

Press to display the current multimedia file information while the multimedia file is playing.

10. RETURN Button

Press for return to previous page/ previous menu.

11. SYSTEM MENU Button

Allow the user to access the system menu. Press cursor (▲▼) buttons to select desired PICTURE, FMM , OSD LANGUAGE, SOURCE DEFAULT FLO and SCREEN MODE during power up.

12. BACK Button ***

When in FLO TV mode takes the user back one screen when in the Menu, Show Information, Show Description, or Guide. Path ends at full screen TV.

13. CURSOR Button (▲▼◀▶) ***

Use these buttons to access menu selections on the screen in DVD mode. Use these buttons for channel changing (up/down), navigating menus and selecting items in FLO TV mode.

14. OK Button (ENTER)***

Used to implement a selected setting or menu option.

15. MENU / SETTINGS Button

a.) MENU Button

Pressing the MENU button to display the HOME Page Menu.

Note: Pressing the FLO TV button will access the FLO TV mode and disable the USB functions.

b.) SETTINGS Button (⚙️) ***

When in FLO TV mode the Settings button allows user to toggle the FLO TV settings menu on/off.

16. REPEAT Button

Allows the user to repeat a selected repeat one / repeat all.

17. AUDIO Button

Press to display and select Audio changing audio to L/R/ Stereo.

18. SUBTITLE Button

Press to display and select the subtitle language in movie mode. Each time you press the button, the subtitle language changes.

Note: The type and number of languages for subtitle vary from disc to disc.

19. STOP Button (■)*

Press the STOP button once to stop playback. (Playback will resume from the point it is stopped).

Press the STOP button twice to stop playback. (Playback will resume from the beginning of the disc).

20. PREVIOUS Button (⏮)

Press to return to the previous file or previous page.

21. SCAN BACKWARD Button (⏪)

Press to search in a backward direction. Press repeatedly to change the search speed from x2, x3, x4 times the normal speed.

22. PAUSE Button (II)

Press to pause playback. Pressing the PAUSE button again or pressing the PLAY Button will resume normal playback.

23. PLAY Button*

Press to activate the play mode while a multimedia file is loaded in the multimedia file compartment.

24. SCAN FORWARD Button (▶▶)

Press to search in a forward direction. Press repeatedly to change the search Speed from x2, x3, x4 times the normal speed.

25. NEXT Button (▶▶)

Press to skip to the next file or next page.

26. A-B Button**

Allow user to repeat disc playback from point A to point B.

Press A-B button

Once

Twice

3 Times

On-Screen Display

Repeat A-

Repeat A-B

AB Off

DVD Player

Mark the beginning of the section to repeat (Set point A)

Mark the end of the section to repeat (Set point B)

Cancel the A-B repeat function

27. ZOOM Button

Press this button to enlarge the picture when playing a movie.

Press ZOOM button

Once

Twice

3 times

4 times

DVD player perform

Enlarge the picture 2 times of the original size

Enlarge the picture 4 times of the original size

Enlarge the picture 8 times of the original size

Picture is returned to original size

28. MODE / SETUP Button

a.) MODE Button

When in FLO TV mode pressing the MODE button toggles between FLO TV and an auxiliary A/V source attached to the FLO TV module. (**NOTE:** *your system may not have an auxiliary source*).

b.) SETUP Button

When in DVD mode pressing the SETUP button will display the SETTINGS which allows the user to change the options such as Language, Slideshow duration, Slideshow mode, Music repeat mode, Movie repeat mode, Autorun & Default. Refer to the settings and adjustment section for more information.

29. INFORMATION Button () ***

Pressing this button displays the Channel Info bar and the Program Description. When in FLO TV mode pressing the button opens the Channel Info bar. The second button press while Channel Info bar is displayed will provide program information. To return to the FLO TV program press the button again.

30. CHANNEL GUIDE Button ()***

When in FLO TV mode pressing this button allows the user to turn the Channel Guide on and off. The Channel Guide opens with the current channel and show title highlighted.

31. MUTE Button

Press this button to mute the audio for wireless FMM and IR headphones.

Pressing the button again restores the sound to the previously set level.

32. PIX Button (Picture Select)Button

Each time this button is pressed, the on screen picture adjustment displays the “adjustment bar” for BRIGHTNESS, CONTRAST, COLOR, TINT or RESET. Once the desired adjustment bar is displayed, use the VOLUME (+) / VOLUME (-) button to adjust the setting. The display will automatically turn off if no adjustments are made within 6 seconds.

33. VOLUME DOWN (-) or UP (+) Button**

Press to decrease or increase the volume of the wired headphones. Press to decrease or increase the level of the picture settings.

The settings are available after the picture select button is pressed.

34. NUMBER Buttons**

When DVD mode these buttons allow the user to enter numbers 0 to 9 for selection of selection of CD tracks, DVD chapters and password. When FLO TV mode these buttons allow the user to select favorite channels and for PIN entry for parental controls. ***

35. DVD Source Button**

This button is only active when remote control is in DVD mode. Each time the button is pressed one of the sources (DVD or USB) will be selected. If the USB is not plugged in, the unit it will remain on DVD Source. Plug in a USB memory device and press to change source from DVD to USB.

36. EJECT (▲)**

This button is used to eject the disc.

MENU ADJUSTMENT

The System Menu Contains features and options that let you customize your system to change the PICTURE, FMM, OSD LANGUAGE, SOURCE DEFAULT FLO and SCREEN MODE.


- 1) Press the SYSTEM MENU button on the remote, the main page of the system menu will appear on screen.
- 2) Use the cursor buttons ▲ or ▼ to select the desired item in the main page and press the ENTER button to select.
- 3) The sub menu will appear on screen.
- 4) Use the cursor buttons ▲ or ▼ to select an item in the sub menu and then press the ENTER button to select.
- 5) Press the System Menu button to exit System Menu.

Note: System Menu can be controlled via Remote Control only. (Items selected in the menu will have a green background)

PICTURE SELECT

When watching program, the picture quality can be adjusted to suit individual preferences.


- 1) Each time this button is pressed, the on screen picture adjustment displays the “adjustment bar ” for **BRIGHTNESS, CONTRAST, COLOR, TINT** or **RESET**.
- 2) Once the desired adjustment bar is displayed, use the Volume (+) / Volume (-) button to adjust the setting. The display will automatically turn off if no adjustments are made within 6 seconds, or is any other button is pressed.
- 3) Press the ▼ button four times to select **RESET**, then press either Volume (-) or the Volume (+) button on the remote or the main unit. All of the picture settings (**BRIGHTNESS, CONTRAST, COLOR** and **TINT**) will return to the factory setting.

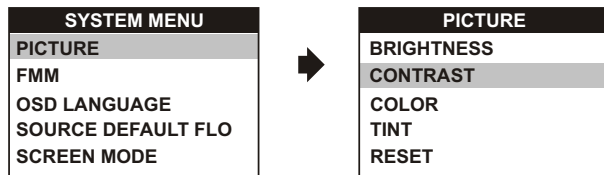

FMM SELECT

FMM ON/OFF options - Turns the FM Modulator on or off.

FMM SELECT option - Selects the wireless FM Modulator Frequency (CH1 88.1MHz, CH2 88.3MHz, CH3 88.5MHz, CH4 88.7MHz, CH5 88.9MHz, CH6 89.1MHz, CH7 89.3MHz, CH8 89.5MHz, CH9 89.7MHz, CH10 89.9MHz, CH11 90.1MHz, CH12 90.3MHz, CH13 90.5MHz, CH14 90.7MHz, Ch15 90.9MHz, CH16 91.1MHz)

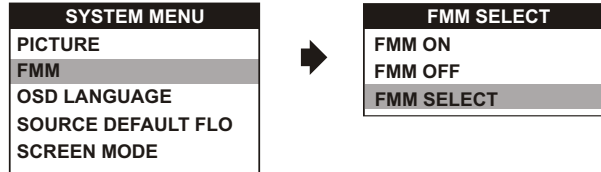

OSD LANGUAGE

This allows the user to select the language for the on-screen display.

The user can either select English, Spanish, French, German for the OSD language.




SOURCE DEFAULT FLO

This allows the user to set the system default source to FLO.

Note:


- If selected default source is set to FLO every time the unit's power is cycled with the source set to something other than FLO, the unit will power up and automatically switch the source over to FLO.
- Unit will be set to Last Memory on as the default mode of operation.
- Selection of Source default can only be made from within the system menu.

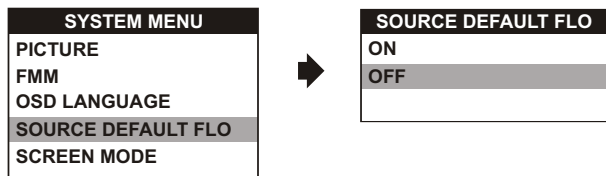

SCREEN MODE SELECT

This allows the user to change the screen format (aspect ratio 4:3, 16:9).

To select the screen aspect ratio format, highlight SCREEN MODE and press the ENTER button to access the submenu. Then press the Up or down cursor buttons (▲ or ▼) to select from 4:3 or 16:9. Press ENTER button to confirm the setting.

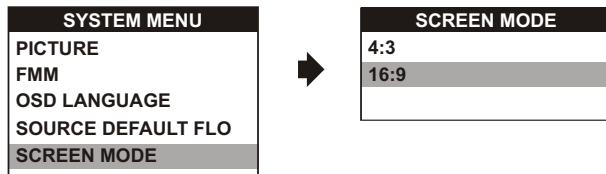

SETTINGS AND ADJUSTMENTS

SETTINGS

1. To set the desired option, move the highlight into the setup area using the cursor button ►.
2. After entering the setup area, highlight the desired option using the cursor button ▼ or ►.
3. Press ► to open the sub menu that contains the different options available. Press ▼ or ► to highlight the desired option, and press ENTER to confirm the selection.
4. Repeat steps 3~4 to set the options that reside on the same Home Page.
5. To change to another Home page, press the Black (◀) to position the highlight back on the icon side of the Home Page. Then, repeat steps 2~5.

Exiting the Setup Menu

Press the Black (◀) button again.




LANGUAGE SETUP

Language for On-Screen Display

The Language Menu setup allows you to select the language for the on-screen display. The user can either select English, French, Spanish or German for the language.


SLIDESHOW DURATION SETUP

Select “SLIDESHOW DURATION” using ▼ button. The user can either select 1 hour, 3s, 5s, 15s, 1 mins and 15mins, then select the Slideshow Duration you desire using ► button, then press “ENTER”/ (↵) to confirm the setting. Press Black (◀) button to return.

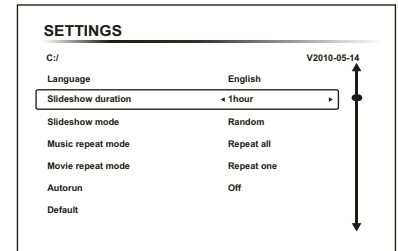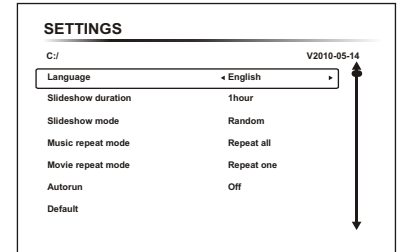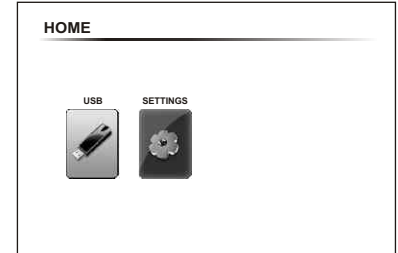

SLIDESHOW MODE SETUP

Select "SLIDESHOW MODE" using ▼ button. The user can either select Random, Fading, Off, Bottom_To_Top, Top_To_Bottom, Left_To_Right, Right_To_Left, Door_Close, Door_Open, Hori_Cross and Verti_Cross, then select the Slideshow Mode you desire using ► button, then press "ENTER"/ (↵) to confirm the setting. Press Black (⏏) button to return.

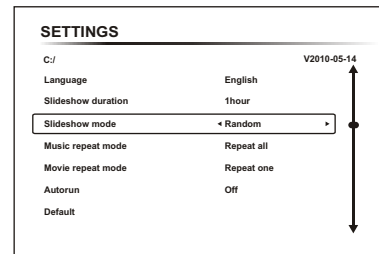


MUSIC REPEAT MODE SETUP

Music Repeat Mode function has 2 options : Repeat one and Repeat all. Move cursor to using ► button, then press "ENTER"/ (↵) to confirm the setting. Press Black (⏏) button to return.

Repeat one Repeat the song being played until STOP is pressed.

Repeat all Play all songs repetitively.

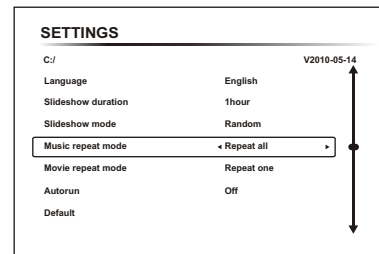


MOVIE REPEAT MODE SETUP

Movie Repeat Mode function has 2 options : Repeat one and Repeat all. Move cursor to using ► button, then press "ENTER"/ (↵) to confirm the setting. Press Black (⏏) button to return.


Repeat one Repeat the movie being played until STOP is pressed.

Repeat all Play all movie repetitively.

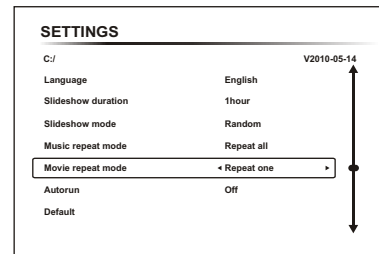


AUTORUN

The storage device automatically play after inserting. (supports only the root directory of the file within the storage devices, the sequential: video, audio, photo)

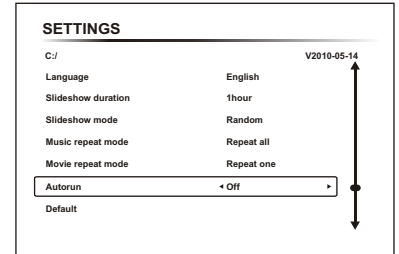

DEFAULT

The DEFAULT - RESET allows you to reset all options to factory settings.

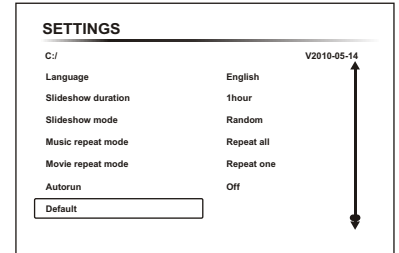

USB SETTINGS

USB Select Media has 4 options : Photo, Music, Movie & file. Move cursor to using ► button, then press “ENTER”/ (↵) to confirm the setting. Press Black (⏪) button to return.

PHOTO




MUSIC



MOVIE




FILE

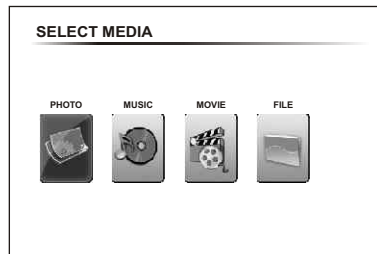


PHOTO

Select the Photo mode you desire using ► button, then press “ENTER”/ (↵) to confirm the setting. After entering the “Photo” column, the photo file list of current directory is displayed in the USB Select Media content area. Select photo file by pressing button ▼ or ►, then press “ENTER”/ (↵) to play it. Select “Play” button to begin information slideslow in random or sequence mode. Press Black (⏪) button to return.

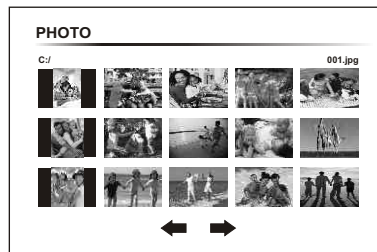


MUSIC

select the Music mode you desire using ► button, then press “ENTER”/ (↵) to confirm the setting. After entering the “Music” column, the music file list of current directory is displayed in the USB Select Media content area. Select music file by pressing ▼ button , then press “ENTER”/ (↵) to play it. Press Black (⏪) button to return.

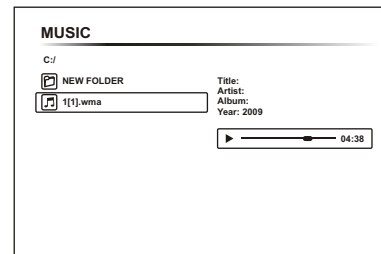


VIDEO

select the Video mode you desire using ► button, then press “ENTER”/ (↵) to confirm the setting. After entering the “video” column, the video file list of current directory is displayed in the USB Select Media content area. Select video file by pressing ▼ button , then press “ENTER”/ (↵) to play it. Press Black (⏪) button to return. Video can play multiple video files with formats including AVI, MPG, MPEG, RM, VOB and DAT.

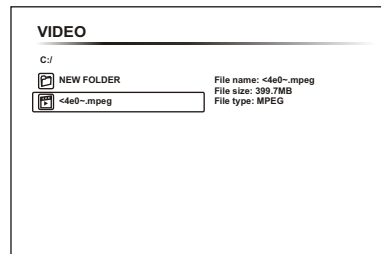

FILE

Show the all file list on the File Mode. Select the file mode you desire using ► button, then press “ENTER”/ (↵) to play it. Select file by pressing ▼ button , then press “ENTER”/ (↵) to play it. Press Black (⏪) button to return.

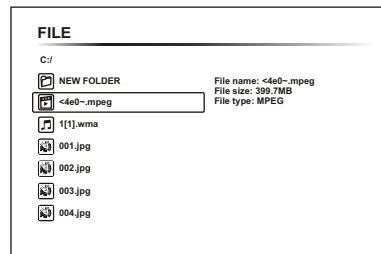

TROUBLESHOOTING

PROBLEM	SOLUTION
IR remote inoperative	<ul style="list-style-type: none">• Verify that the batteries in the remote are fresh.• Verify that the remote sensor eye is not obstructed.• Verify that the infrared transmitter is affixed over the sensor eye of the component to be controlled.
No sound or distorted sound	<ul style="list-style-type: none">• Make sure your AV Source is connected properly. Make sure all cables are securely inserted into the appropriate jacks.• If you are using the IR headphones, make sure you turn on the IR power.

Technical Support 1-800-645-4994

REPLACEMENT PARTS

Remote Control	136-5055
Wireless Headphones	IR1CFF

SPECIFICATIONS

LCD Backlighting	LED
Resolution	2400 x 480
Pixels	1,152,000
Operation Temperature	32 ~149° F (0 ~ 55° C)
Storage Temperature	-4 ~ 176° F (-20 ~ 80° C)
Backlit life	30,000 Hours
Video Output	1.0Vp-p @ 75 ohms
Power Source	12V DC
Dimension	L x W x H
	10.6" x 9.65" x 2.0"
	270mm x 245mm x 51mm

Specifications are subject to change without prior notice.

APPENDIX A FLO TV

Copyrights and Trademarks

© 2009 Audiovox Corporation. All rights reserved.

FLO, FLO TV and the FLO TV logo are trademarks of QUALCOMM Incorporated.

QUALCOMM is a registered trademark of QUALCOMM Incorporated in the United States and may be registered in other countries.

AUDIOVOX is a registered trademark of Audiovox Corporation.

ADVENT is a registered trademark of Audiovox Corporation.

MACROVISION is a registered trademark of ROVI Corporation.

Technical Information

The *FLO TV*™ service operates on UHF channel 55 (720 MHz) and is multicast from terrestrial towers. Coverage will vary and reception is dependent upon the FLO TV module in your vehicle being within range of the towers. Coverage area can be viewed on the FLO TV web site (www.flotv.com).

The FLO (Forward Link Only) TV service is transmitted over the *FLO TV*™ network and received by the FLO TV module in your vehicle. Along with the television program material, data is transmitted for the program guide and is updated on a regular basis. If you are out of the coverage area the program guide will be updated when the vehicle returns to the coverage area.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

FLO TV OPTION (P/N AVXFRK1)

Your VOH10FR is designed for adding an optional FLO TV Tuner. If you do not have the FLO TV Tuner installed, this section can be ignored. To have the FLO TV Tuner added to your system contact the business that installed your VOH10FR.

Activation/Subscription Information

Your FLO TV module will need to be activated before you can begin enjoying the *FLO TV* service. Activation takes place after you subscribe to the *FLO TV service*.

To activate the FLO TV module, call 1-888-99FLOTV (1-888-993-5688). You may also activate on line at www.flotv.com. You must be over the age of 13 to activate your subscription.

You will need the following information before you can activate your subscription:

1. Activation Instructions Card
2. Device ID Number
3. Authorization Code
4. A valid credit card AMEX/MC/VISA (have your credit card information ready when you call) Note: The credit card will be used to verify your account and will not be charged if service was included with your product purchase.
5. An active email address
6. Billing information (Home/business address linked to your credit card)

To locate your Device ID and Authorization Code turn on the overhead video display in your vehicle and set the source to FLO TV. Press the FLO TV button on the remote control view FLO TV. Press the  (Settings) key on the remote to access the Settings Menu. Press the  (down arrow) key to highlight Subscription Information and press the ENTER key on the remote. Your Device ID and Authorization Code will be displayed on the overhead screen. Write these numbers down before calling FLO TV.

The FLO TV module is activated over the air and your vehicle must be within the coverage area and running. Keep the vehicle on and powered for about ten minutes after you have activated the unit with *FLO TV Services* for the activation to take place. Test your FLO TV to make sure that you are subscribed and all channels work prior to shutting off the vehicle.

FLO TV Introduction

Please refer to the following as an overview to use the FLO TV *service*:

1. Turn the vehicle ignition key to the ON position. Turn on your VOH10FR and select the FLO TV source by pressing the Source button on the overhead or by pressing the FLOTV Button on the remote. (Note: Watching the *FLO TV* service for an extended period of time with the engine OFF will run down the vehicle's battery.)
2. The VOH10FR screen will show the FLO TV splash screen which will appear for about 30 seconds and then the FLO TV preview channel or the last channel that was being viewed.
3. Press the ▲ (up arrow) or ▼ (down arrow) key on the remote to change channels.
4. Press the ≡ (Guide) key on the remote to access the FLO TV Channel Guide.
5. The arrow keys (▲▼◀▶) on the remote allow for navigation through the Channel Guide.
6. Press the ENTER key on the remote to select a desired channel/show from the Channel Guide.
7. Press the ⓘ (Information) key on the remote to display the program information related to the current program.
8. Press the ⚙ (Settings) key on the remote to access the FLO TV user settings menu (e.g. Parental Control, etc.).
9. The Mode key on the remote allows the user to switch between the *FLO TV* service and an auxiliary A/V source if one is connected.
10. Visit www.flotv.com for more info.

FLO TV Operation

You can operate the FLO TV module with the wireless remote control.

When FLO TV is powered on, the FLO TV logo screen will be displayed until the receiver tunes to a channel. This may take up to 30 seconds after the vehicle and overhead turned on.

Upon power up, the *FLO TV* service will default back to the last viewed channel. If the screen does not appear press the Mode key on the remote control to switch back to FLO TV.



Are You Subscribed?

If you are not subscribed to FLO TV a Preview Channel will be displayed. Changing to another channel will display a screen similar to the adjacent one. (Note: Screen background in this example has diagonal bars in it)

Some channels may not be available for viewing if they are not included in the *FLO TV* service package you are subscribed to.



Are You Covered?

FLO TV service coverage is available in many metropolitan areas and travel corridors within the United States. Please visit the *FLO TV* web site (www.flotv.com) to check the coverage maps in your area.

If you are travelling in an area that is not covered by the *FLO TV* network or travel out of the areas covered by the *FLO TV* network the adjacent screen will be displayed:

Once you have returned to an area covered by the *FLO TV* network, *FLO TV* programming will resume. If you are planning a trip, check the *FLO TV* web site (www.flotv.com) to see if your route is within the *FLO TV* network coverage area.



Remote Control Functions

Function

Use for channel changing (up/down), navigating menus, and selecting items

Symbol



Use to select a channel or setting

OK (ENTER)

Information key - use to display program information.



Channel Guide - use to select the channel guide



Back key - takes the user back one screen when in the Menu, Show Information, Show Description, or Guide. Path ends at full screen TV



Number keys - use to select favorite channels and for PIN entry for parental controls

1,2,3,4,5,6,7,8,9,0

Settings key - allows the viewer to toggle on/off the FLO TV settings menu



Mode key - toggles between FLO TV and an auxiliary A/V source (Note: Your system may not have an auxiliary source)

MODE

How is FLO TV Programming Rated?

Parental controls are built into FLO TV so that you can filter the program and movie content that can be watched on the *FLO TV* service. Adjacent is a ratings chart based on content type for TV program material and movie material:

Movie ratings information, if provided, is available in the FLO TV programming guide. Audio content can be restricted as well based on the adjacent chart:

Notes

- o Unrated content (NR) does not have a rating exposed in the user interface, and the rating string value will be blank when this occurs.
- o FLO TV blocks or allows unrated programs based on whether the unrated program is allowed to play with Parental Controls enabled.
- o Specific programs identified as most restrictive must challenge the user to enter the PIN, even if parental controls are turned on at the least restrictive level.
- o Specific programs identified as least restrictive must NOT challenge the user to enter the PIN, even if parental controls are turned on at the most restrictive setting.
- o If the correct PIN is entered, the restrictive content can be displayed.

TV Ratings
TV-Y
TV-Y7
TV-G
TV-PG
TV-14
TV-MA

Audiocast Ratings
Clean
Explicit

Getting Around in FLO TV

Watching the *FLO TV* service limits the channel information or pop-ups occurring while viewing the program as shown on the adjacent screen:



If you want to see what channel you are on, press the ⓘ (Info) key and the adjacent screen and information will appear:

- Channel Logo
- Program Title
- Program Start Time
- Program End Time
- Program rating



Pressing the ⓘ (Info) key again will display more information about the channel being viewed as shown in the adjacent screen:

 
Information displayed:

- o Channel Logo
- o Program Title
- o Program Start Time
- o Program End Time
- o Program Rating
- o Episode Title
- o Episode Summary

Pressing the ⓘ (Info) key will return the viewer to the full screen.



FLO TV Program Guide

You can access the FLO TV program guide by pressing the  (Guide) key which displays the program guide:

The FLO TV program guide is a matrix of programs and their start times, organized by channel. A user can view the guide and tune to a currently playing program or view program descriptions for future programs. The following information generally is displayed:

- o FLO TV Logo
- o Current Time
- o Current Day
- o Guide Day
- o Guide Time
- o Channel Logo
- o Program Title
- o Parental Block Icon (lock symbol)
- o More Icon ►




Notes

- Programs that are blocked due to Parental Controls display the locked icon.
- The channel logo column is not selectable.
- The guide loops vertically when you press the ▲ (up arrow) or ▼ (down arrow) key.
- The guide is bounded horizontally by time. The user cannot navigate into the past or beyond the amount of guide data available.
- Current program tuned is designated by darker cell color and vertical right color bar when not in focus.
- Guide Day refers to the day within the guide data the user is currently viewing.
- Guide Time refers to the time within a particular day of guide data the user is currently viewing. These values change as the user scrolls right and left through guide data.
- Current Day and Current Time are independent of Guide Day and Guide Time.
- The More ► Icon is visible when a show's length extends beyond the bounds of the current guide view. They are visible when going forward in time and going back in time.

Settings Menu

Press the ⚙️ (Settings) key to enter the Settings Menu and the adjacent screen will be displayed:

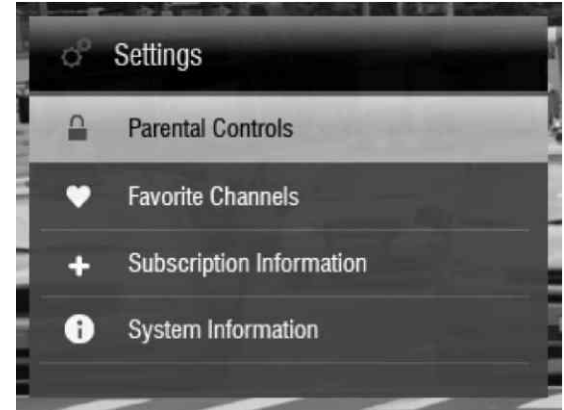

Parental Controls


In the Settings Menu, the first selection is Parental Controls, which is highlighted in light gray. Press the ENTER key to access the parental controls menu. The adjacent following screen will be displayed:



Use the ► (right arrow) key to highlight the parental on/off control and press OK to enable it or disable it. Once enabled, press the OK key and you will be prompted to create a PIN (Personal Identification Number) as shown in the adjacent screen:




Use the remote control keypad to enter a 4 digit PIN. When the fourth digit is entered the adjacent screen will appear to confirm the new PIN.

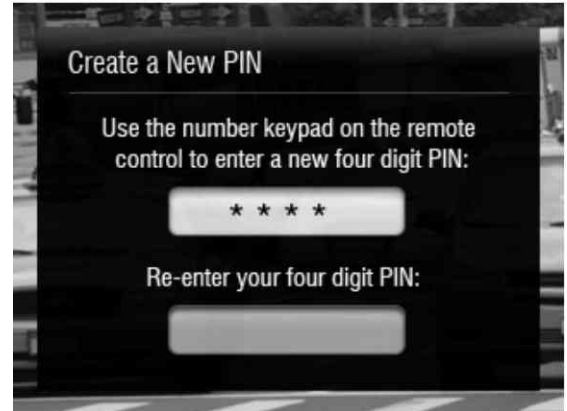

Re-enter the same 4 digit PIN to confirm the PIN number.
The adjacent screen will be displayed:

(NOTE: Write the PIN down in a secure location. If it is lost you will have to call 1-888-99FLOTV to reset the PIN. The PIN cannot be reset online. Do not share your PIN with the person whose access to programming is being restricted.)

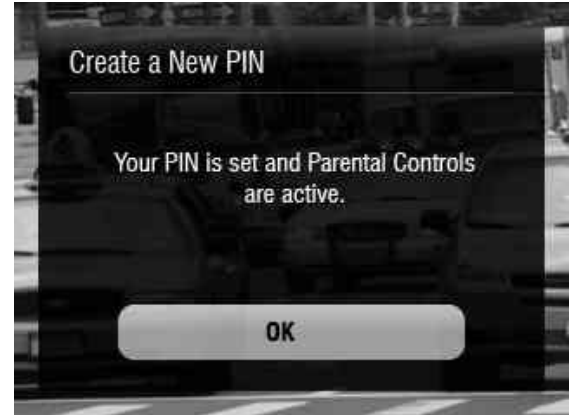

Once you have set your PIN, you can now change the ratings limit on TV, Movies and Audio content. To change the ratings:

Use the ▼ (down arrow) key to highlight TV Rating, Movie Rating or Audio Limit or Restricted Channels and press the OK key on the remote control. The adjacent screen will appear:

Use the ► (right arrow) and ◀ (left arrow) key to change the TV rating. Once you get to the rating you want, press the OK key to select it. Press the (Back) key to return to TV viewing.



Favorite Channels

Up to 10 channels can be programmed into the numeric keys on the remote. Once they are programmed, pressing any one of them tunes your FLO TV to the channel that you have pre-programmed to the number key.

If you have not pre-programmed favorites, when you press a numeric key, you will be prompted by the info bar at the bottom of the screen asking you if you want to add the channel to your favorites:

To program favorite channels press the ⚙️ (Settings) key to access the settings menu. Use the ▼ (down arrow) key to highlight Favorite Channels and press the ENTER key.

The adjacent screen will appear which lists each channel available on the FLO TV service. Use the ▲ (up arrow) or ▼ (down arrow) key to highlight a channel and press a numeric key to set the highlighted channel to a favorite. In the example below, the Nickelodeon channel is set to the number 1 key.

Once you are back watching the FLO TV service you can press a number key to quickly access your favorite channels. Up to 10 channels can be programmed with the numeric keypad (0-9).



Subscription Information

In the Settings Menu, use the ▲ (up arrow) or ▼ (down arrow) key to highlight Subscription Information and press the ENTER key, the adjacent screen will be displayed:

This screen tells you the basic information of your FLO TV system.
(Note: The Authorization Code and Device ID will be different from the above screen, which is for reference only.)



System Information


In the Settings Menu, use the ▲ (up arrow) or ▼ (down arrow) key to highlight System Information and press the OK key, the adjacent screen will be displayed:

This screen tells you the signal strength of the FLO TV signal. If you are having reception problems, go to this page to see if the FLO TV signal is available at your location. (Note: The Device ID will be different from the adjust screen, which is for reference only.)






Legal Information

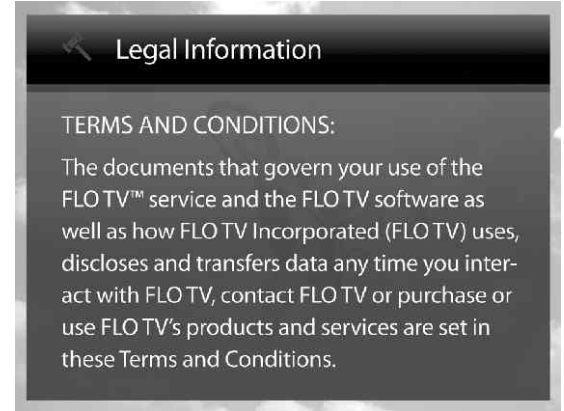


Use the ▼ (down arrow) key to highlight Legal Information. This information governs the terms and conditions of your use of the *FLO TV* service and the *FLO TV* network. To see the full text and the privacy policy go to www.flotv.com.

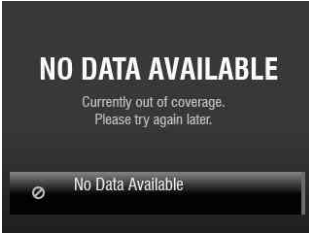

Troubleshooting

Explanation	FLO TV Screen Observed
<p>You are not subscribed and are not able to access any channel except the FLO TV channel.</p>	 <p>The image shows a black screen with the FLO TV logo at the top. Below the logo, the text reads: "You are not subscribed to this channel. Please call 888-99FLOTV or visit us at www.flo.tv.com to subscribe." At the bottom, it displays "Device ID: 123456789012345" and "Authorization Code: 123456789012".</p>
<p>Unable to access any channel; you are out of the coverage area.</p>	 <p>The image shows a black screen with the FLO TV logo at the top. Below the logo, the text reads: "Currently out of coverage. Please try again later."</p>
<p>You are either out of the coverage area or your FLO TV module has not updated the program guide information. The FLO TV Service will return to normal when you are back in the coverage area.</p>	 <p>The image shows a black screen with the text "NO DATA AVAILABLE" in large white letters at the top. Below it, the text reads: "Currently out of coverage. Please try again later." At the bottom, there is a button with a refresh icon and the text "No Data Available".</p>

Troubleshooting (cont'd)

Explanation	FLO TV Screen Observed
<p>You are in a fringe coverage area; programming will return to normal when you are back in the coverage area.</p>	 A black rectangular screen with the FLO TV logo at the top center. Below the logo, the text "Acquiring signal, please wait..." is displayed in a white, sans-serif font.
<p>You are out of the coverage area; programming will return to normal when you are back in the coverage area.</p>	 A black rectangular screen with the FLO TV logo at the top center. Below the logo, the text "Currently out of coverage. Please try again later." is displayed in a white, sans-serif font.
<p>Contact the car dealer or the retailer where this product was installed or purchased.</p>	 A black rectangular screen with the text "NO ANTENNA" in large, bold, white, sans-serif font at the top center. Below it, the text "Please check your antenna connection." is displayed in a smaller white, sans-serif font.

Troubleshooting (cont'd)

Problem	Root Cause	Solution
Poor or No Video	FLO TV Input not selected	Change the source inputs on the overhead until the FLO TV signal is displayed.
Wireless Remote Control does not work	Batteries installed incorrectly	Verify that the two AAA batteries are installed properly per the polarity markings.
	Batteries are dead	Replace the two AAA batteries.

Customer Care – This number is for problems with FLO TV Service and is not for problems with the VOD108FR Call 1-888-99FLOTV (1-888-993-5688)



AUDIOVOX LIMITED WARRANTY

Applies to Audiovox Mobile Video Products



AUDIOVOX®

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that, should this product or any part thereof (except game controllers), under normal use and conditions, be proven defective in material or workmanship within 36 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. A game controller, if supplied, is similarly warranted for (90) days.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to digital memory/media devices, gaming devices, discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.


This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD NOT EXCEEDING 12 MONTHS AFTER EXPIRATION OF THE WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.



For Customer Service
Visit Our Website At
www.mobile.audiovox.com
Product Information, Photos,
FAQ's Owner's Manuals

ADVM10FR  **READY**
**10.2" OVERHEAD LCD
MONITOR**

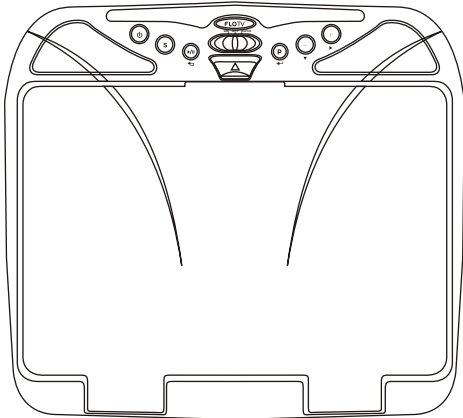

///ADVENT®

**OPERATION
MANUAL**

128-8828

Important Notice

Installation of overhead products requires careful planning and preparation. Be extremely careful when working on a vehicle with side curtain air bags. Do not route wires near any portion of the side curtain air bag assemblies. This includes any anchor points in A, B, C or D pillars of the vehicle. Routing wires in these areas or running wires by the side curtain air bags can prevent the side curtain air bag from fully deploying which can result in personal injury to vehicle occupants. If you have any questions regarding wire routing in a vehicle, please contact Audiovox Technical Support at 1-800-225-6074.

When connecting power and ground in a mobile video installation ensure that the ACC wire is fused at the point where it is connected to the vehicle ACC wiring. Failure to do so can result in damage to the vehicle if a short circuit develops between the vehicle connection point and the mobile video product.

An LCD panel and/or video monitor may be installed in a motor vehicle and visible to the driver if the LCD panel or video monitor is used for vehicle information, system control, rear or side observation or navigation. If the LCD panel or video monitor is used for television reception, video or DVD play, the LCD panel or video monitor must be installed so that these features will only function when the vehicle is in "park" or when the vehicle's parking brake is applied.

An LCD panel or video monitor used for television reception, video or DVD play that operates when the vehicle is in gear or when the parking brake is not applied must be installed to the rear of the driver's seat where it will not be visible, directly or indirectly, to the operator of the motor vehicle.

Warnings

- Do not use any solvents or cleaning materials when cleaning the video monitor.
- Do not use any abrasive cleaners, they may scratch the screen.
- Use only a lightly dampened lint free cloth to wipe the screen if it is dirty.
- Lock the LCD screen in the fully closed position when not in use.
- Before putting on headphones always adjust the volume setting to the lowest position.
- Remember to leave the dome light switch in the off or auto positions when the vehicle is unattended, as the dome lights, if left on, can drain the vehicle's battery.
- Do not put pressure on the screen.
- Caution children to avoid touching or scratching the screen, as it may become dirty or damaged.

Licensed under one or more of the following patents,
Patent NOS. 5,775,762 , 5,927,784 and 6,678,892

Congratulations

Congratulations on your purchase of the ADVENT ADVM10FR DVD Player with Drop-Down Video / Monitor. The ADVM10FR has been designed to give you and your family many years of video entertainment in the mobile environment. Please read the directions that follow to familiarize yourself with the product to ensure that you obtain the best results from your equipment.

Please note: Installation options vary, see the individual owner's manuals for each component in your system to obtain a full understanding of each component's operation.


Safety Precaution

For safety reasons, when changing video media it is recommended that the vehicle is not in motion, and that you do not allow children to unfasten seat-belts to change video media or make any adjustments to the system. System adjustments can be accomplished using the remote control, while seat-belts remain fastened. Enjoy your ADVENT entertainment system but remember the safety of all passengers remains the number one priority.

FEATURES

- 10.2" TFT (Thin Film Transistor) Active Matrix LCD (Liquid Crystal Display) Monitor.
- OSD (On Screen Display) for Control of Picture Quality and Functions.
- Single Channel Infrared Transmitter for IR Wireless Headphones.
- Five Audio/Video Source Inputs (FLO TV, USB, CMPT, AV and AUX).
- Dome Lights with Built-in Three Way Switch.
- Built-in 16 Channel Wireless FM Modulator.
- Screen Mode Selection (4:3, 16:9).
- Full Function Remote Control.
- Backlit Controls.
- 1 AV Output via RCA Pigtail.
- FLO TV Ready.

CONTROLS AND INDICATORS DIAGRAM (FRONT VIEW)

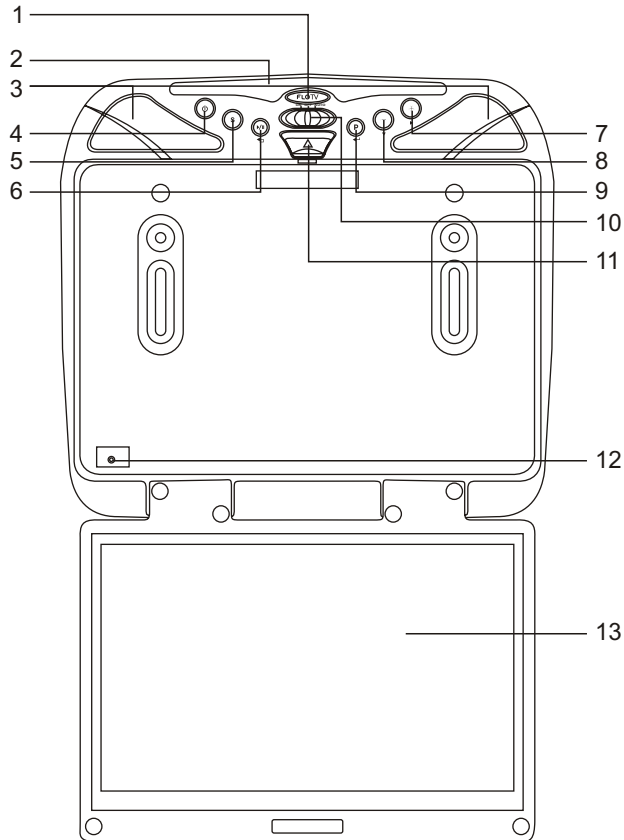

1. FLO TV Control

This control is direct local key to function with FLO TV. The mode LED will change from white to purple when the FLO TV is connected.

2. Infrared Transmitter and Sensor

Transmits audio to wireless headphones, allows the remote control to operate the ADV10FR and to control other accessories in the system.

3. Dome Lights

Provide additional interior illumination.

4. POWER (⏻) Control

Used to turn the system on/off.

5. Source Select

Use to select one of the five sources: FLO TV, USB, CMPT, AV and AUX.

6. PLAY (▶) / PAUSE Button (⏸) / BACK (⏪) Control

a.) PLAY (▶)

This control is used to start playback of a multimedia file.

b.) PAUSE Button (⏸)

Press to pause playback. Pressing the PAUSE button again or pressing the PLAY Button will resume normal playback.

c.) BACK Button (⏪)

Press and hold the button when user back one screen.

7. (+) Button / CURSOR (▶) Control

a.) (+) Button

- Press and hold the (P) button to adjust the control by + (increase).
- Use these buttons for channel changing (up), navigating menus and selecting items in FLO TV mode.

b.) CURSOR (▶) Control

This button is only active for USB mode. Selecting your favorite by cursor (▶) and press “OK” button on your remote control or press (←) button on unit. Information slide show will begin while playing your favorite file.

8. (-) Button / CURSOR (▼) Control

a.) (-) Button

- Press and hold the (P) button to adjust the control by – (decrease).
- Use these buttons for channel changing (down), navigating menus and selecting items in FLO TV mode.

b.) CURSOR (▼) Control

This button is only active for USB mode. Selecting your favorite by cursor (▼) and press “OK” button on your remote control or press (←) button on unit. Information slide show will begin while playing your favorite file.

9. (P) PICTURE Button / (←) ENTER Control

a.) (P) PICTURE Button

Press and hold the (P) button until monitor display picture adjustment mode for (BRIGHTNESS, CONTRAST, COLOR, TINT & RESET)

b.) (←) ENTER Control

For USB mode, used to implement a selected setting.

10. Three Position Dome Light Switch

ON - Turns on the dome lights.

OFF - The dome lights will not turn on in this position.

AUTO - Automatically switches on the dome lights in Conjunction with the vehicle's interior illumination.

11. Screen Release


Moves in direction of the arrow to release the drop down screen.

12. LCD Cut Off Switch

Used to turn off the LCD monitor when in the closed position.

13. LCD Panel

CONTROL FUNCTION DESCRIPTION (SIDE VIEW)

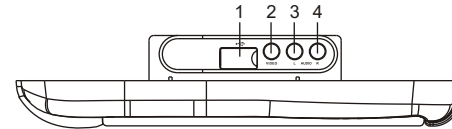

1. USB INPUT FOR USB MEMORY DEVICE

Allows for the connection of an USB or memory device..

2. Auxiliary Video Input

3. Auxiliary Audio Left Input

4. Auxiliary Audio Right Input

ACCESSORIES

WIRELESS HEADPHONES

The ADV10FR includes a built-in infrared transmitter for use with the supplied wireless headphones. The headphone volume is adjusted using the controls on each headset. Any number of wireless headphones may be used but they must be used within a line of sight from the transmitter, as infrared transmissions, like visible light travel only in a straight line. See the documentation accompanying your wireless headphones.

SOURCE FEATURE

FLO TV

The ADV10FR is designed to function with FLO TV. This function control is available when the overhead unit is used with an optional plug in FLO TV Harness and FLO TV Module. Once the FLO TV Harness and FLO TV Module are connected press the source button until the screen displays FLO TV. For specific instructions refer to Appendix A ,FLO TV.

USB

USB Port is built-in on the right side of the unit. Version 2.0 and supported multimedia. Also charging IPOD when it is selected to AUX mode.

CMPT

CMPT (Y Pb Pr) Input, Supported 480i/P, 576i/P and 720P.

AV

The AV input may be connected to a external video source, video game system, or other audio / video devices. To access the audio/video inputs, turn the unit on and press the S (source) button on the ADV10FR or the Source button on the remote control until "AV" is displayed on the screen. Turn the video source component on with its power button or remote control and it is now ready to play the audio and video signals from the source connected .

Note: AV sources are available only if pre-installed during your video product installation.


AUX

The AUX input may be connected to an external video source, video game system, or other audio/video devices. To access the audio / video inputs, turn the unit on and press the S (source) button on the ADV10FR or the Source button on the remote control until "AUX" is displayed on the screen.

IPOD Playback & Charging

For iPod playback & charging the unit must be selected to AUX source and user can play the iPod through the AUX input and at the same time charge the iPod through the USB. But must use original Apple Composite AV Cable.

REMOTE CONTROL OPERATION

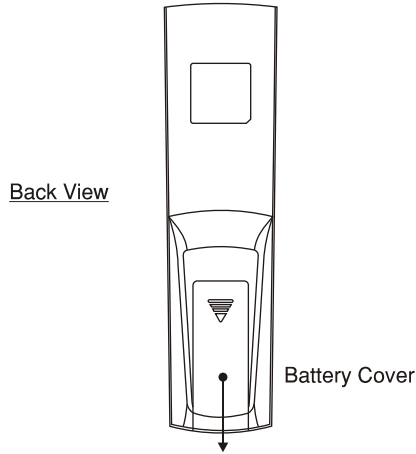


Battery Installation

Before attempting to operate your Remote Control, install the batteries as described below.

- 1) Turn the Remote Control face down. Using your finger, slide the battery cover off in the direction of the arrow.
- 2) Install Two "AAA" batteries. Make sure that proper polarity (+ or -) is observed.
- 3) Align the cover tabs with the remote control and slide the cover until it locks.

The remote control will operate the ADVM10FR It is not a universal remote control and will not control equipment from other manufacturers.

MAIN FUNCTION OPERATION

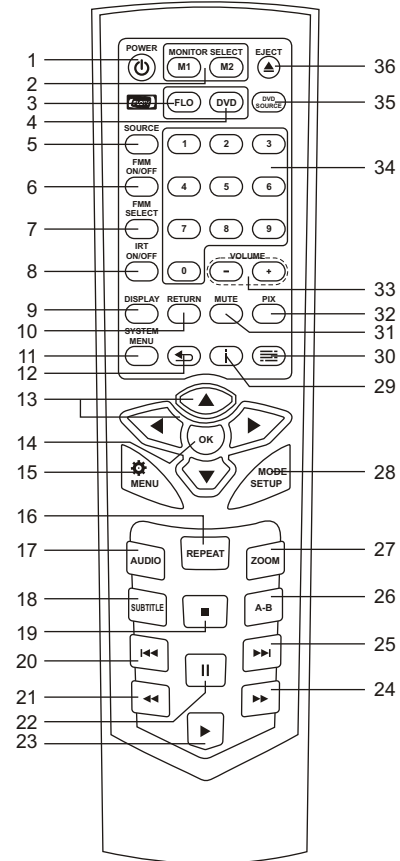

- * Function control is available on the unit and the Remote Control.
- ** Function not available in this model.
- *** FLO TV function only available when optional FLO TV module is installed.

Note: Refer to Appendix A FLO TV for FLO TV operating instructions..

1. POWER Button*

Press this button to turn the unit ON and OFF.

2. MONITOR SELECT Button

M1 Button – Sets the remote control code to allow control of the unit set to M1 mode.

M2 Button** – Sets the remote control code to allow control of the unit set to M2 mode.

3. FLO TV Button***

Press this button to access the FLO TV mode. Also switches the function keys on the remote control to correspond to FLO TV functions.

4. DVD Mode Select Button

Press this button when playing multimedia file. Switches certain function keys on the remote control for multimedia file functions.

5. SOURCE Button*

Each time the button is pressed, the unit will select various sources in the following sequence:(FLO TV, USB, CMPT, AV and AUX).

6. FMM ON/OFF Button

Turns the FM Modulator on/off.

7. FMM SELECT Button*

Select the wireless FM Modulator Frequency:

(**CH1** 88.1MHz, **CH2** 88.3MHz, **CH3** 88.5MHz, **CH4** 88.7MHz, **CH5** 88.9MHz, **CH6** 89.1MHz, **CH7** 89.3MHz, **CH8** 89.5MHz, **CH9** 89.7MHz, **CH10** 89.9MHz, **CH11** 90.1MHz, **CH12** 90.3MHz, **CH13** 90.5MHz, **CH14** 90.7MHz, **CH15** 90.9MHz, **CH16** 91.1MHz).

8. IRT ON/OFF Button

Turns the Infrared Transmitter ON or OFF for IR Wireless Headphones.

9. DISPLAY Button

Press to display the current multimedia file information while the multimedia file is playing.

10. RETURN Button

Press for return to previous page/ previous menu.

11. SYSTEM MENU Button

Allow the user to access the system menu. Press cursor (▲▼) buttons to select desired PICTURE, FMM , OSD LANGUAGE, SOURCE DEFAULT FLO and SCREEN MODE during power up.

12. BACK Button ***

When in FLO TV mode takes the user back one screen when in the Menu, Show Information, Show Description, or Guide. Path ends at full screen TV.

13. CURSOR Button (▲▼◀▶) ***

Use these buttons to access menu selections on the screen in DVD mode. Use these buttons for channel changing (up/down), navigating menus and selecting items in FLO TV mode.

14. OK Button (ENTER)***

Used to implement a selected setting or menu option.

15. MENU / SETTINGS Button

a.) MENU Button

Pressing the MENU button to display the HOME Page Menu.

Note: Pressing the FLO TV button will access the FLO TV mode and disable the USB functions.

b.) SETTINGS Button (⚙️) ***

When in FLO TV mode the Settings button allows user to toggle the FLO TV settings menu on/off.

16. REPEAT Button

Allows the user to repeat a selected repeat one / repeat all.

17. AUDIO Button

Press to display and select Audio changing audio to L/R/ Stereo.

18. SUBTITLE Button

Press to display and select the subtitle language in movie mode. Each time you press the button, the subtitle language changes.

Note: The type and number of languages for subtitle vary from disc to disc.

19. STOP Button (■)*

Press the STOP button once to stop playback. (Playback will resume from the point it is stopped).

Press the STOP button twice to stop playback. (Playback will resume from the beginning of the disc).

20. PREVIOUS Button (⏮)

Press to return to the previous file or previous page.

21. SCAN BACKWARD Button (⏪)

Press to search in a backward direction. Press repeatedly to change the search speed from x2, x3, x4 times the normal speed.

22. PAUSE Button (II)

Press to pause playback. Pressing the PAUSE button again or pressing the PLAY Button will resume normal playback.

23. PLAY Button*

Press to activate the play mode while a multimedia file is loaded in the multimedia file compartment.

24. SCAN FORWARD Button (▶▶)

Press to search in a forward direction. Press repeatedly to change the search Speed from x2, x3, x4 times the normal speed.

25. NEXT Button (▶▶)

Press to skip to the next file or next page.

26. A-B Button**

Allow user to repeat disc playback from point A to point B.

Press A-B button

Once

Twice

3 Times

On-Screen Display

Repeat A-

Repeat A-B

AB Off

DVD Player

Mark the beginning of the section to repeat (Set point A)

Mark the end of the section to repeat (Set point B)

Cancel the A-B repeat function

27. ZOOM Button

Press this button to enlarge the picture when playing a movie.

Press ZOOM button

Once

Twice

3 times

4 times

DVD player perform

Enlarge the picture 2 times of the original size

Enlarge the picture 4 times of the original size

Enlarge the picture 8 times of the original size

Picture is returned to original size

28. MODE / SETUP Button

a.) MODE Button

When in FLO TV mode pressing the MODE button toggles between FLO TV and an auxiliary A/V source attached to the FLO TV module. (**NOTE:** *your system may not have an auxiliary source*).

b.) SETUP Button

When in DVD mode pressing the SETUP button will display the SETTINGS which allows the user to change the options such as Language, Slideshow duration, Slideshow mode, Music repeat mode, Movie repeat mode, Autorun & Default. Refer to the settings and adjustment section for more information.

29. INFORMATION Button () ***

Pressing this button displays the Channel Info bar and the Program Description. When in FLO TV mode pressing the button opens the Channel Info bar. The second button press while Channel Info bar is displayed will provide program information. To return to the FLO TV program press the button again.

30. CHANNEL GUIDE Button ()***

When in FLO TV mode pressing this button allows the user to turn the Channel Guide on and off. The Channel Guide opens with the current channel and show title highlighted.

31. MUTE Button

Press this button to mute the audio for wireless FMM and IR headphones.
Pressing the button again restores the sound to the previously set level.

32. PIX Button (Picture Select)Button

Each time this button is pressed, the on screen picture adjustment displays the “adjustment bar” for BRIGHTNESS, CONTRAST, COLOR, TINT or RESET. Once the desired adjustment bar is displayed, use the VOLUME (+) / VOLUME (-) button to adjust the setting. The display will automatically turn off if no adjustments are made within 6 seconds.

33. VOLUME DOWN (-) or UP (+) Button**

Press to decrease or increase the volume of the wired headphones. Press to decrease or increase the level of the picture settings. The settings are available after the picture select button is pressed.

34. NUMBER Buttons**

When DVD mode these buttons allow the user to enter numbers 0 to 9 for selection of selection of CD tracks, DVD chapters and password. When FLO TV mode these buttons allow the user to select favorite channels and for PIN entry for parental controls. ***

35. DVD Source Button**

This button is only active when remote control is in DVD mode. Each time the button is pressed one of the sources (DVD or USB) will be selected. If the USB is not plugged in, the unit it will remain on DVD Source. Plug in a USB memory device and press to change source from DVD to USB.

36. EJECT (▲)**

This button is used to eject the disc.

MENU ADJUSTMENT

The System Menu Contains features and options that let you customize your system to change the PICTURE, FMM, OSD LANGUAGE, SOURCE DEFAULT FLO and SCREEN MODE.


- 1) Press the SYSTEM MENU button on the remote, the main page of the system menu will appear on screen.
- 2) Use the cursor buttons ▲ or ▼ to select the desired item in the main page and press the ENTER button to select.
- 3) The sub menu will appear on screen.
- 4) Use the cursor buttons ▲ or ▼ to select an item in the sub menu and then press the ENTER button to select.
- 5) Press the System Menu button to exit System Menu.

Note: System Menu can be controlled via Remote Control only. (Items selected in the menu will have a green background)

PICTURE SELECT

When watching program, the picture quality can be adjusted to suit individual preferences.


- 1) Each time this button is pressed, the on screen picture adjustment displays the “adjustment bar ” for **BRIGHTNESS, CONTRAST, COLOR, TINT** or **RESET**.
- 2) Once the desired adjustment bar is displayed, use the Volume (+) / Volume (-) button to adjust the setting. The display will automatically turn off if no adjustments are made within 6 seconds, or is any other button is pressed.
- 3) Press the ▼ button four times to select **RESET**, then press either Volume (-) or the Volume (+) button on the remote or the main unit. All of the picture settings (**BRIGHTNESS, CONTRAST, COLOR** and **TINT**) will return to the factory setting.

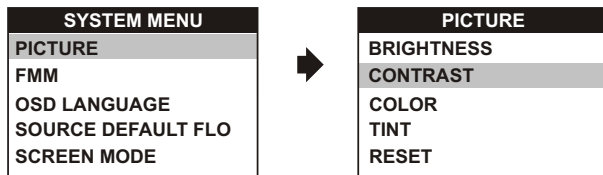

FMM SELECT

FMM ON/OFF options - Turns the FM Modulator on or off.

FMM SELECT option - Selects the wireless FM Modulator Frequency (CH1 88.1MHz, CH2 88.3MHz, CH3 88.5MHz, CH4 88.7MHz, CH5 88.9MHz, CH6 89.1MHz, CH7 89.3MHz, CH8 89.5MHz, CH9 89.7MHz, CH10 89.9MHz, CH11 90.1MHz, CH12 90.3MHz, CH13 90.5MHz, CH14 90.7MHz, Ch15 90.9MHz, CH16 91.1MHz)

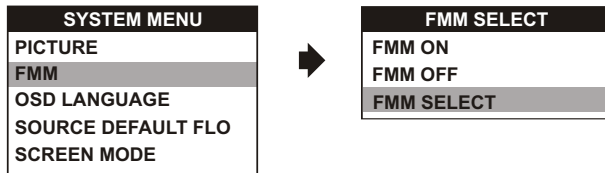

OSD LANGUAGE

This allows the user to select the language for the on-screen display.

The user can either select English, Spanish, French, German for the OSD language.




SOURCE DEFAULT FLO

This allows the user to set the system default source to FLO.

Note:


- If selected default source is set to FLO every time the unit's power is cycled with the source set to something other than FLO, the unit will power up and automatically switch the source over to FLO.
- Unit will be set to Last Memory on as the default mode of operation.
- Selection of Source default can only be made from within the system menu.

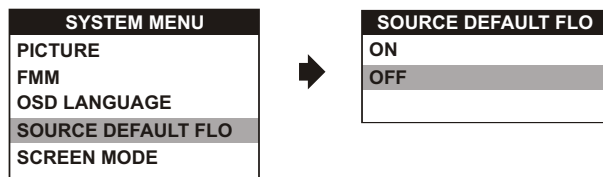

SCREEN MODE SELECT

This allows the user to change the screen format (aspect ratio 4:3, 16:9).

To select the screen aspect ratio format, highlight SCREEN MODE and press the ENTER button to access the submenu. Then press the Up or down cursor buttons (▲ or ▼) to select from 4:3 or 16:9. Press ENTER button to confirm the setting.

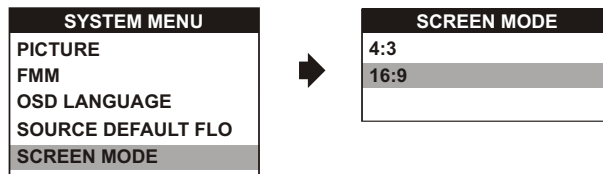

SETTINGS AND ADJUSTMENTS

SETTINGS

1. To set the desired option, move the highlight into the setup area using the cursor button ►.
2. After entering the setup area, highlight the desired option using the cursor button ▼ or ►.
3. Press ► to open the sub menu that contains the different options available. Press ▼ or ► to highlight the desired option, and press ENTER to confirm the selection.
4. Repeat steps 3~4 to set the options that reside on the same Home Page.
5. To change to another Home page, press the Black (◀) to position the highlight back on the icon side of the Home Page. Then, repeat steps 2~5.

Exiting the Setup Menu

Press the Black (◀) button again.




LANGUAGE SETUP

Language for On-Screen Display

The Language Menu setup allows you to select the language for the on-screen display. The user can either select English, French, Spanish or German for the language.


SLIDESHOW DURATION SETUP

Select “SLIDESHOW DURATION” using ▼ button. The user can either select 1 hour, 3s, 5s, 15s, 1 mins and 15mins, then select the Slideshow Duration you desire using ► button, then press “ENTER”/ (↵) to confirm the setting. Press Black (◀) button to return.

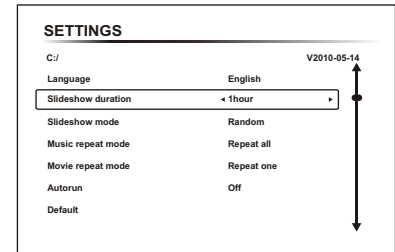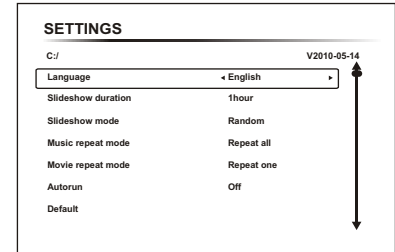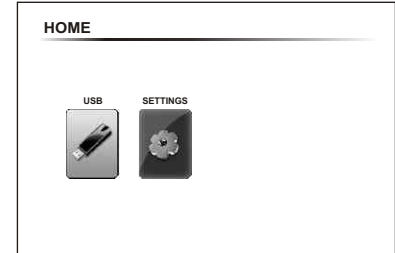

SLIDESHOW MODE SETUP

Select "SLIDESHOW MODE" using ▼ button. The user can either select Random, Fading, Off, Bottom_To_Top, Top_To_Bottom, Left_To_Right, Right_To_Left, Door_Close, Door_Open, Hori_Cross and Verti_Cross, then select the Slideshow Mode you desire using ► button, then press "ENTER"/ (↵) to confirm the setting. Press Black (⏏) button to return.

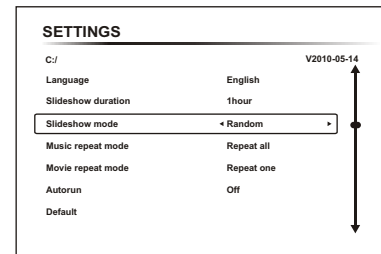


MUSIC REPEAT MODE SETUP

Music Repeat Mode function has 2 options : Repeat one and Repeat all. Move cursor to using ► button, then press "ENTER"/ (↵) to confirm the setting. Press Black (⏏) button to return.

Repeat one Repeat the song being played until STOP is pressed.

Repeat all Play all songs repetitively.

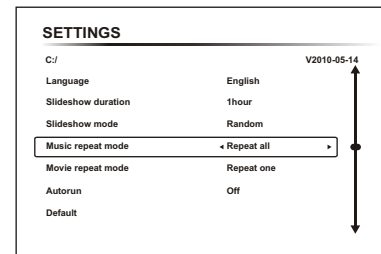


MOVIE REPEAT MODE SETUP

Movie Repeat Mode function has 2 options : Repeat one and Repeat all. Move cursor to using ► button, then press "ENTER"/ (↵) to confirm the setting. Press Black (⏏) button to return.


Repeat one Repeat the movie being played until STOP is pressed.

Repeat all Play all movie repetitively.

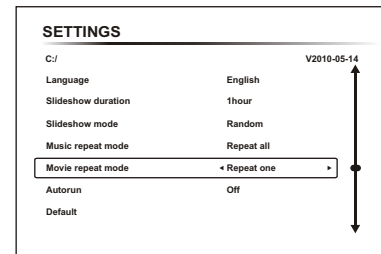


AUTORUN

The storage device automatically play after inserting. (supports only the root directory of the file within the storage devices, the sequential: video, audio, photo)

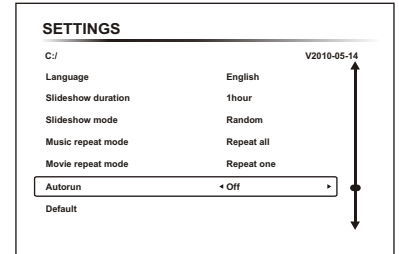


DEFAULT

The DEFAULT - RESET allows you to reset all options to factory settings.

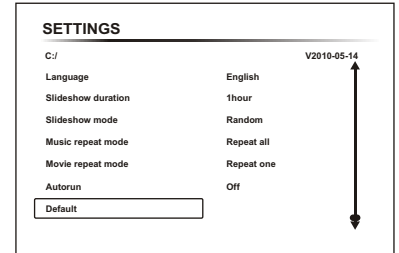


USB SETTINGS

USB Select Media has 4 options : Photo, Music, Movie & file. Move cursor to using ► button, then press “ENTER”/ (↵) to confirm the setting. Press Black (⏪) button to return.

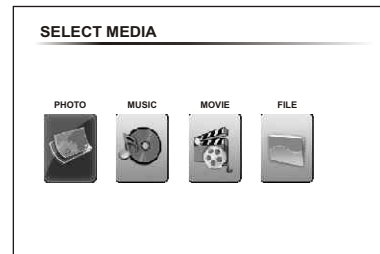


PHOTO

Select the Photo mode you desire using ► button, then press “ENTER”/ (↵) to confirm the setting. After entering the “Photo” column, the photo file list of current directory is displayed in the USB Select Media content area. Select photo file by pressing button ▼ or ►, then press “ENTER”/ (↵) to play it. Select “Play” button to begin information slideslow in random or sequence mode. Press Black (⏪) button to return.

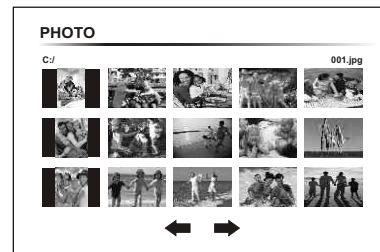


MUSIC

select the Music mode you desire using ► button, then press “ENTER”/ (↵) to confirm the setting. After entering the “Music” column, the music file list of current directory is displayed in the USB Select Media content area. Select music file by pressing ▼ button , then press “ENTER”/ (↵) to play it. Press Black (⏪) button to return.

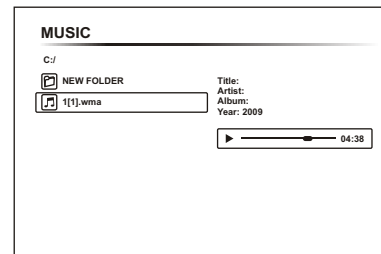


VIDEO

select the Video mode you desire using ► button, then press “ENTER”/ (↵) to confirm the setting. After entering the “video” column, the video file list of current directory is displayed in the USB Select Media content area. Select video file by pressing ▼ button , then press “ENTER”/ (↵) to play it. Press Black (⏪) button to return. Video can play multiple video files with formats including AVI, MPG, MPEG, RM, VOB and DAT.

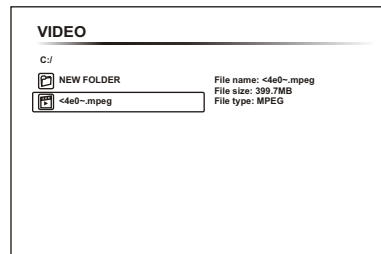

FILE

Show the all file list on the File Mode. Select the file mode you desire using ► button, then press “ENTER”/ (↵) to play it. Select file by pressing ▼ button , then press “ENTER”/ (↵) to play it. Press Black (⏪) button to return.

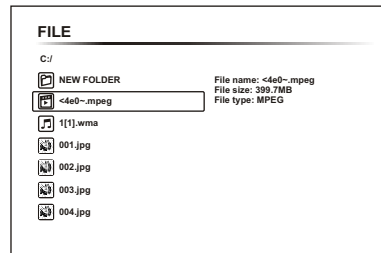

TROUBLESHOOTING

PROBLEM	SOLUTION
IR remote inoperative	<ul style="list-style-type: none">• Verify that the batteries in the remote are fresh.• Verify that the remote sensor eye is not obstructed.• Verify that the infrared transmitter is affixed over the sensor eye of the component to be controlled.
No sound or distorted sound	<ul style="list-style-type: none">• Make sure your AV Source is connected properly. Make sure all cables are securely inserted into the appropriate jacks.• If you are using the IR headphones, make sure you turn on the IR power.

Technical Support 1-800-645-4994

REPLACEMENT PARTS

Remote Control	136-5055
Wireless Headphones	IR1CFF

SPECIFICATIONS

LCD Backlighting	LED
Resolution	2400 x 480
Pixels	1,152,000
Operation Temperature	32 ~149° F (0 ~ 55° C)
Storage Temperature	-4 ~ 176° F (-20 ~ 80° C)
Backlit life	30,000 Hours
Video Output	1.0Vp-p @ 75 ohms
Power Source	12V DC
Dimension	L x W x H
	10.6" x 9.65" x 2.0"
	270mm x 245mm x 51mm

Specifications are subject to change without prior notice.

APPENDIX A FLO TV

Copyrights and Trademarks

© 2009 Audiovox Corporation. All rights reserved.

FLO, FLO TV and the FLO TV logo are trademarks of QUALCOMM Incorporated.

QUALCOMM is a registered trademark of QUALCOMM Incorporated in the United States and may be registered in other countries.

AUDIOVOX is a registered trademark of Audiovox Corporation.

ADVENT is a registered trademark of Audiovox Corporation.

MACROVISION is a registered trademark of ROVI Corporation.

Technical Information

The *FLO TV*™ service operates on UHF channel 55 (720 MHz) and is multicast from terrestrial towers. Coverage will vary and reception is dependent upon the FLO TV module in your vehicle being within range of the towers. Coverage area can be viewed on the FLO TV web site (www.flotv.com).

The FLO (Forward Link Only) TV service is transmitted over the *FLO TV*™ network and received by the FLO TV module in your vehicle. Along with the television program material, data is transmitted for the program guide and is updated on a regular basis. If you are out of the coverage area the program guide will be updated when the vehicle returns to the coverage area.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

FLO TV OPTION (P/N AVXFRK1)

Your ADVM10FR is designed for adding an optional FLO TV Tuner. If you do not have the FLO TV Tuner installed, this section can be ignored. To have the FLO TV Tuner added to your system contact the business that installed your ADVM10FR.

Activation/Subscription Information

Your FLO TV module will need to be activated before you can begin enjoying the *FLO TV* service. Activation takes place after you subscribe to the *FLO TV service*.

To activate the FLO TV module, call 1-888-99FLOTV (1-888-993-5688). You may also activate on line at www.flotv.com. You must be over the age of 13 to activate your subscription.

You will need the following information before you can activate your subscription:

1. Activation Instructions Card
2. Device ID Number
3. Authorization Code
4. A valid credit card AMEX/MC/VISA (have your credit card information ready when you call) Note: The credit card will be used to verify your account and will not be charged if service was included with your product purchase.
5. An active email address
6. Billing information (Home/business address linked to your credit card)

To locate your Device ID and Authorization Code turn on the overhead video display in your vehicle and set the source to FLO TV. Press the FLO TV button on the remote control view FLO TV. Press the  (Settings) key on the remote to access the Settings Menu. Press the  (down arrow) key to highlight Subscription Information and press the ENTER key on the remote. Your Device ID and Authorization Code will be displayed on the overhead screen. Write these numbers down before calling FLO TV.

The FLO TV module is activated over the air and your vehicle must be within the coverage area and running. Keep the vehicle on and powered for about ten minutes after you have activated the unit with *FLO TV Services* for the activation to take place. Test your FLO TV to make sure that you are subscribed and all channels work prior to shutting off the vehicle.

FLO TV Introduction

Please refer to the following as an overview to use the FLO TV *service*:

1. Turn the vehicle ignition key to the ON position. Turn on your ADV10FR and select the FLO TV source by pressing the Source button on the overhead or by pressing the FLO TV Button on the remote. (Note: Watching the *FLO TV* service for an extended period of time with the engine OFF will run down the vehicle's battery.)
2. The ADV10FR screen will show the FLO TV splash screen which will appear for about 30 seconds and then the FLO TV preview channel or the last channel that was being viewed.
3. Press the ▲ (up arrow) or ▼ (down arrow) key on the remote to change channels.
4. Press the ≡ (Guide) key on the remote to access the FLO TV Channel Guide.
5. The arrow keys (▲▼◀▶) on the remote allow for navigation through the Channel Guide.
6. Press the ENTER key on the remote to select a desired channel/show from the Channel Guide.
7. Press the ⓘ (Information) key on the remote to display the program information related to the current program.
8. Press the ⚙ (Settings) key on the remote to access the FLO TV user settings menu (e.g. Parental Control, etc.).
9. The Mode key on the remote allows the user to switch between the *FLO TV* service and an auxiliary A/V source if one is connected.
10. Visit www.flotv.com for more info.

FLO TV Operation

You can operate the FLO TV module with the wireless remote control.

When FLO TV is powered on, the FLO TV logo screen will be displayed until the receiver tunes to a channel. This may take up to 30 seconds after the vehicle and overhead turned on.

Upon power up, the *FLO TV* service will default back to the last viewed channel. If the screen does not appear press the Mode key on the remote control to switch back to FLO TV.



Are You Subscribed?

If you are not subscribed to FLO TV a Preview Channel will be displayed. Changing to another channel will display a screen similar to the adjacent one. (Note: Screen background in this example has diagonal bars in it)

Some channels may not be available for viewing if they are not included in the *FLO TV* service package you are subscribed to.



Are You Covered?

FLO TV service coverage is available in many metropolitan areas and travel corridors within the United States. Please visit the *FLO TV* web site (www.flotv.com) to check the coverage maps in your area.

If you are travelling in an area that is not covered by the *FLO TV* network or travel out of the areas covered by the *FLO TV* network the adjacent screen will be displayed:

Once you have returned to an area covered by the *FLO TV* network, *FLO TV* programming will resume. If you are planning a trip, check the *FLO TV* web site (www.flotv.com) to see if your route is within the *FLO TV* network coverage area.



Remote Control Functions

Function

Use for channel changing (up/down), navigating menus, and selecting items

Symbol



Use to select a channel or setting

OK (ENTER)

Information key - use to display program information.



Channel Guide - use to select the channel guide



Back key - takes the user back one screen when in the Menu, Show Information, Show Description, or Guide. Path ends at full screen TV



Number keys - use to select favorite channels and for PIN entry for parental controls

1,2,3,4,5,6,7,8,9,0

Settings key - allows the viewer to toggle on/off the FLO TV settings menu



Mode key - toggles between FLO TV and an auxiliary A/V source (Note: Your system may not have an auxiliary source)

MODE

How is FLO TV Programming Rated?

Parental controls are built into FLO TV so that you can filter the program and movie content that can be watched on the *FLO TV* service. Adjacent is a ratings chart based on content type for TV program material and movie material:

Movie ratings information, if provided, is available in the FLO TV programming guide. Audio content can be restricted as well based on the adjacent chart:

Notes

- o Unrated content (NR) does not have a rating exposed in the user interface, and the rating string value will be blank when this occurs.
- o FLO TV blocks or allows unrated programs based on whether the unrated program is allowed to play with Parental Controls enabled.
- o Specific programs identified as most restrictive must challenge the user to enter the PIN, even if parental controls are turned on at the least restrictive level.
- o Specific programs identified as least restrictive must NOT challenge the user to enter the PIN, even if parental controls are turned on at the most restrictive setting.
- o If the correct PIN is entered, the restrictive content can be displayed.

TV Ratings
TV-Y
TV-Y7
TV-G
TV-PG
TV-14
TV-MA

Audiocast Ratings
Clean
Explicit

Getting Around in FLO TV

Watching the *FLO TV* service limits the channel information or pop-ups occurring while viewing the program as shown on the adjacent screen:



If you want to see what channel you are on, press the ⓘ (Info) key and the adjacent screen and information will appear:

- Channel Logo
- Program Title
- Program Start Time
- Program End Time
- Program rating



Pressing the ⓘ (Info) key again will display more information about the channel being viewed as shown in the adjacent screen:

 
Information displayed:

- o Channel Logo
- o Program Title
- o Program Start Time
- o Program End Time
- o Program Rating
- o Episode Title
- o Episode Summary

Pressing the ⓘ (Info) key will return the viewer to the full screen.



FLO TV Program Guide

You can access the FLO TV program guide by pressing the  (Guide) key which displays the program guide:

The FLO TV program guide is a matrix of programs and their start times, organized by channel. A user can view the guide and tune to a currently playing program or view program descriptions for future programs. The following information generally is displayed:

- o FLO TV Logo
- o Current Time
- o Current Day
- o Guide Day
- o Guide Time
- o Channel Logo
- o Program Title
- o Parental Block Icon (lock symbol)
- o More Icon ►




Notes

- Programs that are blocked due to Parental Controls display the locked icon.
- The channel logo column is not selectable.
- The guide loops vertically when you press the ▲ (up arrow) or ▼ (down arrow) key.
- The guide is bounded horizontally by time. The user cannot navigate into the past or beyond the amount of guide data available.
- Current program tuned is designated by darker cell color and vertical right color bar when not in focus.
- Guide Day refers to the day within the guide data the user is currently viewing.
- Guide Time refers to the time within a particular day of guide data the user is currently viewing. These values change as the user scrolls right and left through guide data.
- Current Day and Current Time are independent of Guide Day and Guide Time.
- The More ► Icon is visible when a show's length extends beyond the bounds of the current guide view. They are visible when going forward in time and going back in time.

Settings Menu

Press the ⚙️ (Settings) key to enter the Settings Menu and the adjacent screen will be displayed:

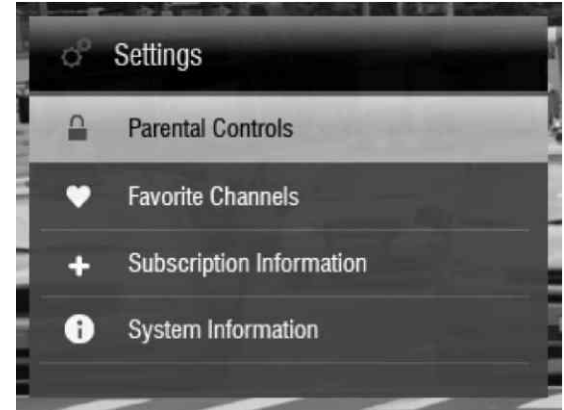

Parental Controls

In the Settings Menu, the first selection is Parental Controls, which is highlighted in light gray. Press the ENTER key to access the parental controls menu. The adjacent following screen will be displayed:



Use the ► (right arrow) key to highlight the parental on/off control and press OK to enable it or disable it. Once enabled, press the OK key and you will be prompted to create a PIN (Personal Identification Number) as shown in the adjacent screen:




Use the remote control keypad to enter a 4 digit PIN. When the fourth digit is entered the adjacent screen will appear to confirm the new PIN.



Re-enter the same 4 digit PIN to confirm the PIN number.
The adjacent screen will be displayed:

(NOTE: Write the PIN down in a secure location. If it is lost you will have to call 1-888-99FLOTV to reset the PIN. The PIN cannot be reset online. Do not share your PIN with the person whose access to programming is being restricted.)

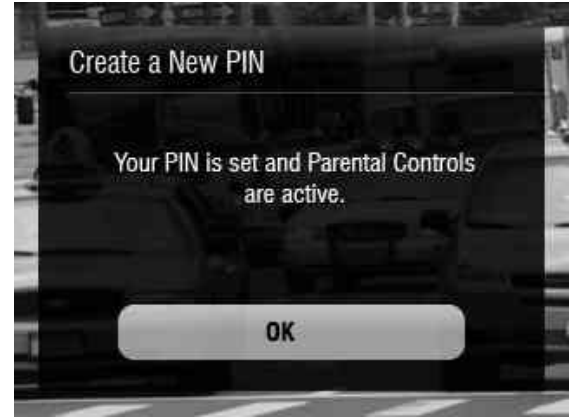

Once you have set your PIN, you can now change the ratings limit on TV, Movies and Audio content. To change the ratings:

Use the ▼ (down arrow) key to highlight TV Rating, Movie Rating or Audio Limit or Restricted Channels and press the OK key on the remote control. The adjacent screen will appear:

Use the ► (right arrow) and ◀ (left arrow) key to change the TV rating. Once you get to the rating you want, press the OK key to select it. Press the (Back) key to return to TV viewing.



Favorite Channels

Up to 10 channels can be programmed into the numeric keys on the remote. Once they are programmed, pressing any one of them tunes your FLO TV to the channel that you have pre-programmed to the number key.

If you have not pre-programmed favorites, when you press a numeric key, you will be prompted by the info bar at the bottom of the screen asking you if you want to add the channel to your favorites:

To program favorite channels press the ⚙️ (Settings) key to access the settings menu. Use the ▼ (down arrow) key to highlight Favorite Channels and press the ENTER key.

The adjacent screen will appear which lists each channel available on the FLO TV service. Use the ▲ (up arrow) or ▼ (down arrow) key to highlight a channel and press a numeric key to set the highlighted channel to a favorite. In the example below, the Nickelodeon channel is set to the number 1 key.

Once you are back watching the FLO TV service you can press a number key to quickly access your favorite channels. Up to 10 channels can be programmed with the numeric keypad (0-9).



Subscription Information

In the Settings Menu, use the ▲ (up arrow) or ▼ (down arrow) key to highlight Subscription Information and press the ENTER key, the adjacent screen will be displayed:

This screen tells you the basic information of your FLO TV system.
(Note: The Authorization Code and Device ID will be different from the above screen, which is for reference only.)



System Information


In the Settings Menu, use the ▲ (up arrow) or ▼ (down arrow) key to highlight System Information and press the OK key, the adjacent screen will be displayed:

This screen tells you the signal strength of the FLO TV signal. If you are having reception problems, go to this page to see if the FLO TV signal is available at your location. (Note: The Device ID will be different from the adjust screen, which is for reference only.)






Legal Information

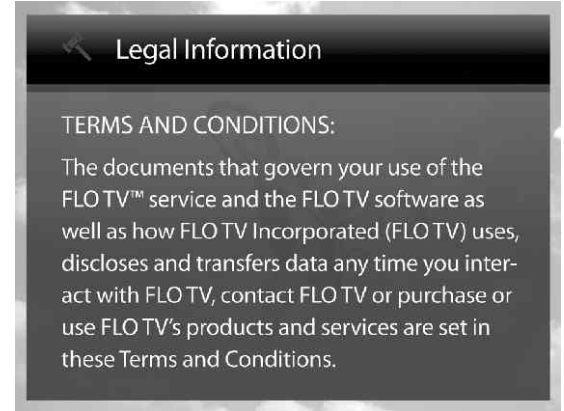


Use the ▼ (down arrow) key to highlight Legal Information. This information governs the terms and conditions of your use of the *FLO TV* service and the *FLO TV* network. To see the full text and the privacy policy go to www.flotv.com.

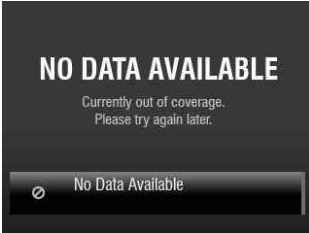

Troubleshooting

Explanation	FLO TV Screen Observed
<p>You are not subscribed and are not able to access any channel except the FLO TV channel.</p>	 <p>The image shows a black screen with the FLO TV logo at the top. Below the logo, the text reads: "You are not subscribed to this channel. Please call 888-99FLOTV or visit us at www.flo.tv.com to subscribe." At the bottom, it displays "Device ID: 123456789012345" and "Authorization Code: 123456789012".</p>
<p>Unable to access any channel; you are out of the coverage area.</p>	 <p>The image shows a black screen with the FLO TV logo at the top. Below the logo, the text reads: "Currently out of coverage. Please try again later."</p>
<p>You are either out of the coverage area or your FLO TV module has not updated the program guide information. The FLO TV Service will return to normal when you are back in the coverage area.</p>	 <p>The image shows a black screen with the text "NO DATA AVAILABLE" in large white letters at the top. Below it, it says "Currently out of coverage. Please try again later." At the bottom, there is a button with a refresh icon and the text "No Data Available".</p>

Troubleshooting (cont'd)

Explanation	FLO TV Screen Observed
<p>You are in a fringe coverage area; programming will return to normal when you are back in the coverage area.</p>	 A black rectangular screen with the FLO TV logo at the top center. Below the logo, the text "Acquiring signal, please wait..." is displayed in a white, sans-serif font.
<p>You are out of the coverage area; programming will return to normal when you are back in the coverage area.</p>	 A black rectangular screen with the FLO TV logo at the top center. Below the logo, the text "Currently out of coverage. Please try again later." is displayed in a white, sans-serif font.
<p>Contact the car dealer or the retailer where this product was installed or purchased.</p>	 A black rectangular screen with the text "NO ANTENNA" in large, bold, white, sans-serif font at the top center. Below it, the text "Please check your antenna connection." is displayed in a smaller, white, sans-serif font.

Troubleshooting (cont'd)

Problem	Root Cause	Solution
Poor or No Video	FLO TV Input not selected	Change the source inputs on the overhead until the FLO TV signal is displayed.
Wireless Remote Control does not work	Batteries installed incorrectly	Verify that the two AAA batteries are installed properly per the polarity markings.
	Batteries are dead	Replace the two AAA batteries.

Customer Care – This number is for problems with FLO TV Service and is not for problems with the VOD108FR Call 1-888-99FLOTV (1-888-993-5688)



ADVENT LIMITED WARRANTY

Applies to ADVENT Mobile Video Products



AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that, should this product or any part thereof (except game controllers), under normal use and conditions, be proven defective in material or workmanship within 36 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. If your new vehicle's radio, CD/DVD player is covered by the manufacturer's warranty for a period of 48 months as set forth in the OEM Warranty Booklet, the company will extend the Advent Mobile Video product warranty for the same period of time. This is not applicable to extended warranty purchases beyond the original manufacturer's warranty. A game controller, if supplied, is similarly warranted for ninety (90) days.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to digital memory/media devices, gaming devices, discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD NOT EXCEEDING 12 MONTHS AFTER EXPIRATION OF THE WARRANTY. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.



For Customer Service
Visit Our Website At
www.mobile.audiovox.com
Product Information, Photos,
FAQ's Owner's Manuals
