


WUX OWNER'S MANUAL

WUX

1. Apply Audio signal 400mVrms into Audio input L/R of the FM transmitter box.
2. Apply DC 12V into Power input (4. Red for DC 12V, 5. Black for ground)
3. Select the frequency to transmit (Channel 1.:49.1MHz, Channel 2.:49.7MHz), then find tune the 49MHz FM Headphone to receive the concern frequency.

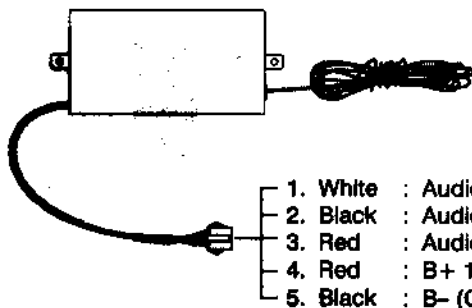

SIDE VIEW



Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.