





will turn off. DC 5V, 1A output 1. En cas de batterie faible, la LED clignotera en Sortie DC 5V, 1A rouge.

> 2. A l'aide du câble USB fourni, branchez l'une des extrémités au port USB de votre PC ou Smartphone (Sortie DC 5V, 1A) et l'autre

extrémité à l'Aud Click. 3. Pendant le chargement, la LED du voyant reste rouge jusqu'à charge complète de la batterie. Une fois le chargement terminé, a LED s'éteint.

Note: If you set an alarm, we recommend you keep charging the unit to prevent low battery/missing alarm." N.B : Si vous activez une alarme, nous vous conseillons de laisser l'appareil en charge pour ne pas vider la batterie/ manquer une alarme.

White LED

LED blanche

Fully charged

Chargement complet

œ

Ο

- 1. Click blue right arrow on the top of the app and
- open 'DEVICE LIST'

2. Click setting icon 3. Select FACTORY RESET menu

1. Si l'appareil se comporte anormalement, utilisez un trombone ou un objet similaire pour enfoncer le bouton de reset situé au bas de l'appareil.

2. Une fois la réinitialisation opérée, vous devrez reparamétrer l'appareil depuis le début.

3. "Réinitialisation Wifi: L'appareil étant sous tension, appuyez et maintenez à la fois pendant 5 secondes le bouton Play/Pause et le bouton WPS. FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and (2) this device

must accept any interference received, including interference that may cause undesired

operation.

This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment.