 
# Front page in English

# iLUV

# **True Wireless Stereo Earbuds with Charging Case**





English

# WHAT'S INCLUDED

LEVEL OF PROTECTION FROM WATER INTRUSION FCC ID: ATL-TS100

**TS100** User Manual (Ver 2.1)

Bluetooth 5.1

# **8** POWER ON AND PAIRING

### 1. Before Using

Please charge your TS100 before use. Simply take the earbuds out of the charging case and insert them into your ears. The earbuds will automatically power on and become ready to pair to your device.



The TS100 earbuds are rated IPX6 Waterproof which means that the earbuds can resist high pressure water sprays however they shouldn't be submerged under water for a long period of time.

# 2. Wear Earbuds

Both earbuds are marked with a L or R to indicate the appropriate ear side; earbuds are differently angled to fit either the left or the right ear. The proper fit will ensure the best sound quality. Insert the earbud into your ear and rotate slightly clockwise (as shown in image below); adjust for

### 3. Power On and Pairing TB100 earbuds will automatically turn on

whenever removed from the charging case.

 
- A. "Power o'hprompt will be heard through the earbud within the first few seconds of wearing.
- B. "Please pair to your device" prompt will be heard through the earbud if the previously paired device is not found.

### C. Turn on Bluetooth on your device a. Go to Settings > Bluetooth.





b. Turn on Bluetooth.



MY DEVICES
iLuv TS100 Not Connected ①

d. Wait for successful pairing

# LISTENING TO MUSIC

Once paired, open a music app on your device to Play/Pause music, adjust Volume Up/Down and Track Next/Previous.

holding the touch area of the earbuds. The Right earbud will adjust the Volume Up and the Left earbud will adjust the Volume Down; a sound prompt "Du..du..du.." will be heard from both earbuds.

You can adjust the Volume Up/Down by touching and

You can Play/Pause your music by simply touching the touch area of either earbud once; a sound prompt "Du" will be heard from both earbuds.

of the earbuds. The Right earbud will skip to the next track and the Left earbud will skip to the previous track; a sound prompt "Du" will be heard from both earbuds.

SIRI & GOOGLE ASSISTANT VOICE CONTROL

You can skip tracks by double touching the touch area

# HANDS-FREE CALLING

Please follow the instructions below to answer/ hang up/reject calls.

1. Answer Call



touch area of either the Right or Left earbud; a sound prompt "Du" will be heard from both earbuds.

To activate Siri with the TS100, triple touch the

# 2. Hang Up Call

3. Reject Call



**Note:** Availability of Google Assistant voice control features will vary by different Android Phone Touch area is located directly on the center of the

earbud. 3. Checking the Battery Level

**F** CHARGING

## 1. To charge your earbuds Place both earbuds into the charging case

whenever not using; Make sure to keep the lid closed. 2. To charge your case

### With the provided micro USB Cable, plug the micro USB port into the charging port located

on the backside of the charging case. Then plug the USB side of the Micro USB Cable into a standard USB Charger or port.

## A. Earbuds Earbud LEDs will indicate charge status while

- being charged in the case · When fully charged, earbud LEDs will be
- turned off B. Charging case
- LED will indicate the Battery level of the case
- whenever connected to a charger All LEDs will be lit when charging is complete
- LED will display the battery level of the case for 4 seconds when the earbuds are placed back in the case

### The TS100 earbuds will provide a playtime of 20 hours. Get up to 8 hours on a single charge and an

**Charging Time** 

Play time after

charged for 20 minutes

**BATTERY LIFE** 

additional 12 hours from the included charging case. For a quick charge, place both earbuds back into the charging case for 20 minutes and get 2 hours of listening time. Earbud **Charging Case** Listening Time 8 hrs\*\* 12 hrs

1.5 hrs

2 hrs

1.5 hrs

\*\* Listening time measured on a single charge at an 80% volume level

## 1. Power On the Earbuds The earbuds will automatically power on and

**Ů** POWER ON/OFF

## connect to the previously paired device whenever taken out of the charging case.

To power on the earbuds

seconds until a "Power oh

without the charging case, hold the touch area of both earbuds for 2

prompt is heard.

### 2. Power Off the Earbuds To power off the earbuds,

place both earbuds into the charging case and close the lid.

to power off the earbuds without the charging case; a " Power off " prompt will be heard. Please make sure that all music/audio is paused before powering off.

### Please hold the touch area of either earbuds for 5 seconds

3. Auto Power Off To conserve battery, the earbuds will automatically power off when it's out of range from your device for

### Place both earbuds into the charging case and leave the lid closed; take earbuds out of charging case after 15 seconds.

(\*) TROUBLESHOOTING

This simple trick will resolve most problems which include but isn't limited to L/R channel disconnection or pairing/connectivity issues with devices.

**Q** FAQ (FREQUENTLY ASKED QUESTIONS)

4. What will affect the total playtime?

and connection status.

1. How can I power on/off the TS100? The earbuds will automatically power on when removed from the charging case and power off when placed back into the charging case. Whenever the charging case isn't near the earbuds, hold the touch

area of both earbuds for 2s to Power on and hold the touch area of either earbud for 5s to Power off. 2. How can I play/pause music or receive calls? Simply touch the touch area of either earbud to Play/ Pause music. Double touch either earbud to receive

phone calls. 3. How can I control the volume of the music or call? Touch and hold the touch area of of the Right/Left earbud to turn Up/Down the volume.

Playtime will vary by the volume level, type of audio

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced addio/TV echnician for help

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can adalet and in greunery energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation, if this equipment does cause harmful interference to radio or television reception, which can be determined by running the equipment and on, the user is encouraged to try to correct the interference by one or more of the following measures.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Hereby, iLuv Creative Technology declares that the radio equipment type Bubble Gum Air is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the follow internet address: www.iluv.com

TROUBLE SHOOTING: When the battery is completely drained while not in use for a long period of time, try charging it a few times as it will resume its normal charging process. Restart the charging process if the charging indicator does not respond or is turned off after a few minutes.

DEPANNAGE: Lorsque la pile est completement épuisée parce qu'ellen à pas été utilisée depuis longtemps, normalement. Recommencez le processus de chargement si l'indicateur de charge ne répond pas ou s'il s'éteint après quelques minutes.

ONE YEAR LIMITED WARRANTY GARANTIE LIMITÉE D'UN AN

**EUROPEAN UNION** TWO YEARS LIMITED WARRANTY GARANTIE LIMITÉE DE DEUX ANS

