

iLuv[®]

**Jumbo White LED Display
Dual Alarm Clock with Qi
Certified Wireless Charging
Station, FM Radio, USB
Charging Port and Bed Shaker**

 
TimeShaker 5Q Wow

User Manual (Ver 1.0)



English



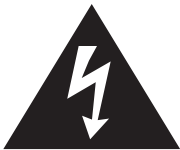

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



 
CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONEL.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. All the safety and operating instructions should be read before the product is operated
2. The safety and operating instructions should be retained for future reference.
3. All warnings on the product and in the operating instructions should be adhered to.
4. All operating and use instructions should be followed.
5. Use of controls or adjustments or performance other than those specified may result in hazardous radiation exposure.
6. Do not use this product near water or expose to rain to prevent fire or shock hazard, i.e. bathtub, washbowl, kitchen sink, laundry tub, wet basement, or swimming pool, etc.
7. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
8. Unplug TimeShaker 5Q Wow during lightning storms or when unused for long periods of time.
9. When main plug is connected, TimeShaker 5Q Wow is operational. In order to disconnect TimeShaker 5Q Wow completely, the main plug should be disconnected from the main socket outlet.
10. Battery should not be exposed to excessive heat, such as sunshine or fire.
11. If battery is incorrectly replaced, it may cause explosion. Replace only with the same or equivalent type.


WHAT'S INCLUDED

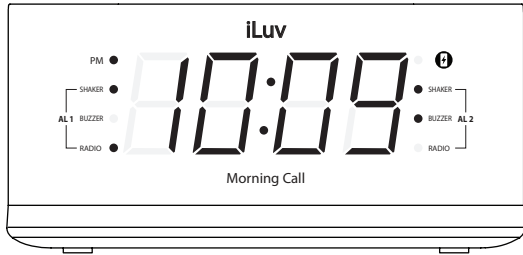


TimeShaker 5Q Wow

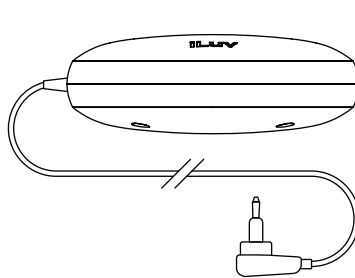 

Shaker

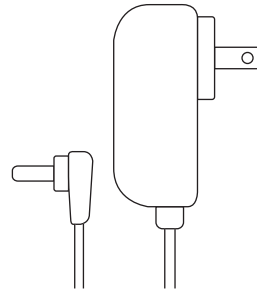 


Power Adaptor

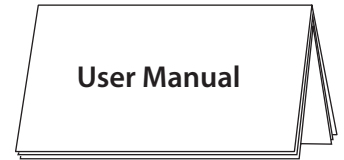 

User Manual

OVERVIEW OF THE PRODUCT

 Top

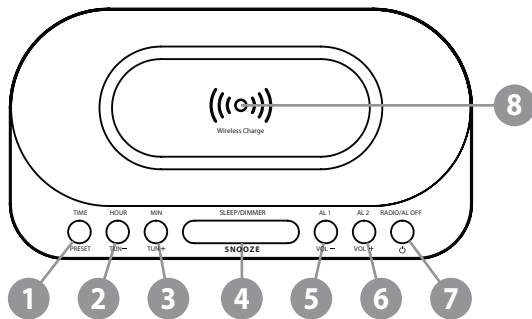


Front




- 1 TIME/PRESET
- 2 HOUR/TUN-
- 3 MIN/TUN+
- 4 SNOOZE/SLEEP/DIMMER
- 5 ALARM 1/VOLUME-
- 6 ALARM 2/VOLUME+
- 7 POWER/RADIO/ALARM OFF
- 8 WIRELESS CHARGING PAD
- 9 PM INDICATOR
- 10 ALARM 1 INDICATOR (SHAKER)
- 11 ALARM 1 INDICATOR (BUZZER)
- 12 ALARM 1 INDICATOR (RADIO)
- 13 WIRELESS CHARGE INDICATOR
- 14 ALARM 2 INDICATOR (SHAKER)
- 15 ALARM 2 INDICATOR (BUZZER)
- 16 ALARM 2 INDICATOR (RADIO)

 Back

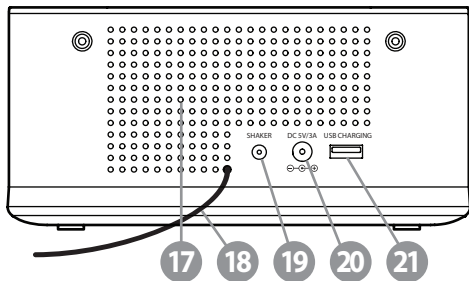

- 17 SPEAKER
- 18 FM RADIO ANTENNA
- 19 SHAKER PORT
- 20 DC POWER INPUT PORT
- 21 USB CHARGING PORT
- 22 BATTERY COMPARTMENT

 Bottom

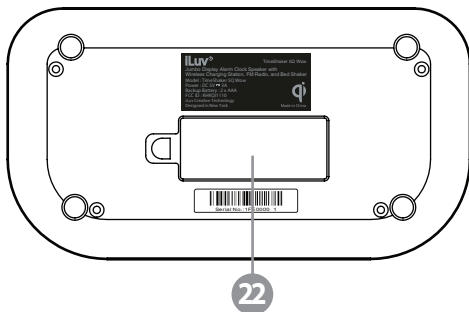


CONNECTING TO POWER

Connect the included AC adapter to the **20 DC PORT** located on the back of the unit and connect the other end to a working wall outlet.

CONNECTING TO SHAKER

 
- 1 Connect the included shaker to the **19 SHAKER PORT** located on the back of the unit.
- 2 Store the shaker under the pillow.

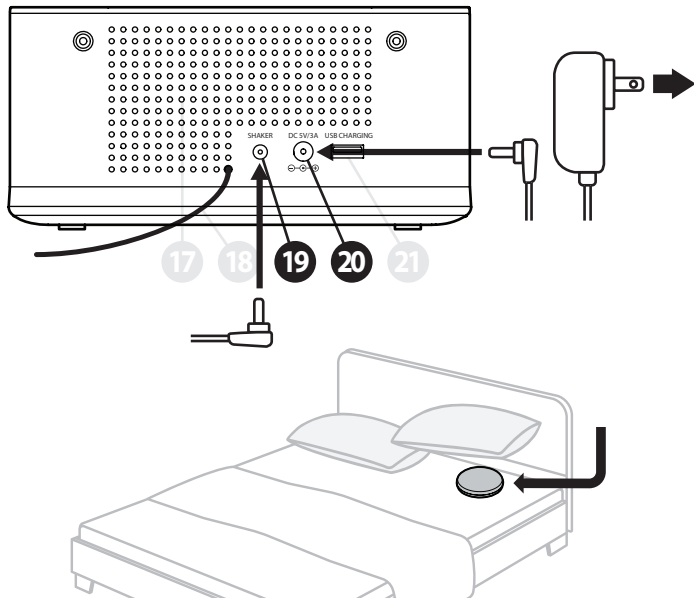

TIME SET-UP

! The default time is set at **12:00AM**

 
- 1** Press & **HOLD** **1** [**TIME**] to enter the **TIME SET-UP** mode.
- 2** Press **2** [**HOUR**] to set the hour and **3** [**MIN**] to set the minute.
(Press & **HOLD** for faster adjustment)
- 3** When finished, press **1** [**TIME**] to confirm and exit from **TIME SET-UP** mode.

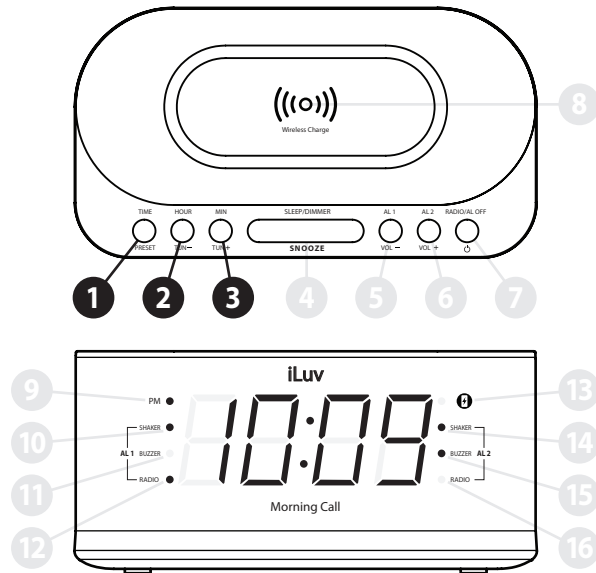

! SETTING UP YOUR ALARM:
Alarm Time > Alarm Sound Source > Alarm Sound Volume
(Volume adjust option is only available when setting the alarm sound source to "RADIO")

1 Entering ALARM SET-UP Mode:
Press & **HOLD** **5** [**AL 1**] to enter the **ALARM SET-UP** mode. When the display is blinking, you have successfully entered the **ALARM SET-UP** mode.

 2 Setting Your Alarm:
Press **2** [**HOUR**] to set the hour and **3** [**MIN**] to set the minute. (Press & **HOLD** for faster adjustment)
Press **5** [**AL 1**] to confirm and proceed to your **Alarm Sound Source** setting.

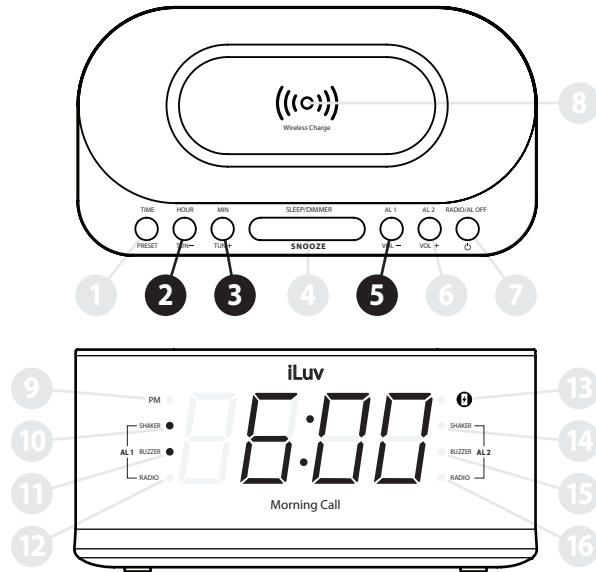

3 Selecting Alarm Sound Source :

Press **2** [HOUR] or **3** [MIN] to select either the **11** BUZZER or **12** RADIO or **10** SHAKER or **11** **10** BUZZER+SHAKER or **12** **10** RADIO+SHAKER as your desired alarm source.
Press **5** [AL1] to confirm.

3-1 Setting Wake-up Radio Volume:

Press **2** [HOUR] or **3** [MIN] to set wake up sound volume from **V5** to **V15**.

(Default Volume Level: **V8**)

 
Press **5** [AL 1] to confirm.

(If you select Radio, the **last station** selected will be played.)

4 Once the alarm setting is complete, the alarm will be ready with the corresponding alarm indicator on.

(To set-up Alarm 2, follow the instructions 1-4.


Press **6** [AL 2] to set up Alarm 2)

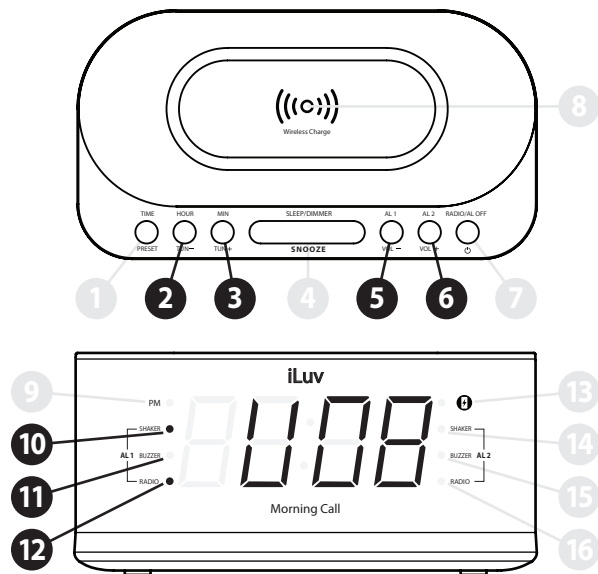

ENABLE/DISABLE ALARM


! Please remember to Activate/De-activate the alarm accordingly. If you turn off the alarm, you must enable it again for the alarm system to be activated.

 To activate/de-activate your alarms, press the corresponding **5** [AL 1] and/or **6** [AL 2].
When the **11**/**15** Buzzer or **12**/**16** Radio or **10**/**14** Shaker indicator light is showing, the alarm is set to **ON** and will activate at the scheduled time. If the indicator light is not showing, the alarm is set to **OFF**.

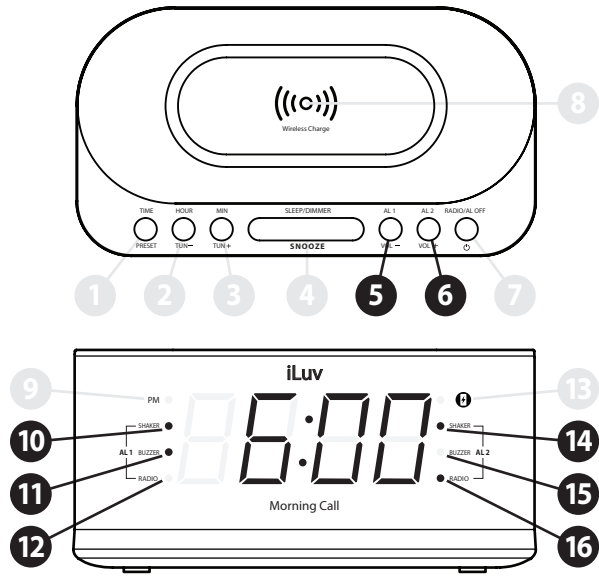

ALARM SNOOZE/SHUT-OFF

 
- 1** When the alarm is activated, the corresponding **10/11/12 Alarm 1** or **14/15/16 Alarm 2** indicator will blink on the display.
- 2** Press **4 [SNOOZE]** to temporarily de-activate the alarm. The snooze function will extend your alarm in increments of 9 minutes. The corresponding **10/11/12 Alarm 1** or **14/15/16 Alarm 2** indicator will blink on the display during the snooze period.
- 3** To stop the alarm completely, press **7 [⏻]**. This will de-activate the alarm until the next scheduled alarm.

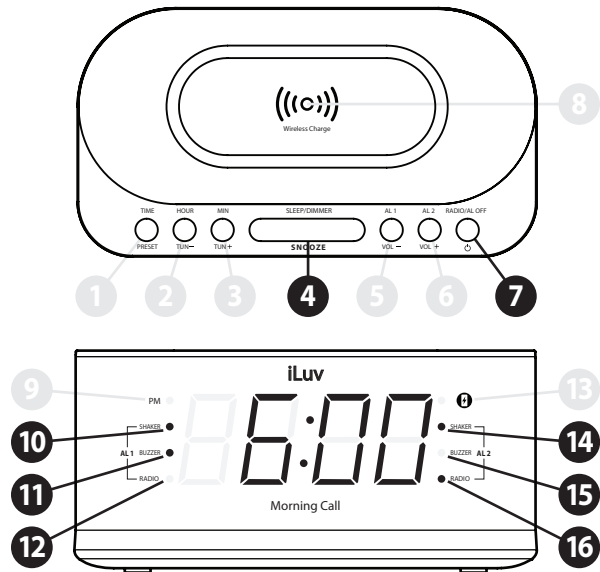

SLEEP TIMER FUNCTION

! The Sleep Timer Function allows you to set-up a timer for the radio to turn-off automatically.

 
- 1** To activate the **SLEEP TIMER FUNCTION**, press **7** [**⏻**/**RADIO/AL OFF**] to turn on the radio.
- 2** Press **4** [**SLEEP/DIMMER/SNOOZE**] as needed to cycle to the desired timer limit (in minutes): 10, 20, 30, 40, 50, 60, 70, 80, 90 and 00(off).
- 3** After your selection, wait 3 seconds to allow the sleep timer function to be set.

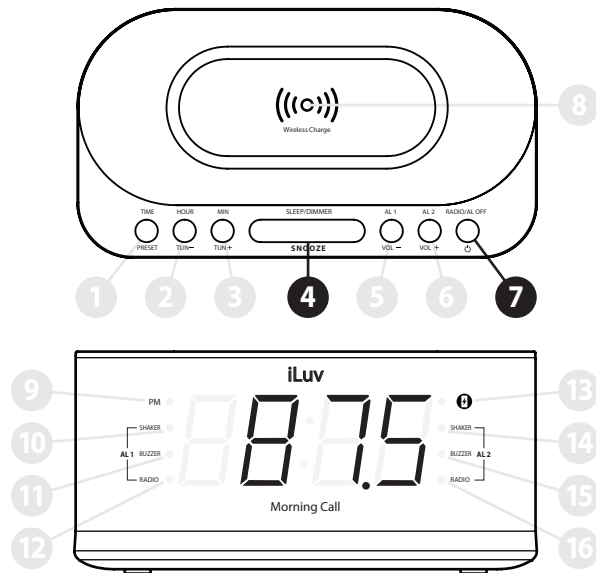

4 When Set-up is complete, the radio will shut off automatically depending on your selected timer setting.


5 To check the remaining amount of time left, simply press **4** [**SLEEP/DIMMER/SNOOZE**].

 6 To turn off the **SLEEP TIMER FUNCTION**, press **4** [**SLEEP/DIMMER/SNOOZE**] until 00 is displayed. The timer will then be set to "OFF"

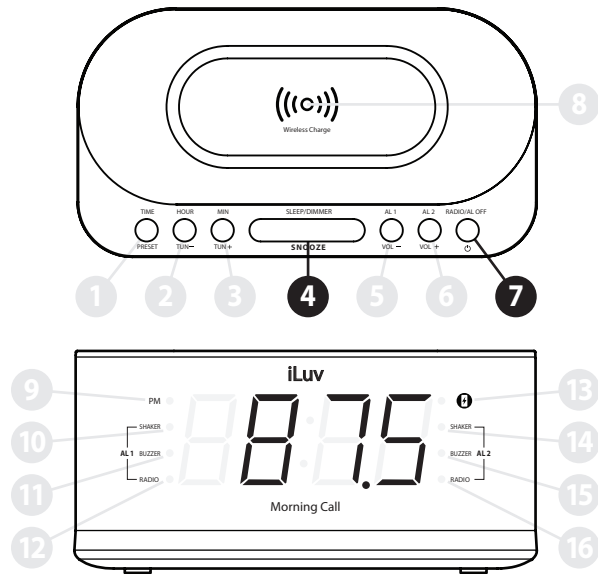


LISTENING TO YOUR FM RADIO

 - 1** Unravel and extend the antenna to improve the FM radio signal reception.
- 2** Press **7** [**⏻** / **RADIO** / **AL OFF**] to turn the radio on.
- 3** To adjust the radio frequency, press **2** [**TUN-**] and **3** [**TUN+**] respectively.
- 4** Press & **HOLD** **2** [**TUN-**] or **3** [**TUN+**] to automatically tune to the next available FM station.
- 5** To turn the FM radio off, press **7** [**⏻** / **RADIO** / **AL OFF**].

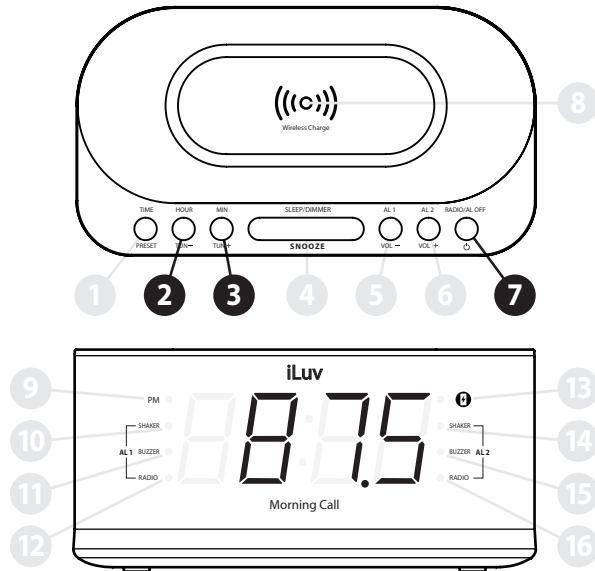

STORING PRESET RADIO STATIONS

 
- 1 Press **7** [**⏻** / **RADIO** / **AL OFF**] to turn on the radio.
- 2 Tune to your desired FM Station by pressing or holding **2** [**TUN-**] or **3** [**TUN+**].
- 3 Press & HOLD **1** [**PRESET**] until the Preset Mode appears.
- 4 Toggle through the preset numbers (P01-P10) by pressing **2** [**TUN-**] or **3** [**TUN+**].
- 5 To program the station to its preset, press **1** [**PRESET**] to complete the process.

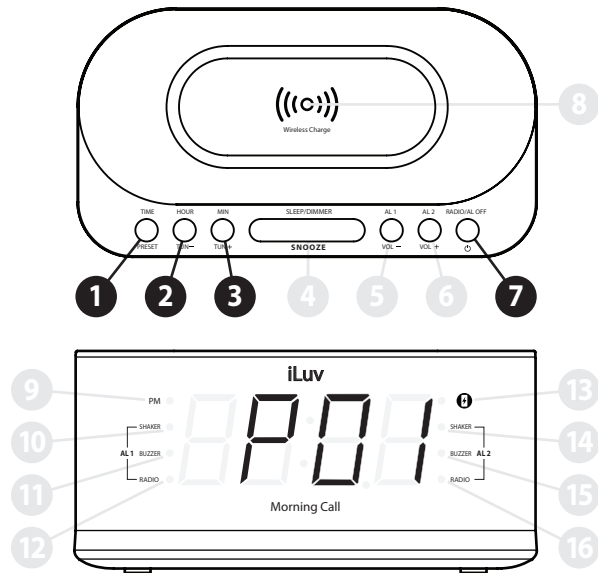

LISTENING TO YOUR PRESET STATIONS

! Preset option is only available when the Radio is on.

 
- 1 Press **7** [**⏻** / **RADIO** / **AL OFF**] to turn on the radio.
- 2 Press **1** [**PRESET**] repeatedly until your desired preset station appears.
(P01 > P02 > P03 > ... > P10)

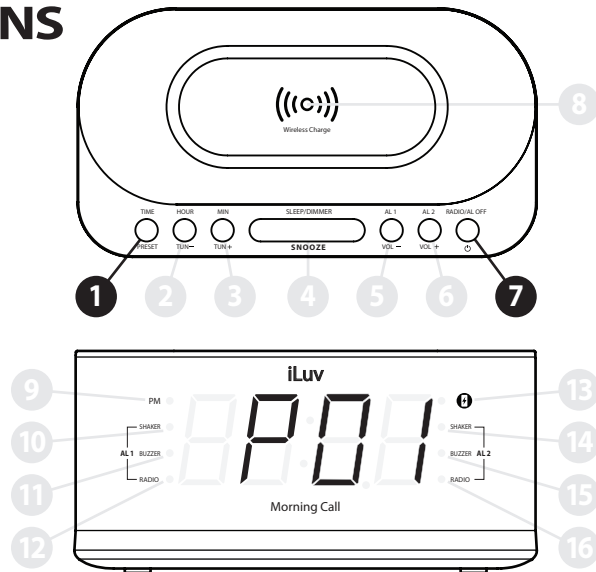


DISPLAY DIMMER

! To adjust the brightness, Alarm clock must be on Stand-by Mode.

 - 1 Press **4** [**SLEEP/DIMMER/SNOOZE**] to change the brightness level of the display: (Low > High > Off)
- 2 Default setting of the dimmer level is "Low"

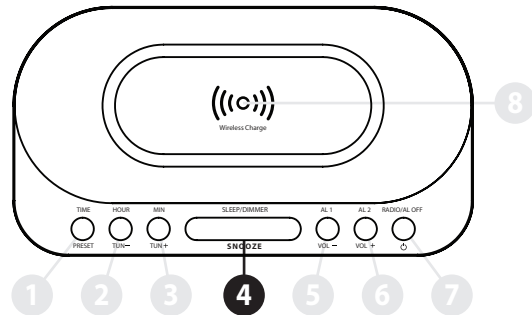

 - 1** To charge other devices such as a smartphone or tablet, connect one end of the USB charging cable (not included) to the **18** USB charging port on the back of the main unit.
- 2** The TimeShaker 5Q Wow cannot access the content of the connected device.
- 3** The USB Charging port is compatible to most smartphones, tablets, portable speakers, wireless headphones, wearables, etc.

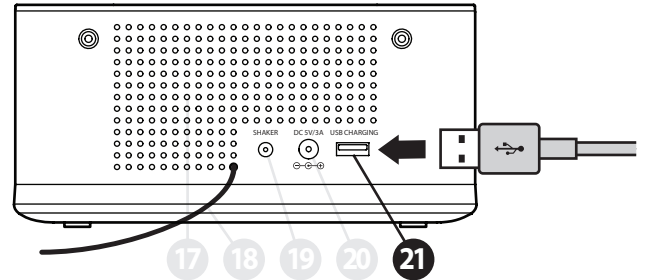

USING QI WIRELESS CHARGING



IT IS SUGGESTED TO CHARGE YOUR PHONE WITH A WIRED CABLE INSTEAD OF A WIRELESS CHARGER DURING PHONE SOFTWARE UPDATE. OTHERWISE, CHARGE YOUR PHONE FULLY BEFORE THE PHONE SOFTWARE UPDATE.

Place your Qi enabled smartphone on the center of the **8 Wireless charging pad.**

 
For best connectivity, align your phone with the alarm clock.

Compatible Products for Wireless Charging:

iPhone X/Xs, iPhone Xs Max, iPhone XR, iPhone 8/8 Plus, Samsung Galaxy Note 8/5, Galaxy S9/S9+/S8/S8+, S7/S7 Edge, S6 Edge+, S6/S6 Edge, LG V30, Nexus 7/6/5, other Qi enabled smartphones/tablets and accessories.



PMA wireless charging system is not supported.

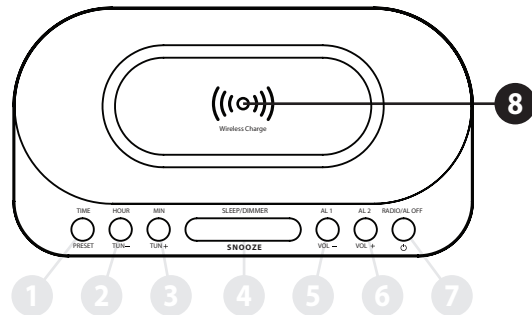

WIRELESS CHARGE INDICATOR

13 Wireless Charging Indicator light is displayed on the right top corner of the product display. Refer to the Light status indicators below:


1 Off : Stand-by Mode

2 Solid Blue : Charging

3 Blinking Red : Abnormal

***If the charging indicator blinks red:**

 - Check if your device supports Qi wireless charging
- Place mobile device in center of the **8** **Wireless charging pad**
- Remove any protective cases containing magnets, metal, or materials thicker than 0.12" (3mm)

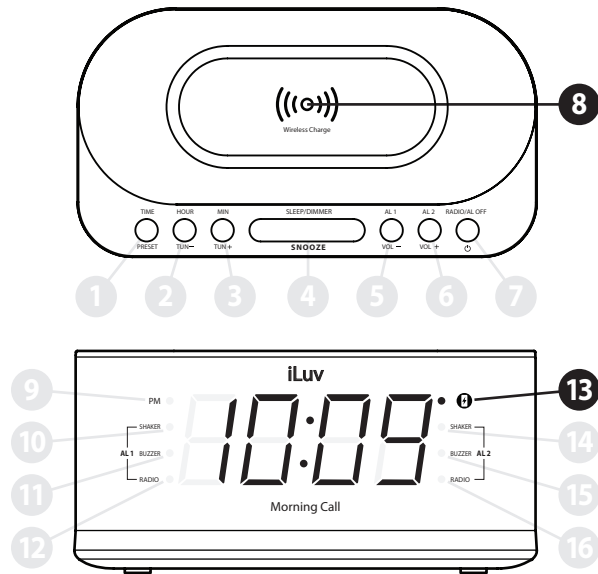

BATTERY BACK-UP OPERATION

BACK-UP BATTERY WILL NOT OPERATE THE CLOCK

 
- 1** TimeShaker 5Q Wow is equipped with a timekeeping system that can be powered with two (2) AAA batteries (not included). The power failure protection circuit will not operate unless battery is installed.
- 2** The back-up battery will save all previously programmed settings when normal household power is interrupted. The back-up battery will not operate the clock's normal functions.
- 3** Normal operation will resume after the power is restored. You will not need to set-up the time/alarms/radio if back-up battery is installed correctly.

INSTALLING THE BATTERY

! The back up battery is NOT a secondary source of power. The function acts as a memory saver for your settings in case of a disconnection of power. It is recommended to replace the battery at least once a year.

- 1 Remove the **19** Battery cover.
- 2 Place two (2) AAA batteries (not included).
- 3 Place the battery cover back to its original position.

! In order to save your settings, do NOT disconnect the power adaptor when replacing your batteries.

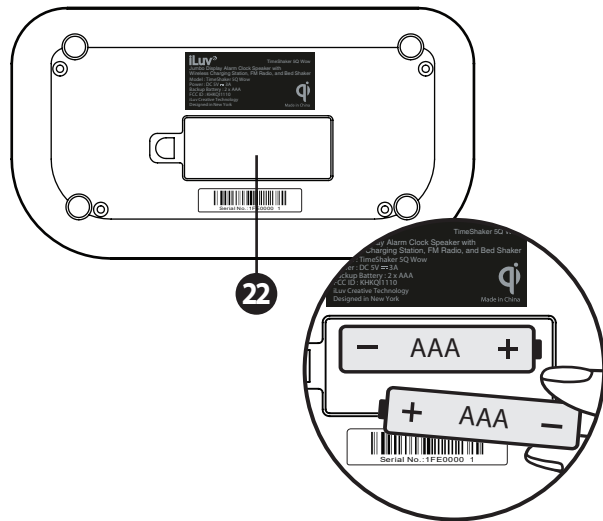

SPECIFICATIONS

Tuner Range	FM: 87.5 – 108 MHz
Number of preset radio stations	10
Amplifier Rated Output Power	600mW(RMS)
AC power adaptor	Input: AC 100-240V, 50/60Hz Output :DC 5V/2.4A.

COMPLIANCE WITH FCC REGULATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator&your body.



Designed by iLuv in New York

LIMITED WARRANTY

WHAT IS COVERED?

iLuv Creative Technology (“iLuv”) warrants, to the original purchaser, that its products will be free from defects in materials, parts, and workmanship for the periods designated in each Product. The Warranty begins on the date of product purchase and covers a period of two years for products purchased in the European Union, and one year for products purchased in other countries (including the United States and Canada), iLuv can exercise the option, during any warranty service, to replace your product with a new or remanufactured unit, equivalent to your original purchase. For information on proper installation, operation and use consult the manual supplied with the product. If a replacement manual is required, visit our website, www.iLuv.com to download a manual.

FCC NOTICE (USA)

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

CUSTOMER SUPPORT

If you have any question or need support, please contact us by visiting <http://support.iLuv.com> or call our customer service department at 1-866-807-5946.

EXCLUSIONS

This Warranty does NOT apply if the serial number is altered or removed. It does not cover cosmetic damage, antenna damage or loss, damage to AC power cords, cabinets, headbands, ear-pads, or damage due to power line surges, connection to an improper voltage source, the use of improper settings, general misuse, mishandling or improper application, accidents, acts of God, repairs attempted by an unauthorized service agent, or damage incurred while the product is being returned to iLuv. If the product was purchased outside the United States, please find an authorized distributor as listed on our web site: www.iLuv.com

OBTAINING WARRANTY SERVICE

Customers must obtain a Customer Return Authorization number (CRA) on our web site, www.iLuv.com (EXPRESS CUSTOMER SUPPORT) to obtain a ticket. Fill out the on-line form including the product’s Date of Purchase, its Model Number, a brief description of the problem, and your daytime telephone number, or customers in the United States and Canada may contact our Customer Service Department at (866) 807-5946 if the problem appears to be related to a defect in material or workmanship.

RETURNING YOUR PRODUCT

The product must be accompanied with a dated proof of purchase, indicating the place of purchase, the model, and amount paid. Send the unit, prepaid, to the address below in suitable protective packaging that meets UPS standards. You must include the CRA number on the outside box, and your telephone number and return shipping address within the package. Return shipments are at the customer’s expense, and the return must be accompanied by the original proof of purchase. We strongly recommend insuring the shipment as appropriate because the customer is responsible for the product until it arrives at iLuv (for U.S. returns) or its authorized distributor (for all other countries). REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. iLuv SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state and country to country.

INSTRUCTIONS ON ENVIRONMENT PROTECTION

Do not dispose of this product in the usual household garbage at the end of its life cycle; bring it to a collection point for the recycling of electrical and electronic appliances. This symbol on the product means the instructions for use or the packing will inform about the methods for disposal. The materials are recyclable as mentioned in its marking. By recycling, material recycling, or other forms of re-utilization of old appliances, you make an important contribution to protect the environment. Please inquire at your local community administration for the authorized disposal location.

iLuv Creative Technology
2 Harbor Park Drive
Port Washington, NY 11050