


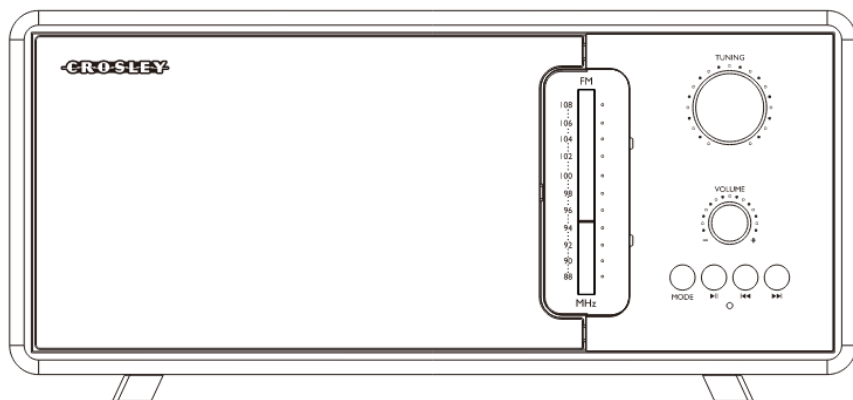

**CR3037B**  
**Harmony Radio**  
**Instruction Manual**

---



Questions, problems, missing parts?  
Before returning to the store, call Customer Service  
8 a.m. – 6 p.m., EST, Monday – Friday  
1-888-CROSLEY  
[www.crosleyradio.com](http://www.crosleyradio.com)

## Safety Instructions

---

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storm or when unused for long periods of time.

## Items in this package

---

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Radio
- Power Adapter
- Aux in cable

Please contact Crosley Customer Service if there is any accessory missing from the package. **Retain the original packaging materials for exchange or return purposes.**

## Specifications


---

Power	AC power adaptor, DC output 10V 1A
Power consumption	12W
Speaker	4Ω 15W
Frequency Range	FM 87.5 – 108 MHz

Note:

- *Design and specifications are subject to change without notice.*
- **To help save power consumption, some models will comply with ERP energy saving standard. When there is no audio input for 20 minutes, their powers will automatically cut-off. To turn power back on and resume playing, you will need to turn off the power and turn it on again.**

## Product Description

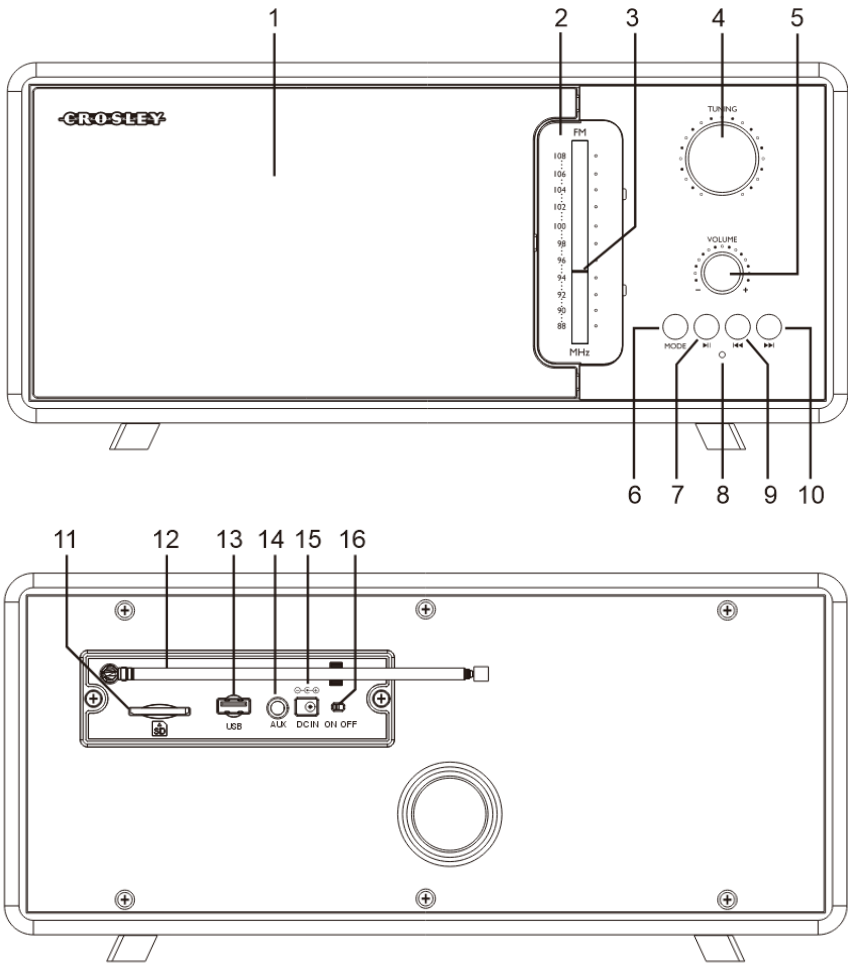

- |                       |                         |
|-----------------------|-------------------------|
| 1. Speaker            | 9. Backward Skip Button |
| 2. Dial Scale         | 10. Forward Skip Button |
| 3. Dial Pointer       | 11. SD Card Slot        |
| 4. Tuning Knob        | 12. FM Antenna          |
| 5. Volume Knob        | 13. USB Port            |
| 6. Mode Button        | 14. Aux In Jack         |
| 7. Play/Pause Button  | 15. Power Jack          |
| 8. Function Indicator | 16. On/Off Switch       |

## Initial Setup

---

### Essential Setup

1. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
2. Connect the Power Adapter to the Power Jack of the unit.
3. Switch the On/Off Switch to the ON position.

## Radio Operation

---

1. Press the Mode Button repeatedly to select the Radio (FM only) mode.

*Note: The FM Indicator will be pink.*

2. Rotate the Tuning Knob for desired radio station.

*Note:*

- *The unit is equipped with a FM antenna. To improve FM reception, move the wire around until the reception is clear without interferences.*

## Bluetooth Operation

---

1. Press the Mode Button repeatedly to select the Bluetooth mode, you will hear an activation sound from the unit.

*Note: The Function Indicator will be blue.*

2. Turn on the Bluetooth feature of your audio device, search for "CROSLEY CR3037B" and pair.
3. Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit.
4. Play and stream music from your device to the unit.
5. During playback, press the Play/Pause Button to suspend and resume song.
6. During playback, press the Backward Skip Button or the Forward Skip Button for the previous or next song.

*Note: Bluetooth version - \*5.0\**

## Aux Input Connection

---

You can connect an audio device to this unit and play your music through its speakers. To do this, turn on the unit, press the Mode Button to Aux-In Mode (yellow), connect a 3.5 mm auxiliary cable between your audio device to the Aux In Jack of this unit and start playing the music.

## **USB/SD Playback**

---

1. Press the Mode Button repeatedly to select the USB (Green) or SD (Purple) mode.
2. Insert a USB device into the USB port or a SD memory card into the SD card slot.
3. To skip to the next or previous track, press the Forward Skip or Backward Skip button correspondingly.
4. During the playback, press the Play/Pause button to pause. Press it again to resume playback.

## **Troubleshooting**

---

### **There is no power**

- No power at the power outlet.
- Power adaptor is not connected correctly.

### **There is no sound**

- Make sure the volume is turned up.
- Mode is in the Bluetooth position.
- Make sure the volume on your third party device is turned up.

## **FCC Statements**

---

FCC RF exposure statement: The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.