

## TABLE OF CONTENTS

|                                               |           |                                                                  |
|-----------------------------------------------|-----------|------------------------------------------------------------------|
| <b>WELCOME.....</b>                           | <b>4</b>  | <b>CHAPTER 2 BASIC OPERATION.19</b>                              |
| <b>ABOUT THIS USER GUIDE .....</b>            | <b>5</b>  | <b>Turning the Phone ON and OFF ...20</b>                        |
| <b>CHAPTER 1 BEFORE USING YOUR PHONE.....</b> | <b>7</b>  | Turning the Phone On.....20                                      |
| <b>Package Includes .....</b>                 | <b>8</b>  | Turning the Phone Off.....20                                     |
| <b>Handset Description .....</b>              | <b>9</b>  | <b>Installing SIM CARD.....21</b>                                |
| <b>Main Display .....</b>                     | <b>10</b> | <b>Basic Functions .....</b>                                     |
| Icons .....                                   | 10        | Making a Call .....                                              |
| <b>Function Keys .....</b>                    | <b>11</b> | Receiving Calls .....                                            |
| <b>Use of SIM Card.....</b>                   | <b>12</b> | International Call, Call to an Extension,<br>Emergency Call..... |
| <b>Navigation Key .....</b>                   | <b>13</b> | 25                                                               |
| <b>Using the Battery .....</b>                | <b>14</b> | <b>Entering Letters and Numbers.....26</b>                       |
| Installing the Battery .....                  | 14        | Key Features.....                                                |
| Removing the Battery .....                    | 14        | 28                                                               |
| <b>Charging the Battery.....</b>              | <b>15</b> | <b>CHAPTER 3 MENU.....29</b>                                     |
| Power Connection.....                         | 15        | <b>Message .....</b>                                             |
| Charging Status .....                         | 15        | Write New SMS.....                                               |
| Removing the Charger .....                    | 16        | Read Message .....                                               |
| <b>Important Battery Information .....</b>    | <b>17</b> | SMS Inbox .....                                                  |
|                                               |           | SMS Outbox.....                                                  |
|                                               |           | Delete.....                                                      |
|                                               |           | SMS Template .....                                               |
|                                               |           | 34                                                               |

## TABLE OF CONTENTS

|                                    |           |                      |           |
|------------------------------------|-----------|----------------------|-----------|
| SMS SETTINGS.....                  | 35        | Volume .....         | 63        |
| Read CB .....                      | 37        | Vibrator .....       | 63        |
| Cell Broadcast Settings .....      | 38        | <b>MyPhone.....</b>  | <b>64</b> |
| E-Mail Client(Optional) .....      | 40        | Audio .....          | 64        |
| <b>Mob. Internet .....</b>         | <b>42</b> | Wallpaper .....      | 67        |
| Home .....                         | 42        | Greeting .....       | 68        |
| Bookmarks.....                     | 43        | Caller groups .....  | 70        |
| Push Inbox & Push Settings.....    | 44        | Light & LCD .....    | 72        |
| Wap Profiles .....                 | 45        | <b>Settigs.....</b>  | <b>74</b> |
| Empty Cache .....                  | 50        | Time & Data.....     | 74        |
| <b>Organizer .....</b>             | <b>51</b> | Language.....        | 76        |
| Calendar .....                     | 51        | Data.....            | 77        |
| Tasks.....                         | 55        | Security.....        | 78        |
| Alarm .....                        | 56        | Network .....        | 82        |
| Calculator .....                   | 57        | Call Settings .....  | 84        |
| PC-SynchroniZation(optional) ..... | 58        | Reset Settings ..... | 89        |
| <b>MAXFUN .....</b>                | <b>59</b> |                      |           |
| Game Information .....             | 59        |                      |           |
| X-Ship.....                        | 60        |                      |           |
| Crazy Race.....                    | 61        |                      |           |
| Push Man .....                     | 62        |                      |           |

## TABLE OF CONTENTS

|                                    |            |                                          |            |
|------------------------------------|------------|------------------------------------------|------------|
| <b>CHAPTER 4 PHONEBOOK .....</b>   | <b>90</b>  | <b>CHAPTER 6 SAFETY .....</b>            | <b>114</b> |
| Look Up .....                      | 92         | Safety Information for Wireless Handheld |            |
| New .....                          | 93         | Phone .....                              | 115        |
| PB Settings.....                   | 95         | Driving Safety .....                     | 117        |
| Voice Mail No .....                | 98         | Electronic Devices.....                  | 118        |
| Voice Dial(Optional).....          | 99         | Other Safety Guidelines .....            | 120        |
|                                    |            | Precautions .....                        | 121        |
|                                    |            | Warning .....                            | 122        |
|                                    |            | FCC RF Exposure .....                    | 124        |
| <b>CHAPTER 5 MISCELLANEOUS ...</b> | <b>100</b> |                                          |            |
| Menu Summary .....                 | 101        |                                          |            |
| Cellular Phone in Brief.....       | 106        |                                          |            |
| Abbareviations and Acronyms.....   | 107        |                                          |            |
| Questions and Answers.....         | 110        |                                          |            |
| TechnicaL Data .....               | 113        |                                          |            |

## WELCOME

Thank you for choosing a cellular phone from Maxon Telecom, Korea's second-largest IT company and a manufacturer with more than two decades of experience in the electronic communication industry.

Your new communication device represents the cutting edge technology of the 21st century, featuring 65k brilliant color display, enhanced messaging service (EMS), polyphonic ring tones, PC synchronisation and stunning games along with extensive Organizer and Phonebook properties.

Uplink to the Mobile Internet facilitated with WAP 1.2 and GPRS data connection.

The phone size has always been a Maxon focus point, and the MX7951-series have very modest exterior dimensions and will fit into any shirt pocket or purse.

24 different ring signals, SMS alert signals, and wallpapers along with renameable profiles and caller groups facilitates a high degree of personalization.

You have acquired a phone and a communications companion that will enable you to stay tuned wherever you go.

## ABOUT THE USER GUIDE

This user guide is written only for the MX5020-series cellular handsets. The contents of the user guide follow the same order as the phone menu system goes. Please note that some optional functions may not be shared by all models.

These are printed in grey color.

The user guide is accompanied by a Mini Guide describing the most commonly used functions.

User guide order no.: 02207155

 
Mini Guide order no.: 02207159

Inquiries regarding the user guide or phone handling can be addressed to:

**Maxon Technical Marketing**

maxon@maxon.dk

## MEMO



## CHAPTER 1

### BEFORE USING YOUR PHONE

 
1. Package Includes
2. Handset Description
3. Main Display
4. Function Keys
5. Use of SIM Card
6. Navigation Key
7. Using the Battery
8. Charging the Battery
9. Important Battery Information

## PACKAGE INCLUDES

Thank you for purchasing this product. Please check the product contents to see if you have all the available items as below.



Handset

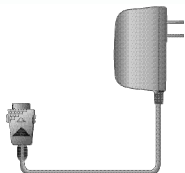

Charger



Hands Free Kit



Slim Battery



User Manual

## HANDSET DESCRIPTION



Sub LCD



Displays a icon and a status when you have a call or a message or when you select Bell/ Vibration/ Mute.

## Main display

### Main display



Icon display – Shows the current status of phone

Graphic display – Shows phone numbers, text lines, animations, pictures

Function display – Shows each function of [soft1] and [soft2] to help browse through main menu.

### Icons



Signal Strength – The number of bars shows signal strength



Battery – Current battery charging level.



Alarm – Appears when an alarm is set.



Call Forwarding – Appears when call forwarding is set.



Vibration mode – Appears when Vibration is set as a ring mode.



Text message – Appears when you have a new text message.

## Function keys



[Soft1] – To place a call or redial a number, (WAP Home, Voice mail, Write SMS), Send/Redial Key



[Soft2]  
– To turn on and off the phone, and back key.



4-direction navigation key  
– To browse the main menu and phonbook menu.



OK Key  
– To select an option and link to Internet



Keypad Keys  
– To enter letters and numbers



IJKey  
– To place an international call,  
– To set a manner mode (press and hold)



# Key  
– Toggle between : #, ., : , ' , " ? and ! in standby.



Side Key  
– If you press [ ] when folder is close, you will see network appear in sub LCD.  
– If you press [ ] when folder is close, you will see date appear in sub LCD.

## Use of SIM card

 
SIM card is always needed to use the phone. "Please insert SIM card" appears when the SIM card is not installed since it contains information about phone and network. Messages and phonenumbers stored in the phone can be transferred to other GSM terminal if both SIM cards are the same size.

Please take note that you don't lose SIM card and that you don't keep it near magnetic and electronic devices to prevent loss of information and hitch in networking.


When you take SIM card and battery apart, you should always turn off the phone.

The insertion of SIM card while charger is in use can be a contributing factor to the damage of SIM card.


## Navigation key

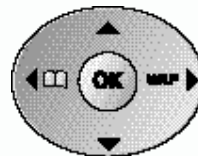

 
The navigation key is used to search through the menu.

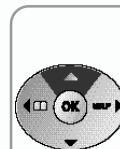

 
[up] –  
To scroll up  
and access  
the look up  
directly from  
idle mode

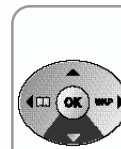

 [down] –  
To scroll  
down and  
access the  
dial list from  
idle mode

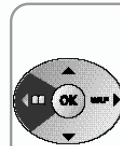

 [left] –  
To access the  
phonebook  
directly from  
idle mode.

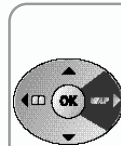


[right] –  
To access  
the main  
menu directly  
from idle  
mode

## USING THE BATTERY
 
### INSTALLING THE BATTERY


- 1 Insert the bottom of battery into the groove at the bottom of the handset. Then push down the battery until it locks into place.

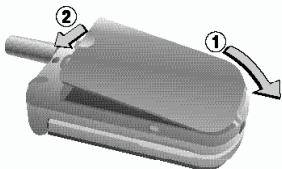

The battery must be securely placed in the battery compartment. If battery is improperly inserted, the handset will not turn on or the battery may slip off during use.

### REMOVING THE BATTERY

 
- 1 Pull up the tab with one hand and lift the top of the battery to separate from handset.

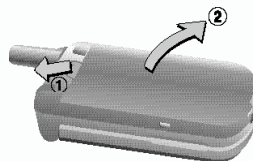

## CHARGING THE BATTERY

### POWER CONNECTION

 
- 1 Insert the contactor of charger into slot and plug the charger into the outlet.  
\* Please not that the contactor should be placed into slot, a certain side up.

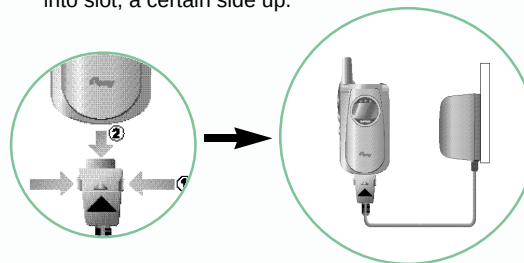

Be sure to charge the battery for at least four hours prior to the first time use. For extended battery life time, charge the battery fully for a long time rather than frequently for a short time period.

### CHARGING STATUS

 When its battery is charged in power off mode, the phone shows in sub-LCD an animation, which will stop once charging is completed.

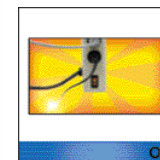




## CHARGING THE BATTERY

### REMOVING THE CHARGER

 - 1 Press down the release latch and pull out the contactor of charger.

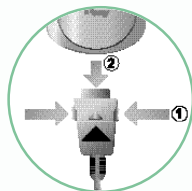

Don't remove the charger by pulling its cable.

## IMPORTANT BATTERY INFORMATION

- Don't keep a battery near a fire and attempt to disassemble it.  
Use only the battery approved by manufacturer
- Never touch battery contactors with any metallic object, which lead to battery short circuiting especially when carrying a battery in a pocket.  
- Possible to cause burns due to blasting and hot temperature.
- Don't drop a battery and apply any physical shock to the battery.  
- Malfunction and fire are feasible.
- Please keep a battery out of children's reach and in a dry and cool area.
- Charge a battery and keep it in a room temperature.  
- Extreme temperature prevents full charging and affects battery capacity in a negative way.
- Since a battery is an expendable product, the battery operating time decreases through frequently repeated charge and discharge.  
- A new battery to be purchased when the operating time is reduced halfway.
- Keep the contactors of battery clean and dry.
- Plug out a charger in order to protect the phone when a lightning strikes.

## CHAPTER 2

### BASIC OPERATION

1. Turning the Phone On and Off  
(With SIM CARD installed.)
2. Installing SIM Card
3. Basic Functions
4. Entering Letters and Numbers

## TURNING THE PHONE ON AND OFF

### TURNING THE PHONE ON

When SIM CARD is installed.

- 1 **Press and hold**  Until the phone is power on.



When The phone is locked "PIN CODE" is displayed on the screen. then, enter the 4-digit password to unlock the phone.

### TURNING THE PHONE OFF

- 1 **Press and hold**  Until the phone is power off.



- If "LOW BATTERY WARNING POWER OFF" is displayed and the power goes off.
- Change or charge the battery immediately.
- If the battery is removed while the phone is on, any unsaved messages or features could be lost and a damage might be caused to memory.

## INSTALLING SIM CARD

 
- 1 To connect to your network operator your phone must have a **SIM CARD** installed.
- 2 You are prompted to press  to display a list of available phone languages.



- 3 The SIM card slot is located beneath the battery. Install the SIM card, gold-plated side down and the cut corner fit in the slot profile. Never use force. Avoid touching the gold-plated side of the SIM.



- SIM CARD holder cover is flipped up when pulled up to a certain extent in order to install or remove SIM CARD.
- Flip down the cover to properly secure SIM CARD.



## INSTALLING SIM CARD

- 4 Turn on the phone by pressing and holding the endkey for a few seconds.

Press and

Until the phone is power on.

- 6 Enter the network-supplied PIN code.



- 5 You are prompted to enter the PIN code.



- 7 Press  
OK To Accept.

 


## BASIC FUNCTIONS

### MAKING A CALL

- 1 Enter a phone number.

To erase the last number you entered, press [ ].

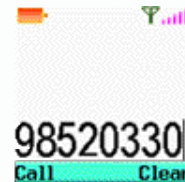

- 2 Press [ ].

- "CALL FAILED" message is displayed when the call does not connect.
- If the line is busy, press [ ]. Retry by pressing [ ].
- If you select the REDIAL function, the call will be retried automatically for the time you have selected.
- Press [ ] to end the call.

## BASIC FUNCTIONS

### RECEIVING CALLS

#### 1 The phone rings



To reject or terminate a call press the [ ].

**Caller ID Function**  
You can view caller ID.

 
#### 2 Open up folder and talk into phone.

◦ When folder is open, press [ ] or [ ] button.

To end a call, close up the folder or press [ ].

**With ear-microphone in use,** press and hold [send/end] on the ear-microphone to receive or end a call.

If you miss a call, the caller's number will be stored in the **Dial list**. To retrieve a number, press [ ] to open the list, scroll to an appropriate number and press [ ] to place a call.

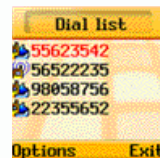


## BASIC FUNCTIONS

### INTERNATIONAL CALLS, CALL TO AN EXTENSION, EMERGENCY CALL

**To make** a domestic call, simply enter the desired number and press [ ] or [ ] key. A calling or busy tone will sound. To end the call, press [ ].


Some countries (e.g. USA) uses area codes. In this case you must enter an area code before the a phone number (no space between them).

 **1** To make an **international call**, press [ ] until + is displayed. Then enter country code, area code if necessary and finally phone number. (no spaces allowed)

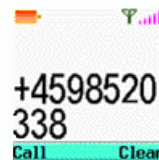


**2** To make a call to an **extension line** you may have to go through an automated switchboard. To do so:

 - Enter a phone number.
- Press [ ] until - is displayed.
- Enter the extension number. Press [ ].
- the call will automatically be routed to the extension line.

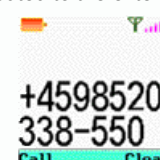

**3** You are able to make **emergency calls** at all times, even without a SIM card installed. You will be prompted to confirm your call. (to avoid faulty calls) **Emergency call number : 112**

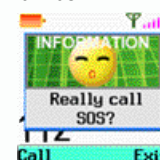 

## Entering letters and numbers

An input mode is activated when necessary to enter letters and numbers, especially when you add a new phonebook entry, write a new message and set a certain feature. In input mode, you are to enter letters, numbers and symbols through keypad. T9 language has its built-in dictionary that helps the phone come out with an appropriate word by referring to key inputs. The dictionary predicts what word you are to enter as you press each key. The phone supports the following languages.

### T9 Language

Press [ ], move to 'T9 Language' then, press [ ].

Move to one of the following options and press [ ] to select it.

(English / Chinese Simp. / Chinese Trad.)

Press [ ] to go back to the input window. Press a key once at a time to enter a word.

Press [ ] or [ ] to view a list of words and press [ ] to select it and add a space when a word appears.

ex) To enter Boy : Press [ ] to select a letter case.

Press [ ], [ ], [ ].

Use [ ] or [ ] to find a word.

Press [ ] to select it and add a space.



## Entering letters and numbers

### ABC

Press [ ], move to 'abc' then, press [ ].

or press [ ].(Press and hold)

Press a key to see its assigned alphabets and keep pressing the key until an alphabet appears in the display.

 


### 123

Press [ ], move to '123' then, press [ ].

or press [ ].(Press and hold)

Enter numbers through keypad.

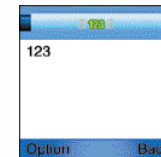

### Symbols

Press [ ], move to 'Symbols' then, press [ ].

or press [ ].(Press and hold)

Press [ ] or [ ] to view a different set of symbols assigned to each key.

Press a key, and you will return to the previous mode.



## Entering letters and numbers

### KEY FEATURES

In English input mode, the following keys help enter letters, numbers and symbols.

|                                                                                   |                                                                                 |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------|
|  | Press [Soft1] to select an input mode; ABC, 123, Symbols, Menu key, language.   |
|  | Press [Soft2] to clear Key.                                                     |
|  | Press [Navigation key] to move a cursor.                                        |
|  | Press [*] to select letter case, or press and hold it to change to symbol mode. |
|  | Press and hold [0] to change to number mode.                                    |
|  | Press [#] to enter .,-?'!@:./1 or press and hold it to change to ABC mode.      |

## CHAPTER 3

### MENU

1. Message
2. Mob. internet
3. Organiser
4. Maxfun
5. My Phone
6. Setting

 
## MESSAGE

SMS is fun with Maxon. You can send long messages (up to 456 characters), and personalize them with pictures and sounds (EMS). You can store pictures and sounds, you receive from others, in your library and use them as ring wallpapers and tones.

### WRITE NEW SMS




- 1 Press [ ] to select "Write new SMS".

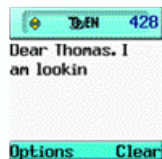

Write your message using a maximum of 456 Latin characters. While you type, the remaining free space is stated by a counter in the top right corner. Number of messages is indicated within the envelope icon.

 - 2 Input a message, Press [ ] and you will see the preview of message.

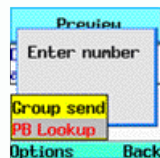


- 3 Press [ ] again, enter a phone number then, press [ ].

Press [ ] to select "Option".

Group send : To send a message to a group.  
PB Save : To save a number in the phonebook.  
PB Lookup : to lookup a number from phonebook  
Back : to move back to the previous page.

## MESSAGE

 - 4 Choose Send only or save & send. Press [ ].

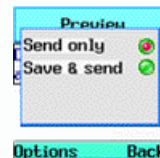

To include a picture or a sound in your SMS, select **Attach** on left softkey. The picture & sound **Import** manager opens. Select Animation or Melody and scroll to select the desired item- Press [ ]. The item is inserted in the text. Press [ ] again to send the SMS.



- 5 Press [ ] to confirm.



THAT USING MORE THAN 153 CHARACTERS WILL REQUIRE AN EXTRA SMS MESSAGE TO BE SENT. MORE THAN 306 WILL REQUIRE THREE MESSAGES. SOME LANGUAGES MAY HAVE CHARACTERS THAT WILL RESULT IN UP TO SEVEN MESSAGES.



## MESSAGE

### READ MESSAGES

An **incoming message** alert will be shown in the start screen (and with a tone or vibration if so selected).



If you want to store an attached picture or sound in your library, scroll through the message to highlight the attachment.

1 Press (Open the message.)

Ok.iMaTRIVERVIEW  
HOTEL67329922.  
room 614  
From:  
+60122001903  
Sent:  
2002.06.15 16:13  
Options Back

To postpone reading of a new SMS, press **Later**.  
The message is stored and the icon will appear in the start screen.

## MESSAGE

### SMS INBOX

1 Press

 
To read a SMS received earlier, go to the Messages menu:

- In the SMS menu, scroll to SMS Inbox.

indicates a read message, while closes an unread message.

- Select the desired message and press to read.

Press to select one of the following options.

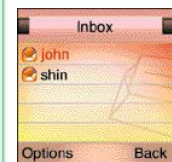


- Forward : Forwards a message to another.
- Reply : Reply a message.
- Call: Places a call to a recipient.
- Delete : Deletes a message.
- Read : Reads a message.

### SMS OUTBOX

 1 Press

To edit a sent or Save Only message:  
- Scroll to Outbox. Select a message.

Press to select one of the following options.

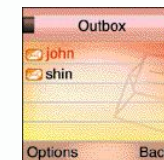

Press to select one of the following options.

- Forward : Forwards a message to another.
- Edit : Edits a message.
- Send : Sends a message.
- Delete : Deletes a message.
- Read : Reads a message.


## MESSAGE
 
### DELETE

Press



- 1 You are to select one of the following options and press [OK] to delete messages.

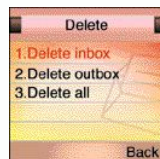

- 2 press [Enter] to confirm it or [Back] to return to the previous page.




Delete messages regularly to avoid unnecessary usage of memory.

### SMS TEMPLATE

 Press



To create a template, scroll to SMS template write a text template then, press [OK] to save it. You can enable the use of the template in the 'Selections' menu in 'SMS settings'.

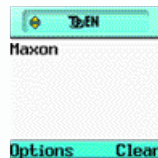


## MESSAGE

### SMS SETTINGS

To set SMS features.

 Press

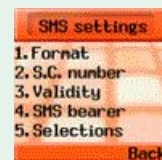

### FORMAT

- 1 Press [1] to select "Format".



- 2 Select one of the available formats and press [OK] to save it.

 
Text format is default.



You are to select one from four alternative data formats if made available by network service provider.

### S.C NUMBER

- 1 Press [2] to select "S.C. number".

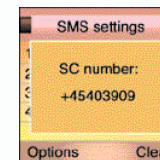

- 2 Enter your operator Service Center number.


## MESSAGE
 
## SMS SETTINGS

## VALIDITY

This allows you to select a period a sent message will be kept by network.

- 1 Press [ **3 DEF** ] to select "Validity".

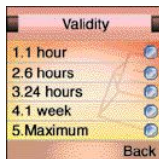

- 2 Select one of the available options and press [ **OK** ] to save it.

## SMS BEARER

- 1 Press [ **4 G** ] to select "SMS bearer".

 


- 2 Select GSM or GPRS connection and press [ **OK** ] to save it.

Your network subscription must include GPRS services for you to use this.

## SELECTIONS

- 1 Press [ **5 M** ] to select "Selections".

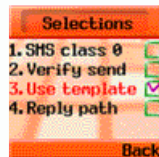


- 2 Move to one of the available options and press [ **OK** ] to enable or disable each option.

## MESSAGE
 
## READ CB

**Cell Broadcast (CB)** is a network provided service. Check with your operator about the details. When you receive a CB, it will appear automatically in the display.

- 1 Press [ **1** ] to select "Messages".

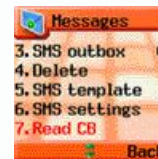

Messages will be stored in the memory, but new messages will overwrite old ones received on the same channel. To read the last messages stored, enter the **Messages** menu and select **Read CB**, then select the channel you want to read.


## MESSAGE
 
## CB SETTINGS



## CB ENABLE

- 1 Press [ ] to select "CB enabled".

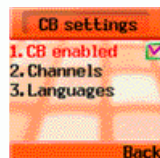

- 2 Press [ ] to receive a cell broadcast or not. to enable cb, mark up the checkbox with [ ].

## CHANNELS

- 1 Press [ ] to select "Channels".



- 2 You are to view existing channels and add a new channel.

To add, edit or delete, press [ ]

Delete  
Edit  
New

## MESSAGE

## LANGUAGE

- 1 Press [ ] to select "Language".
- 2 Move to each language to select or not.
- 3 Press [ ] to save it.



German, English, Italian,  
Franch, Spanish, Dutch,  
Swedish, Danish,  
Portuguese, Finnish,  
Norwegian, Greek, Turkish

## MESSAGE

### E-MAIL CLIENT(OPTIONAL)

In the **Messages** menu, scroll to **E-mail**. Press OK. You will see the following options:

Send & receive  
Write E-mail  
Inbox  
Outbox  
Draft  
Email settings

**Send & receive** will connect you to your Internet Service Provider, download incoming emails from the server to your Inbox and send emails from your

Outbox. Please note that downloaded emails will not be deleted from your server and that it will not be possible to download attachments.

**Write new email** will open the editor. You must state at least one email address to proceed to write your message. When you have written your message, you can choose to save it to Outbox or as a Draft. The latter will be stored in the memory and will not be sent the next time you select Send & receive. To send a message, it must be saved to Outbox.

## MESSAGE

### E-MAIL CLIENT(OPTIONAL)

In the **Inbox**, left softkey will enable you to read or delete a mail. When reading a mail, you can reply or delete this.

**Email settings** will let you configure the parameters for email communication. Your Account must be set up according to the specification from your ISP, and you must configure your connection and select GPRS or GSM carrier.

Account settings  
User name  
Password

 
-From name  
POP3 server  
SMTP server  
Connection settings  
GPRS  
APN  
User ID  
Password  
GSM  
Phone number  
User ID  
Password  
Carrier  
GSM  
GPRS

## MOB. INTERNET

The phone has a WAP browser, which enables you to access mobile internet services.

### HOME

**WAP is a technology** that enables you to access the Mobile Internet via your phone. Depending on your place of purchase, and provided that your network operator supports WAP, your phone is most likely set with the necessary information. To access the mobile internet for the first time, please follow the instructions.

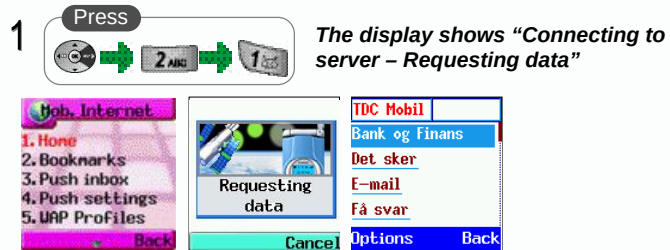


The first two submenus will be **Home** and **Bookmarks**. Home will most likely be the homepage of your network operator and as no other WAP-sites are bookmarked yet, you are able to add any homepage to bookmarks.

When connection is established, the "Home" URL will be displayed. Follow on-screen instructions to browse the homepage or enter another homepage via the **Options** softkey [ ] menu.

## MOB. INTERNET
 
### BOOKMARKS

You can access any WAP homepage by entering the relevant URL in the editor. The input must start with the text string **http://** to access the page. Accept the input with OK. Up to 50 URL's can be stored and later accessed from the **Bookmarks** menu, using the commands:

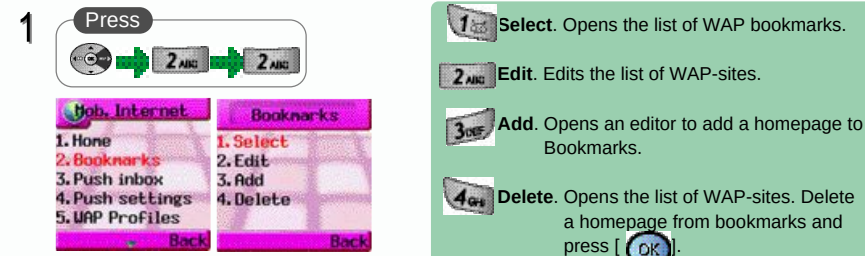


- Some WAP pages may be **password** protected and prompt you to enter a user name and password. However, on many WAP sites you can enter as a guest, but you may not be eligible to browse the entire site.
- Some network operators enables you to receive and read your **E-mail** via WAP. In most cases this service requires you to give the operator your Internet account details and password. The operator will then retrieve your mail and send it to you as a WAP page. Contact your operator for details.


## MOB. INTERNET
 
### PUSH INBOX

If your network operator supports **Push technology**, you can receive messages from WAP service providers. The messages will be announced by a pop-up alert and stored in the **Push Inbox**. To personalize Push, go to:

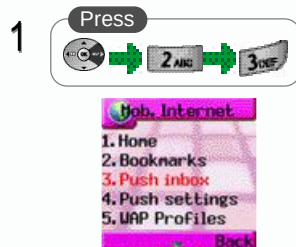


### PUSH SETTINGS

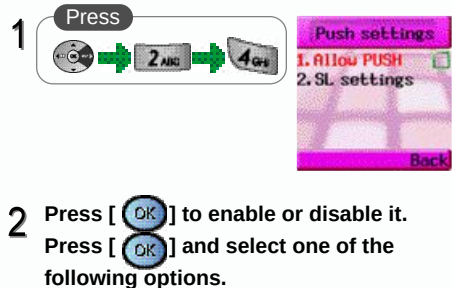 

1. Allow PUSH ☒ :
  - Always ask.  
WAP-site will open upon your confirmation.
  - Always open.  
WAP-site will open automatically.
  - Open when WAP.  
WAP-site will open if you are in a WAP session.

## MOB. INTERNET
 
### WAP PROFILES

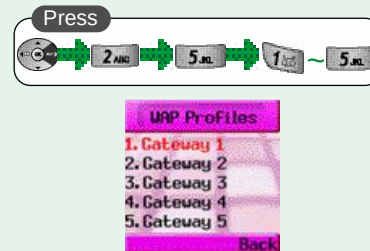

- 1 Select one of the following items and press [OK].



If you get a "Wap settings incomplete" message, your phone is not set up for WAP. You will need set-up information from your network (marked with in this manual). Check the sales package or contact your network operator. With the information at hand:

## MOB. INTERNET

### WAP PROFILES

#### DEFAULT

- 1 Press [  ] to select "Default".



Make up 'Default ☒' to make this your Home. You can configure five different gateways, but only one of them can be "Home".

#### HOMEPAGE

- 1 Press [  ] to select "Homepage".



- Enter a URL and press [  ] to save it.

 **Homepage** (e.g.:http://wap.aol.com)

## MOB. INTERNET

#### CSD

 
- 1 Press [  ] to select "CSD".  
In each item, you are to enter data or select an option.



-  User name
-  Password
-  Dial-up number
-  IP address
-  Data type (Analog /ISDN)
-  Data speed (9600 / 14400)
-  Idle timeout (1minute / 2 / 3 / 4 / 5 )

#### GPRS

- 1 Press [  ] to select "GPRS".  
In each item, you are to enter data.

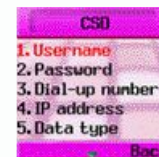

-  User name
-  Password
-  APN (Access Point Name)
-  IP address  
(The IP Address is a 12 digit code.  
When typing it, enter 0 for "blank" spaces.)



## MOB. INTERNET

### WAP PROFILES

#### BEARER

 
- 1 Press [ 5<sub>SEL</sub> ] to select "Bearer".



- 2 Select one from the bearer list and press [ OK ] to save it.

#### CONNECT MODE

- 1 Press [ 6<sub>MOD</sub> ] to select "CONNECT MODE".

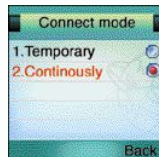


- 2 Select Temporary or Continuously. Press [ OK ] to save it.

If no specifications are stated by your network, both Temporary and Continuously are applicable.

## MOB. INTERNET
 
#### SECURITY


- 1 Press [ 7<sub>FORG</sub> ] to select "Security".

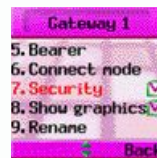

Make it up this to enable the use of encrypted transmission which some URLs may require.

#### SHOW GRAPHICS

 - 1 Press [ 8<sub>TUV</sub> ] to select "Show graphics".

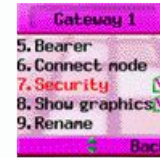

Make it up to include graphic elements in the display.

#### RENAME

- 1 Press [ 9<sub>MOD</sub> ] to select "Rename".



- 2 Edit a name of the gateway.

Repeat the setup procedure for the remaining four gateways to create alternative "Homes".

## MOB. INTERNET

### EMPTY CACHE

 


To provide quick access to your favorite web sites, information is stored in the phones cache memory. It is recommended that you empty your cache memory regularly to avoid congestion.

## ORGANIZER

### CALENDAR


To set and view appointments.

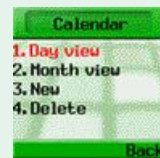

The **Organizer** is a practical tool that will help you to keep track of your appointments and alert you of meetings, celebrations, events etc.

### DAY VIEW

 - 1 Press [ 1 ] to select "Day view".

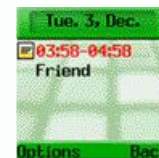

In Day view, you can check appointments for the day. You can scroll through the entries and use [ OK ] to view an appointment. press [ ] to add an appointment and edit or delete it.

- 2 Use [ ] and [ ] to select a schedule and press to view it.

Press [ ] to select "Option".

**Month** : To move to 'month view'  
**New** : To add an appointment.  
 You are to select one of the following categories (Meeting/ Birthday / Memo).  
**Delete** : To delete a selected appointment  
**View** : To display a selected appointment.

## ORGANIZER

### CALENDAR

#### MONTH VIEW

- 1 Press [ **2 AND** ] to select "Month view".



A calendar is displayed with appointments. The date with an appointment is shown in green color, while a selected date is in white.

- 2 Use [ **Left Arrow** ] to select a date and press [ **OK** ] to view appointments on the particular date.

- 3 Select an appointment and press [ **Right Arrow** ] to do the following options.

Press [ **Right Arrow** ] to select "Option".

Day view : To move to 'day view'

New : to add a new appointment.

Press [ **Right Arrow** ] to select "Option".

Month : To move to 'month'

New : To add an appointment.

You are to select one of the following categories (Meeting/ Birthday / Memo).

 
Delete : To delete a selected appointment

View : To display a selected appointment.

## ORGANIZER


#### NEW

- 1 Press [ **3 DEF** ] to select "New".

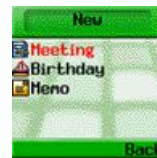

In 'New' you can enter a new appointment. You will be prompted to define it as, a Meeting a birthday or a Memo.

 Select one and enter the relevant information in the text editor. Use [ **Left Arrow** ], [ **Right Arrow** ], [ **Up Arrow** ], [ **Down Arrow** ] to scroll through the entry fields:

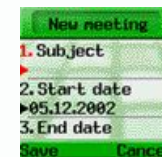


#### Subject

To enter a title for an appointment.

#### Start and End date, Start and End time.

 To set a date and a time to start or end an appointment

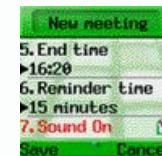

#### Reminder

 
To set a reminder to give you an alert to appointment.

## ORGANIZER

### CALENDAR

#### DELETE

1 Press [4<sup>OS</sup>] to select "Delete".

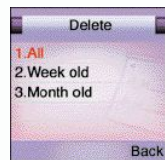

2 Select one of the following items and press [OK].


3 Press [OK] to confirm it.

1. All : Delete all appointments.
2. Week old : Delete the appointments that is a week old.
3. Month old : Delete the appointments that is a month old.

## ORGANIZER
 
### TASKS

1

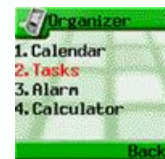

To put down things to remember.


The **Tasks** list is an electronic notepad that will help you to remember things to do. The list is accessed in the Organizer folder.



If no tasks are entered in the list, the screen will display "No entries".

#### NEW

 1 Press [OK] to select "Options".

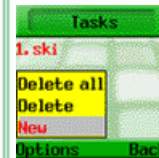

2 Select a task and press [OK] to view its details.

3 Move to each field to enter data.

1. Subject : Enter a title for a task.
2. Due date : Enter a due date for a task.
3. Reminder : Mark it up and you are prompted to enter its date and time.
4. Reminder date
5. Reminder time

If one or more tasks are entered, you can choose among the following Options: Delete all, Delete, New



You can enter up to 10 different tasks, each with a maximum 24 characters, and set an alarm to remind you.

## ORGANIZER

### ALARM



2 Press [ 2 **ALM** ] to mark up 'Alarm on' to enable the alarm.



1 Press [ 1 **ALM** ] to enter a time for an alarm.

## ORGANIZER

### CALCULATOR



To use the calculator.



press [ ] to clear a digit or press and hold [ ] to clear all inputs and return to the prompt mode.

Enter a figure and select a mode (+ -  $\times$  or /). Press . Enter another figure, select = and press . The result is displayed on the bottom line.

Example:

|            |                        |
|------------|------------------------|
|            | Enter 200. Select + .  |
| 200        | Press [  ].            |
| +          | Enter 25. Select =.    |
| 25         | Press [  ].            |
| =          | The display shows: 225 |
| 225        |                        |
| Clear Back |                        |

|            |                                          |
|------------|------------------------------------------|
|            | If you want to continue the calculation, |
| 225        | do not select =, but press [  ] then     |
| /          | repeat the above procedure:              |
| 5          | to finish the calculation, select =.     |
| =          |                                          |
| 45         |                                          |
| Clear Back |                                          |

## ORGANIZER

### PC-SYNCHRONIZATION(OPTIONAL)

**PC-synchronization** (Optional) enables you to synchronize the calendar in your phone with your desktop organizer, e.g. Microsoft Outlook. To use this feature, you will have to install the synchronization software, included on your MaxSoft CD. Follow the instructions provided on the CD.

- Connect your phone to the PC (follow instructions on cable accessory).

In the Organizer menu, scroll to **Synchronize**. Press OK. You will have the following options:

 
Start  
Settings

- Connection
- Sync type
- Conflict solving
- Sync phonebook
- Sync calendar
- Sync Task
- Time zone

PC synchronization must be set up to function. Enter **Settings** menu and make appropriate selections.

## MAXFUN

### GAME INFORMATION



The MX7850 comprises three amusing and challenging color action games. All games feature on-screen instructions through "3" key and key info "4". Games are started with "1". Volume and vibrator controls are in the main menu.

In the Game, volume control is adjusted by side up/down key. press [ \* ] to stop a game and [ # ] to release the game.

In all three games, best performance will place you on the high-score list. Thus you can compete with your friends for the honor and glory and enjoy maximum fun.

## MAXFUN

### X-SHIP

Press



X-ship is a classic arcade "shoot'm up" game. You are in control of a space fighter and must destroy approaching enemies with your laser cannon before they shoot you. If surrounded by enemies, you can blast your way out with a nuclear explosion.



- 2 ANG : Up
- 8 TUV : Down
- 4 GH : Left
- 6 WND : Right
- 0 : Shoot
- 5 JEL : Nuclear bomb
- \* : Pause
- # : Resume
- ↓ : Volum Up/Down

## MAXFUN

### CRAZY RACE

Press



How many laps will you complete on the racing track, avoiding oil slicks, obstacles and aggressive competitors? Choose between three different types of cars, each with its own advantage and race like your life depended on it.



 
- 2 ANG : Increase speed
- 8 TUV : Decrease speed
- 4 GH : Left
- 6 WND : Right
- 0 : Special
- 5 JEL : Pause
- \* : Resume
- ↓ : Volum Up/Down

## MAXFUN

### PUSH MAN




PushMan is a PacMan-style maze game. Guide your little Buddy through the maze and avoid the ghost, the fluffy monsters and the worm. Pick up the apples to gain points.

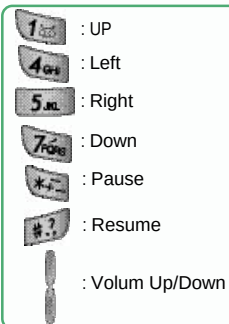


## MAXFUN
 
### VOLUME

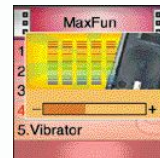

- 1 Use [ ] and [ ] to select a volume level.

### VIBRATOR

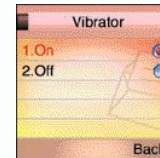 

- 1 Select On or Off and press [ ] to save it.




## MYPHONE

 The default settings with regard to the sounds and display are easily changed.

### AUDIO

Press

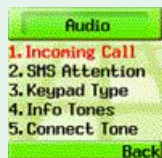

### INCOMING CALL

- 1 Press [1] to select "Incoming Call".



**1 Alert Tune** - Select one among 10 bells, 14 melodies and some downloaded melodies.

 
**2 Alert Type** - Select one of the available options. (1. Tone only / 2. Tone +Vib / 3. Tone after Vib / 4. Vibration only)

**3 Volume** - Volume can be controlled in 7 levels through [Vol Up] and [Vol Down]

## MYPHONE

### SMS ATTENTION

- 1 Press [2] to select "SMS Attention".

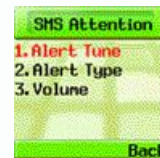

**1 Alert Tune** - 10 different SMS alert tunes.

**2 Alert Type** - Select one of the available options. (1. Tone only / 2. Tone +Vib / 3. Vibration only)

**3 Volume** - volume can be controlled in 7 levels through [Vol Up] and [Vol Down]

### KEYPAD TYPE

- 1 Press [3] to select "Keypad Type".



- 2 Select one of the available keypad tones and press [OK] to save it.

## MYPHONE

### AUDIO

#### INFO TONES

- 1 Press [  ] to select "Info Tones".



- 2 Select On or Off and press [  ] to save it.

#### CALL CONNECTION

- 1 Press [  ] to select "Call Connection".



- 2 Select On or Off to set call connection tone.  
Press [  ] to save it.

## MYPHONE

### WALLPAPER



 
- 1 Select a Wallpaper and press [  ].  
You can change a wallpaper.

## MYPHONE

### GREETING

You can enter a greeting, set an animation for start-up or shutdown and set a greeting time.

Press

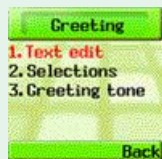

#### TEXT EDIT

- 1 Press [ 1 ] to select "Text edit".



- 2 Enter a greeting of your own and press [ OK ] to save it.

## MYPHONE

### SELECTIONS

- 1 Press [ 2 ] to select "Selections".



- 2 You are to set one of the following options for either start-up or shutdown.

1. Start-up : Greeting / Animation / None  
2. Shutdown : Animation / None

### GREETING TONE

- 1 Press [ 3 ] to select "Greeting Tone".



- 2 On or Off to set a greeting tone when the phone is turned on.

## MYPHONE

### CALLER GROUPS

You can create **Caller Groups** from the contacts in your phone book to identify a caller by sound alone.



1 Press [ ] to select "Caller Group".



2 Use [ ] to moved to a caller group.

3 Press [ ] to select it.

## MYPHONE

### TUNE

1 Press [ ] to select "Tune".

 


You can designate a tune for a group.

2 Select one of the available tunes and press [ ] to save it.

### SMS

1 Press [ ] to select "Tune".

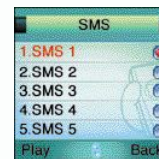

You can designate a type of alert for a group.

2 Select one of the available alerts and press [ ] to save it.

## MYPHONE

### LIGHT & LCD

Your phone has a backlit LCD display with full graphic capability. You can set Contrast, backlight time and LED light.



#### CONTRAST

- 1 Press [1] to select "Contrast".



- 2 Use [Left Arrow] and [Right Arrow] to select a contrast level.

You can adjust the display contrast.

#### BACKLIGHT TIME

- 1 Press [2] to select "Backlight Time".



- 2 Select one of the following backlight time and press [OK] to save it.

you can adjust how long the Backlight stays on (20-60 sec.)

## MYPHONE

### LIGHT & LCD

#### LED LIGHT

- 1 Press [3] to select "LED light".



- 2 Mark it up to enable the LED service indicator.

## SETTINGS

 
The **Settings** menu is used to set basic parameters for the phone such as language, time & date, data transfer, security, network and call settings

### TIME & DATA

Press



- 1 Press [ **1** ] to select "Set time/date".

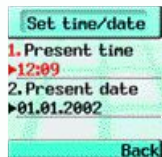

- 2 You are to set the present time & date

1. Present time
2. Present date

### SUMMER TIME

- 1 Press [ **2** ] to select "Summer time".



 
- 2 Mark up 'summer time' through [ **OK** ] to apply daylight saving time.

Box If you wish to apply daylight saving time

## SETTINGS

### TIME ZONE

- 1 Press [ **3** ] to select "Timezone".

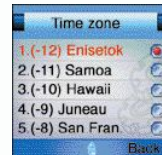

- 2 Select one of the available timezones and press [ **OK** ] to save it.
- 3 You are to select your current location.

### DATE FORMAT

- 1 Press [ **4** ] to select "Date format".



- 2 Select one of the date formats and press [ **OK** ] to save it.

## SETTINGS

### LANGUAGE



- 1 Use [ ] to select a language.



- 2 Select one of the available languages and press [ ] to save it.

The display will change to the selected language

## SETTINGS

 
### DATA

you are Set parameters for data transmission from your laptop or PC.



#### DATA CABLE

- 1 Press [ ] to select "Data cable".

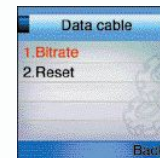


- 2 set each parameter and press [ ] to save it.

- Bit rate : (300 / 1200~ / 115200)  
- Reset : You are to reset it.

#### GPRS

 - 1 Press [ ] to select "GPRS".

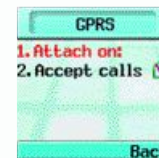


- 2 set each parameter and press [ ] to save it.

1. Attach on  
2. Accept calls : you are to mark this up to enable it.

## SETTINGS

 
### SECURITY

Press

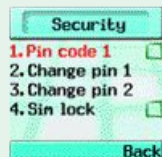

#### PIN CODE 1

 - 1 Press [1] to select "PIN code 1".

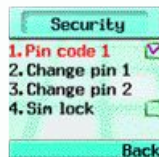


- 2 Mark it up to enable PIN code 1 and press [OK] to save it.


## SETTINGS
 
#### CHANGE PIN 1


- 1 Press [2] to select "Change PIN 1".

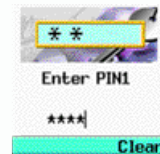

 - 2 Enter your old pin code followed by the new code.

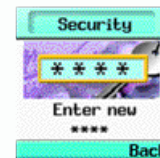

 - 3 Confirm it when prompted. Press [OK].

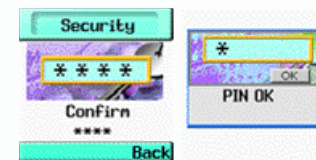

- 4 Exit with [C].



That if you enter an incorrect PIN code three times in succession, your SIM card will lock and you must enter the PUK code to unlock. PIN and PUK codes are either supplied with your phone or must be obtained from your network provider or place of purchase.



## SETTINGS

### SECURITY

#### CHANGE PIN 2

- 1 Press [  ] to select "CHANGE pin 2".



- 2 Enter your old pin code followed by the new code.



- 3 Confirm it when prompted. Press [  ].

 


- 4 Exit with [  ].

## SETTINGS

#### SIM LOCK

- 1 Press [  ] to select "SIM lock".

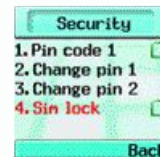

- 2 Mark it up to lock SIM CARD.

As a unique identification, your phone is furnished with a code number known as IMEI. You must retain this number in case you need to block your account, e.i. if your phone is lost or stolen. We recommend that you write it down here:

The IMEI number is printed on the label under the battery.


## SETTINGS
 
### NETWORK



#### SELECT NETWORK


- 1 Press [ **1** ] to select "Select network".

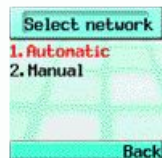

- 2 Select Automatic or manual.

#### PREFERRED NET

 - 1 Press [ **2** ] to select "Preferred net".

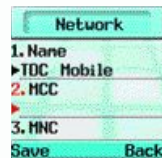


The phone will search this list from the top. Menu key options roll-up enables you to Add or Insert a new network. If you use Add, the new network will be added to the end of the list (having the lowest priority). Insert will insert the network in the list where the cursor is placed.

## SETTINGS
 
#### ADD NETWORK

- 1 Press [ **3** ] to select "Add network".

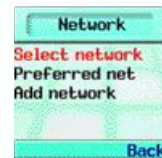


To add a new network, start by selecting an empty network entry from the Add network menu. Press OK. A text editor will appear. Enter the name of the network followed by the Mobile Country Code (MCC) and the Mobile Network Code (MNC). This information is supplied by your network operator.

## SETTINGS

 
Common calling options are described in "First steps" on p. xx and in "Everyday functions" on p. xx. However, our phone also offers more advanced calling features, accessible from the Call settings menu.

### CALL SETTINGS

Press

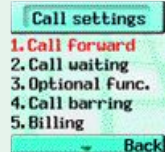

 1 Press [ **1** ] to select "Call forward".

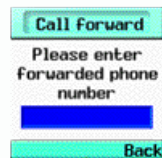

#### Unconditional:

To forward all incoming calls to a specified number.

#### All unanswered:

To forward all calls that you do not answer within a specified period of time.

#### No reply:

To forward calls that are not replied.

#### Not reachable:

To forward calls when you are out of network range.

#### Busy:

To forward calls when your phone is busy.

#### Status all:

To summarize the status of call forward options.

#### Cancel all:

 
To cancel all call forward settings

A specific number can be designated for each option, and you can activate, view or cancel the present status. Follow the on-screen instructions.

## SETTINGS

### CALL WAITING

1 Press [ **2** ] to select "Call waiting".

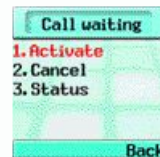


This function notifies you of another call during a telephone conversation. Enter the menu to Activate or Cancel Call waiting or to see the Status. If Call waiting is active, and you are called during a conversation, you will hear a faint ringing tone in the background. To answer the new caller without losing contact with the original party:

- Enter Options roll-up menu. Select Switch calls.
- conduct the conversation with the new party and select Switch calls to return to the first caller. Select Join calls to conduct a three-party conversation. See Conference call on p. xx for details.

### OPTIONAL FUNC.

 1 Press [ **3** ] to select "Optional func.".

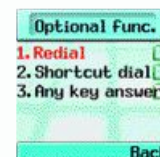


This menu contains various settings to facilitate daily use.

## SETTINGS
 
### CALL SETTINGS


2 Press [ **1** ] to select "Redial".

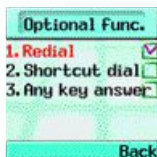

**Redial** ☒ Activates automatically redialing of your last unsuccessful call. The number will be redialed after 5 seconds (1 time), after 1 minute (3 times) and after 3 minutes (10 times). If this sequence is completed without connection established, the number must be manually dialed for a new attempt.

To manually abort the redial sequence, press End. To manually redial last number called, press [ **OK** ] twice in a row.

 3 Press [ **2** ] to select "Shortcut dial".

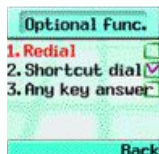

**Shortcut dial** ☒ If you activate Shortcut dial, you can dial phone numbers from the Shortcut list by pressing just one or two digits.

4 Press [ **3** ] to select "Any key answer".




**Any key answer** ☒ Set the phone to answer a call with any key, (except), e.g. the earpiece volume control on the side, to answer your calls.

## SETTINGS


 
### CALL SETTINGS

#### CALL BARRING

1 Press [ **4** ] to select "Call barring".

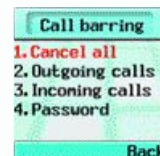

  You can lock the telephone to reject incoming calls or bar outgoing calls, domestic or international. Call barring is a password protected network service, and details should be acquired from your network.

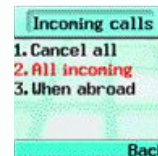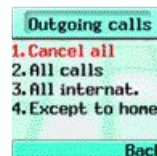

**1.Cancel all** - To cancel all call barring settings.

**2.Outgoing calls** - To cancel all call barring features of outgoing calls, or decide what type of outgoing calls is to be barred. (1.cancel all / 2.all calls / 3.all internat. / 4.except to home)

**3.Incoming calls** - To cancel all call barring features of incoming calls or decide what type of incoming calls is to be barred. (1.cancel all / 2.all incoming / 3.when abroad)


**4.Password** - To set a password.

## SETTINGS
 
### CALL SETTINGS

#### BILLING

- 1 Press [ **5** ] to select "Billing".

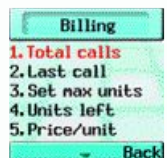

You can keep track of your calling expenses by setting the "Billing" feature. Scroll to Billing.

Press [ **OK** ]. Enter the submenus:

**Total calls** - to view the total amount of time and units used.

**Last call** - to view the duration of the last call.

**Set max units** - to set a maximum of units available for a call.


**Units left** - to view the number of units left on your account.

**Price/unit** - to enter a network price for the units.

**Currency code** - displayed if supported by your network.

#### DTMF TONES

 - 1 Press [ **6** ] to select "DTMF tones".

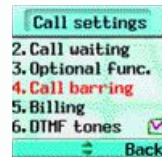


Enabling DTMF tones allows you to remote control various telephone connected devices, e.g. listen to your home telephone answering machine, or charge your SIM.

Activates key lock after 30 sec. of idleness.

## SETTINGS
 
### RESET SETTINGS

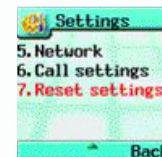

Return all settings to factory defaults.

## CHAPTER 4

 
### PHONEBOOK

1. Look up
2. New
3. PB Settings
4. Voice Mail No.
5. Voice Dial(Optional)

## PHONEBOOK


You can use either the SIM card or the built-in Contacts database as your **Phonebook**. The database can store up to 250 contacts, with three phone numbers per contact along with the contact's complete postal address and email address. Number of contacts on the SIM card depends on your network. Choice of phonebook is the Options soft key menu in look up menu. (select use SIM/Use Phone)

You can copy names and phone numbers from/to a SIM card but not address information (Optional)

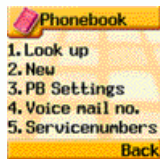

### LOOK UP

 
Press

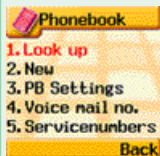

### LOOK UP

When "Use SIM" is selected.

 - 1 Press [ ] to select "SIM: Look up".

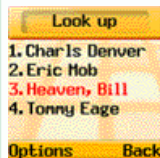

Press [ ] and you will see the following items displayed.


New  
Use phone  
Delete  
Edit  
Call  
Search  
View

- 2 Scroll to find the desired contact and press [ ].

## PHONEBOOK

 When "Use Phone" is selected.

- 1 Press [ ] to select "Look up".

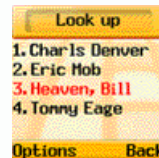

Press [ ] and you will see the following items displayed.


New  
Use SIM  
Sorting  
Delete  
Edit  
Call  
Search  
View

- 2 Scroll to find the desired contact and press [ ].

contacts are listed in an alphabetical order.

### CALL

 - 1 Press [ ] and you are prompted to call.

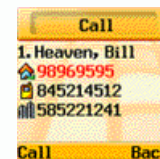


- 2 Scroll to find the desired number and press [ ].

The window will display contact name and phone numbers.

## PHONEBOOK

 
### NEW

To add a contact to the SIM phonebook:



When "Use SIM" is selected.

 1 Move to each field and press [OK] to enter its information accordingly.

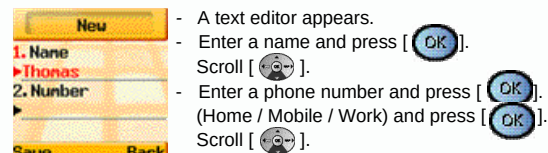

- A text editor appears.
- Enter a name and press [OK].
- Scroll [Left/Right].
- Enter a phone number and press [OK].
- (Home / Mobile / Work) and press [OK].
- Scroll [Left/Right].

2 Press [Save] to save it after entering information.



IF YOU HAVE CHOSEN **PHONE** AS YOUR PHONEBOOK, UP TO THREE NUMBERS CAN BE ENTERED ALONG WITH ADDRESS INFORMATION FOR EACH CONTACT.

## PHONEBOOK

When "Use Phone" is selected.

1 Move to each field and press [OK] to enter its information accordingly.



All the above data can be entered.

1. First name 2. Last name 3. Home number  
4. Mobile number 5. Work number  
6. Calling group 7. Street 8. Zip code 9. City  
10. State 11. Country 12. E-mail

2 Press [Save] to save it after entering information.

 
If a different SIM card is inserted in the phone, you will be alerted of the option to copy data from this. You may also copy data to SIM cards, thus enabling you to share contact information with friends and colleagues. Copy features are located in the PB Settings submenu. (Optional)



## PHONEBOOK

### PB SETTINGS

To alter settings in the Phonebook:

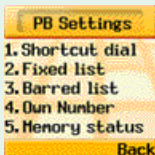

Enter Phonebook menu. Scroll to **PB Settings** and press OK. Choose among:

#### Select PB.

 
Select SIM or Contacts as your default phonebook.



If you select SIM as your Phonebook, you will not be able to use Contacts database features (three phone numbers, address information), but still allowed to use caller groups or shortcut dial.

### SHORTCUT DIAL

- 1 Press [ **1** ] to select "Shortcut dial".

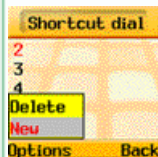


Make calls using only one or two keys. Define a key combination (2-21) for your most accessed contacts. To include or remove a contact in the shortcut dial list, select a position and:

- Select New or Delete in the Options softkey menu.
- Choose the appropriate contact from the phone book. Press [ **OK** ].
- any previous contact on the selected position will be overwritten.

### FIXED LIST

 
- 1 Press [ **2** ] to select "Fixed list".

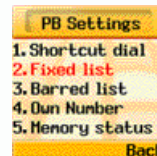

Use this to create a list of allowed numbers. When **Active** ☒ is ticked, the user can only access the listed numbers. Requires PIN 2 (see p. 9).

### BARRED LIST

 
- 1 Press [ **3** ] to select "Barred list".

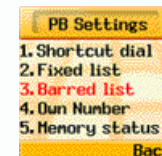

Use this to create a list of barred numbers (if supported by network). If activated, the user can not access barred numbers. Requires PIN 2.

### OWN NUMBER

 - 1 Press [ **4** ] to select "Own Number".

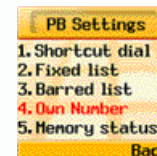

Store your own number for future reference. Some SIM cards will install your phone number automatically. If yours is not, simply enter it in the editor and press [ **OK** ].

## PHONEBOOK

### PB SETTINGS

 
**Copy** (Optional). Enables you to copy names and phone numbers to and from the SIM card. You can copy single contacts or all the contents. Selection is done via left softkey.

Be aware that contacts will be copied from **Contacts** one time for each phone number recorded. Thus, if a contact has 3 numbers attached, he will occupy 3 slots on the SIM card.

When copying from SIM, you will not be alerted if the contact is already in **Contacts** and the entry will not be overwritten. We recommend that you check for double-entries and delete the surplus entries.

### EXPORT

- 1 Press [ **5** ] to select "Memory status".

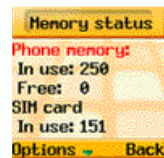

Displays the used and free memory available in the respective phonebooks. Reset **Phone** memory or **SIM** memory on left softkey. Be advised that this will erase all entries in the Phonebook that is reset.

## PHONEBOOK

### VOICE MAIL NO.



- 1 Enter a Voice mail number.

- The options softkey allows you to do the following items.(Lookup / Back / Save)



#### Service numbers.

This is a network service and the menu will only appear if your network operator supports this service. The menu may contain various services, depending on the network.

## PHONEBOOK

### VOICE DIAL(OPTIONAL)

**Voice dialing (Optional)** will enable you to access selected contacts from your phone book simply by speaking the contacts name into the microphone. The phone will dial the contact automatically according to the settings selected. To use voice dialling:

- Apply a long keypress on the OK key or select Voice dial on left softkey.  
A pop-up box will prompt you to speak the contacts name.
- Speak loud and clearly into the microphone, i.e. "Mother"  
- *the phone will repeat the command and dial the contact*

If the command is not recognized by the phone, a beep will prompt you to retry.

To setup, enter **Voice dialling** in the Phonebook menu and:

- Tick **Enable** ☒ , to activate.
- Enter **Name list** to select contacts for voice dial. Left softkey controls the options New, Edit, Delete, Play and Voice change.
- Select **New** to open the phone book.

Add or delete names from the phone book. When a new number is selected, you will be prompted to speak the number for the phone to memorize. Be sure to do this in a quiet environment. A maximum of 20 numbers can be stored in the voice dial memory.

## CHAPTER 5

### MISCELLANEOUS

1. Menu Summary
2. Cellular Phone in Brief
3. Abbreviations and Acronyms
4. Questions and Answers
5. Technical Data

## MENU SUMMARY

### MobilSurf

#### MESSAGES

Write new SMS  
SMS inbox  
SMS outbox  
Delete

Delete inbox  
Delete outbox  
Delete all

SMS Template  
SMS Settings

Format  
SC number  
Validity  
SMS bearer  
Selections

SMS class 0  
Verify send  
Use template  
Reply path

Read CB

### CB Settings

CB enabled  
Channels  
Languages

### Mob. Internet

Home  
Bookmarks

Select  
Edit  
Add  
Delete

Push inbox  
Push settings

Allow push  
SL. Settings

### WAP Profiles

Gateway 1 (Default gateway.  
The following settings can be  
set for each gateway,  
Gateway 1 to Gateway 5.)

## MENU SUMMARY

### Homepage CSD

User Name  
Password  
Dial-up No.  
IP Address  
Data Type  
Data Speed  
Idle timeout

### GPRS

User name  
Password  
APN  
IP address

Bearer  
Connect Mode  
Security  
Show graphics  
Rename  
Gateway 2~5

Empty cache

### Organizer

Calendar  
Day view  
Month view  
New  
Delete  
Task  
Alarm  
Calculator

### MaxFun

X-ship  
Crazy race  
Push man  
Volume  
Vibrator

### MyPhone

Audio  
Incoming Call  
alert tune  
alert type  
volume

## MENU SUMMARY

|               |                 |
|---------------|-----------------|
| SMS Attention | Friends         |
| alert tune    | Family          |
| alert type    | Others          |
| volume        |                 |
| Keypad Type   | Light & LCD     |
| Natural Tone  | Contrast        |
| DTMF          | Back light time |
| Mute          | LED Light       |
| Info Tones    | <b>SETTINGS</b> |
| On            | Time & Date     |
| Off           | Set time/date   |
| Connect Tone  | Summer time     |
| On            | Time zone       |
| Off           | Date format     |
| Wallpaper     | Language        |
| GREETING      | Data            |
| Text Edit     | Data cable      |
| Selections    | Bitrate         |
| Greeting Tone | Reset           |
| Caller Groups | GPRS            |
| Private       | Attach on       |
| Business      | Accept calls    |

## MENU SUMMARY

|                |                |
|----------------|----------------|
| Security       | No Reply       |
| PIN Code 1     | Activate       |
| Change PIN 1   | Cancel         |
| Change PIN 2   | Status         |
| SIM Lock       | Not Reachable  |
| Network        | Activate       |
| Select Network | Cancel         |
| Automatic      | Status         |
| Manual         | Busy           |
| Preferred net  | Activate       |
| Add network    | Cancel         |
| Call settings  | Status         |
| Call Forward   | Status All     |
| Automatic      | Cancel All     |
| Activate       |                |
| Cancel         | Call waiting   |
| Status         | Activate       |
| All Unanswered | Cancel         |
| Activate       | Status         |
| Cancel         | Optional func. |
| Status         | Redial         |
|                | Shortcut Dial  |
|                | Any Key Answer |

## MENU SUMMARY

### Call Barring

- Cancel All
- Outgoing Calls
  - Cancel All
  - All Calls
  - All Internat.
  - Except to Home
- Incoming Calls
  - Cancel All
  - All Incoming calls
  - When abroad

### Password

### Billing

- Total calls
- Last call
- Set max units
- Units left
- Price/Unit
- Currency code

### DTMF Tones

## PHONE BOOK

- Look Up
- New
- PB Settings
  - Shortcut dial
  - Fixed list
  - Barred list
  - Own Number
- Voice Mail No

## MISCELLANEOUS

### CELLULAR PHONE IN BRIEF

Your cellular phone is essentially a highly sophisticated radio, basically no different from any other two-way radio system. The ingenuity of the cellular system lies in the splitting of the broadcasting environment into a multitude of relatively small cells with low-power transmitters.

This "cellular approach" to radio communication allows for extensive frequency reuse so that millions of people can use their mobile phones simultaneously although the number of frequencies are limited. The broadcasting cells are commonly illustrated as hexagons, typically 10 square miles in area with the base station in the center. This arrangement allows for non-adjacent cells to use the same frequencies without risk of interference.

Your cellular phone is in constant contact with the nearest base station. As you move from cell to cell, e.g. while driving in your car, the base station you are approaching takes over when you are within reach. This happens within split seconds without your noticing it. All you experience is a stable and clear connection.

However, not all network operators provide the same coverage in all areas. Hence, if you travel near the limit of your network's coverage, you may experience difficulties in maintaining the connection. The same may happen if the radio signal is blocked by obstacles such as high trees, hills or buildings, or if you are inside a heavily reinforced concrete building.

## MISCELLANEOUS

### ABBREVIATIONS AND ACRONYMS

To remedy the situation move closer to the nearest mast if possible or seek higher ground. If you are inside a building, try moving towards a window.

**What is roaming?** Roaming is the technique that allows subscribers to move from one cell to another or from one network to another without affecting the call.

**What is digital?** Early cellular phones relied on analogue systems. Analogue radio systems transmit the voice signal in its original form, whereas digital technology transforms the microphone signal into number sequences (digits) and transmit these. When received, the digital signal is decoded so that you can hear the sender's voice. Digital signals do not degrade in quality as long as the data is received, and they can be compressed to take up less memory.

**What is Dual Band?** A dual band cell phone has the capability to automatically switch between frequencies and can thus operate on two or more frequency bands, e.g. 900 Mhz and 1800 Mhz.

**What is GSM?** Global System for Mobile communications is the most widespread standard for digital communication in Europe, Australia and in large parts of Asia and Africa. GSM uses frequencies in the 900 and 1800 Mhz bands.

**What is APN?** APN stands for Access Point Name and is basically an URL address on the Mobile Internet.

General Packet Radio System is a service protocol built on GSM technology. GPRS allows several mobile phone users to share the same connection. Charges may thus be based on the amount of transferred data rather than on airtime.

## MISCELLANEOUS

### ABBREVIATIONS AND ACRONYMS

**What is CSD?** A wireless service protocol used for WAP. CSD stands for Circuit Switched Data and will enable continuous connection and payment by the amount of data transferred.

**What is SIM?** Subscriber Identity Module or SIM is the little gold-plated plastic card that you get from your network operator and which holds the unique data the network needs to identify your phone.

**What is PIN** and what is PUK? Access to use a cellphone is most often protected by a code known as "PIN" - Personal Identification Number. Your SIM card comes with a default PIN that you can change to any code you prefer. See p. 9 for details. If you forget your code, or by mistake enter a faulty code three times in a row, the SIM card will lock. To unlock, you must enter the Personal Unblocking Key or "PUK" code that came with your SIM card.

**What is IMEI?** IMEI stands for International Mobile Equipment Identifier and is an identification system that can recognize every mobile phone by a specific number. If a phone is stolen, the IMEI system is capable of blocking it on all network operators that support the system.

**What are MCC** and MNC? Mobile Country Code is a code that identifies the country in which the subscriber lives. Mobile Network Code identifies the network operator.

**What is DTMF?** Dual Tone Multi Frequency or DTMF is a paging and remote control protocol that allows you to control certain functions via your phone, e.g. listening to your answering machine.

## MISCELLANEOUS

### ABBREVIATIONS AND ACRONYMS

#### What is Cell Broadcast?

Cell Broadcast is a service from your network provider. With CB, you will be alerted when entering a "cheap zone" or you can obtain traffic information, weather reports and other important information sent to you as text messages. Some providers also offer sports results, news bulletins or even commercials. If offering CB services, your network will forward a list of services and the relevant channels to enter.

#### What is WAP?

Wireless Application Protocol or WAP is a standard that allows you to access parts of the Internet, known as "Mobile Internet" via your cell phone. Using WAP will open many services to you, i.e. news and weather forecasts, ordering services and goods, accessing databases and more.

#### What is an URL?

Uniform Resource Locator or URL is an address system used on the Internet. All WAP homepages have a unique address, allowing browsers to distinguish one from the other. An URL always start with the text string: **http://wap** followed by the address.

#### What is ISP?

ISP stands for Internet Service Provider.

## MISCELLANEOUS

### QUESTIONS AND ANSWERS

Q: My phone does not switch on when I press the key ?

**A: The keypress has been too short or the phone has shut down because the battery power level is too low to make calls. Recharge the battery fully.**

Q: Stand-by time seems too short ?

**A: You have made excessive use of the games or the Organizer or display light has been on continuously due to unintentional key activation. Apply Keypad lock in left softkey menu.**

Q: My phone displays: 'PLEASE INSERT SIM'?

**A: You must insert the SIM before you can use the phone. If it is already installed, remove and clean the blank area with a dry cloth, then reinsert.**

Q: My phone displays: 'INVALID SIM'?

**A: The phone is SIM-locked and will not accept the inserted SIM. Insert the correct SIM or contact your dealer.**

Q: My phone displays: "EMERGENCY CALLS ONLY"?

**A: Your SIM card is not properly installed or configured, or you are out of network range.**

Q: My phone displays: "NO NETWORK" ?

**A: You are outside network range or there is no clear path to the transmitter. If you are inside a building, try moving towards a window.**



## MISCELLANEOUS

### QUESTIONS AND ANSWERS

Q: Some calls are not processed. What is wrong?

**A: A call bar has been set to restrict phone usage. Check call barring and cancel as necessary.**

Q: Someone else is receiving my calls. What is wrong?

**A: The phone has been set to forward your calls to another number. Cancel call forwarding as necessary.**

Q: Can I send and receive emails and surf the Mobile Internet on my phone?

**A: Yes. Your phone has WAP capability, which means that you can access the Mobile Internet from your phone. For sending and receiving emails, please contact your network operator.**

Q: Can I use my phone for transferring data from a PC?

**A: Yes. Your phone has a fax and data modem. Apply a data/fax cable (See "Accessories" on p. xx)**

Q: Can I download new ring tones and graphics to my phone?

**A: We are working on that. In the meantime, you can compose your own ring tones using the "MelodyMaker".**

Q: What is T9?

**A: T9 text input is a predictive text editor that allows you to type using just one click per letter, thus saving time when writing SMS, text entries, etc.**

Q: What type of networks are supported?

**A: Check the technical specifications on p. xx.**

## MISCELLANEOUS

### QUESTIONS AND ANSWERS

Q: What does dual-band, GSM, CDMA and all the other telecom argot mean?

**A: See "How do cellular phones work" on p. xx.**

Q: Can I use my phone inside a car?

**A: Road safety comes first. Always keep your eyes on the road if you are driving. You can install a "Hands free" set (see. p. xx) if you need to drive and talk at the same time. Always comply with local legislation. If your car is equipped with airbags, check safety precautions with your car dealer. See also "Warnings" (Cover).**

Q: How do I clean my phone if it becomes soiled?

**A: See "Cell phone care" on p. 64.**

Q: Are cellular phones dangerous to my health?

**A: No unambiguous scientific evidence exists at this point of time. We recommend that you keep abreast with the advice given by your domestic health authorities. See also "Warnings" (Cover).**

Q: My phone has been lost or stolen. What do I do?

**A: Contact your network operator immediately to close your account and prevent misuse. Report your phone stolen to local police.**

Q: How do I reset my phone to factory defaults.

**A: Enter the Settings menu and scroll to "Reset all".**

## MISCELLANEOUS

### TECHNICAL DATA

#### Physical properties

Size: W-44 H-86 D-23 (mm)  
Weight: 85g  
Display: 65K Color (128X128 pixels)

#### Performance

GSM: 900/1800/EGSM  
GPRS: Class B8  
Standby: 80 hours  
Talk time: 3 hours  
Charging time: 1.5 hours  
Radiation (SAR): Max. 0.594 w/kg over a 1g cube

#### Communication features

Long SMS (456 chr.)  
EMS (sound & picture attachment)  
Call wait & call hold  
Conference call (up to 5 participants)  
Call forwarding & call barring  
Billing (AoC)  
WAP  
E-mail client (Optional)

#### Personalizing features

Greeting  
Wallpaper  
Screen saver (Optional)  
Flashing LED  
40 polyphonic ring tones  
5 renameable caller groups

#### Organizing features

Calendar  
Tasks  
Alarm  
Calculator

#### Leisure

3 games

#### Accessories

Contact local retailer

## CHAPTER 6

### SAFETY

1. Safety Information for Wireless Handheld Phones
2. Driving Safety
3. Electronic Devices
4. Other Safety Guidelines
5. Precautions
6. Warning
7. Precautions
8. FCC RF Exposure

**SAFETY****SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES**

Read This Information Before Using Your Handheld Portable  
Cellular Telephone

**EXPOSURE TO RADIO FREQUENCY SIGNALS**

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) \*  
NCRP Report 86 (1986) \*  
ICNIRP (1996) \*

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

**SAFETY****SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES**

The design of your phone complies with the FCC guidelines (and those standards).

;

American National Standards Institute;  
National Council on Radiation Protection and Measurements; International Commission on  
Nonionizing Radiation Protection.

**ANTENNA CARE**

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

## SAFETY

### DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them.

Also, if using your phone while driving please:

- I Give full attention to driving. Driving safely is your first responsibility.
- I Use hands-free operation, if available.
- I Pull off the road and park before making or answering a call, if driving conditions require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

#### WARNING:

**Failure to follow these instructions may lead to serious personal injury and possible property damage.**

## SAFETY

### ELECTRONIC DEVICES

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

#### Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker:

- I ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- I Do not carry the phone in a breast pocket.
- I Use the ear opposite the pacemaker to minimize the potential for interference.
- I If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

#### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

## SAFETY

### ELECTRONIC DEVICES

#### Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

#### Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

#### Posted Facilities

Turn your phone OFF where posted notices so require.

## SAFETY

### OTHER SAFETY GUIDELINES

#### Aircraft

FCC Regulations prohibit using your phone while in the air. Switch OFF your phone before boarding an aircraft.

#### Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

#### Potentially Explosive Atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

**SAFETY****PRECAUTIONS**

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating the equipment, read all instructions and cautionary markings on (1) AC Adaptor (2) Battery and (3) Product Using Battery.

1. DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
2. DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using the unit, lay down the unit to avoid possible damage due to instability.
3. DO NOT expose this equipment to rain or spilled beverages.
4. DO NOT use unauthorized accessories.
5. DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized Audiovox cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
6. DO NOT short-circuit the battery terminals with metal items etc.

**SAFETY****WARNING**

The following offenses are punishable by fine, imprisonment, or both:

- Using obscene, indecent, or profane language.
- Using the unit to give off false distress calls.
- Wiretapping or otherwise intercepting a telephone call, unless that person has first obtained the consent of the parties participating in the call.
- Making anonymous calls to annoy, harass, or molest other people.
- Charging to an account without authorization to avoid payment for service.
- Refusing to yield a party line when informed that it is needed for an emergency call (It is also unlawful to take over a party line by stating falsely that it is needed for an emergency).

**SAFETY****FCC RF EXPOSURE****WARNING! Read this Information before using your**

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

**SAFETY****FCC RF EXPOSURE****Body-worn Operation**

This device was tested for typical body-worn operation with the back of the phone kept 0.6 inches (1.5 cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5 cm) must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. All belt-clips, holsters and similar accessories used by this device must not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with FCC RF exposure limits and should be avoided.

**Vehicle Mounted External Antenna(optional, if available)**

A minimum separation distance of 7.9 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

Note: For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

## Miscellaneous

### Index

|                        |             |                          |             |
|------------------------|-------------|--------------------------|-------------|
| <b>A</b>               |             |                          |             |
| Advice of Charge       | <b>Page</b> | Call forwarding          |             |
| Aircraft, caution in   |             | Call, answer a           |             |
| Alarm (Reminder)       |             | Call, emergency          |             |
| Alert, SMS             |             | Call, incoming           |             |
| Any key answer         |             | Call, missed             |             |
| Appointment, new       |             | Call, optional functions |             |
| Audio (Sound) settings |             | Call, redirected         |             |
|                        |             | Call waiting             |             |
|                        |             | Caller group, include in |             |
| <b>B</b>               | <b>Page</b> | Car safety               |             |
| Backlight, display     |             | Cell Broadcast           |             |
| Battery, charge        |             | Charger                  |             |
| Battery, recycling     |             | Cleaning & storing       |             |
| Billing                |             | Clock, set               |             |
| Bookmarks, WAP         |             | Conference call          |             |
|                        |             | Contact, look up         |             |
| <b>C</b>               | <b>Page</b> | Contact, new             |             |
| Cache, WAP             |             | Country Codes            |             |
| Calculator             |             |                          |             |
| Calendar               |             | <b>D</b>                 | <b>Page</b> |
| Call, make a           |             | Default, reset to        |             |
| Call barring           |             | Dial-up number, WAP      |             |

## Miscellaneous

### Sub-headline

|                        |             |                        |             |
|------------------------|-------------|------------------------|-------------|
| Disclaimer             |             | Hazards, avoid         |             |
| Display                |             | Hearing aides, caution |             |
| Driving, caution       |             | High-risk activities   |             |
|                        |             | Home, WAP              |             |
| <b>E</b>               | <b>Page</b> | <b>I</b>               | <b>Page</b> |
| E-mail                 |             | IMEI number            |             |
| Emergency call         |             | Inbox, PUSH (WAP)      |             |
| Entertainment (MaxFun) |             | Inbox, SMS             |             |
| Environment            |             | Incoming call          |             |
|                        |             | Int. calling prefixes  |             |
| <b>F</b>               | <b>Page</b> |                        |             |
| FAQ (Q&A's)            |             | <b>K</b>               | <b>Page</b> |
|                        |             | Keypad                 |             |
| <b>G</b>               | <b>Page</b> | <b>L</b>               | <b>Page</b> |
| Games                  |             | Language               |             |
| GPRS                   |             | LED                    |             |
| Greeting               |             | Lost your phone        |             |
|                        |             | <b>M</b>               | <b>Page</b> |
| <b>H</b>               | <b>Page</b> | C                      |             |
| Hands-free set         |             |                        |             |
| Hazards, avoid         |             |                        |             |



## **Miscellaneous**

### **Sub-headline**

|                     |             |                  |             |
|---------------------|-------------|------------------|-------------|
| <b>N</b>            |             |                  |             |
| Network             | <b>Page</b> | Reset to default |             |
|                     |             | Ring tones       |             |
| <b>O</b>            |             |                  |             |
| One key dialling    | <b>Page</b> | <b>S</b>         | <b>Page</b> |
| Organizer           |             | Safety           |             |
| Outbox, SMS         |             | Scratch pad      |             |
|                     |             | Security         |             |
| <b>P</b>            |             | Service numbers  |             |
| Pacemaker, caution  | <b>Page</b> | Silent (Mute)    |             |
| Password (PIN)      |             | SIM              |             |
| Password, WAP       |             | SMS              |             |
| PC-sync             |             | Softkeys         |             |
| Phonebook           |             | Speech volume    |             |
| PIN, enter, change  |             | Stand-by time    |             |
| <b>Q</b>            |             | <b>T</b>         | <b>Page</b> |
| Questions & Answers | <b>Page</b> | T9 text editor   |             |
|                     |             | Talk time        |             |
| <b>R</b>            |             | Technical data   |             |
| Read SMS            | <b>Page</b> | Time, set        |             |
| Redial call         |             |                  |             |

## **Miscellaneous**

### **Sub-headline**

|                     |             |
|---------------------|-------------|
| <b>U</b>            | <b>Page</b> |
| Unlock SIM          |             |
| <b>V</b>            | <b>Page</b> |
| Validity, SMS       |             |
| Vibrator            |             |
| Voice dialling      |             |
| Voice mail          |             |
| Volume, earpiece    |             |
| <b>W</b>            | <b>Page</b> |
| WAP, home           |             |
| WAP, sites          |             |
| WAP, profiles       |             |
| WAP, set connection |             |
| Warnings            |             |
| Warranty            |             |
| Welcome             |             |