

## **User Manual**

This device is installed in vehicle. Since it is not sold to general end users directly, there is no user manual of this device.

The following statements must be described on the user manual of the host vehicle of this device;

[for FCC]

### **FCC CAUTION**

**Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body.**

[for IC]


**This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.**

**Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.**

**This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20cm or more away from person's body.**

**Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement émet une énergie RF très faible qui est considérée conforme sans évaluation de l'exposition maximale autorisée. Cependant, il est souhaitable qu'il devrait être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps.**

## Audio set

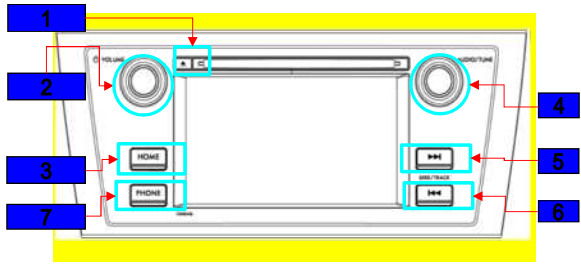

- |   |                        |
|---|------------------------|
| 1 | Eject Button           |
| 2 | Power/Volume Button    |
| 3 | Home Button            |
| 4 | Tune/Audio Button      |
| 5 | Seek/Track Up Button   |
| 6 | Seek/Track Down Button |
| 7 | PHONE Button           |

## Power and audio controls

**1 Eject Button**  
Press the “▲” button to eject a disc loaded in the audio set.

**2 Power/Volume Button**  
Push the dial for ON or OFF. Turn the dial to control volume.

**3 Home Button**  
Press the button to indicate main menu.


**4 Tune/Audio Button**  
Turn “Tune” dial clockwise to increase the tuning frequency and turn the “Tune” dial counterclockwise to decrease it. Press switch to select desired tone and balance control modes.

**5 Seek/Track Up Button**  
Press the button and hold 2s, the radio will automatically search for a receivable station and stop at the first one it finds. Press the button to select the next folder. Press the button to select the previous.

**6 Seek/Track Down Button**  
Press the button and hold 2s, the radio will automatically search for a receivable station and stop at the first one it finds. Press the button to select the previous.

**7 PHONE Button**  
Press the button to pair with your cell phone.

## FM MODE

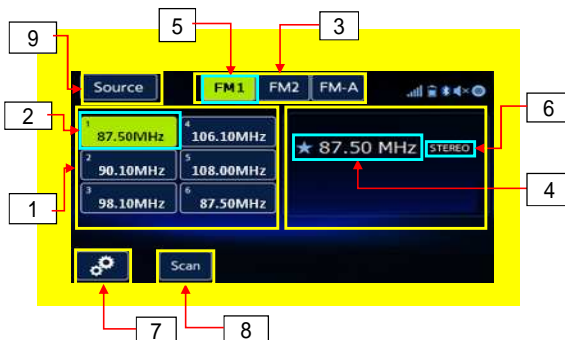

- |   |                        |
|---|------------------------|
| 1 | Preset Channel List    |
| 2 | Preset Channel Key     |
| 3 | Band Display Area      |
| 4 | Frequency Display Area |
| 5 | Band Select Key        |
| 6 | STEREO Display Area    |
| 7 | Setting Key            |
| 8 | SCAN Key               |
| 9 | Source Select Key      |

**1 Preset Channel List**  
You can preset the channel in the Preset Channel List.

**2 Preset Channel Key**  
You can select the channel when you press the key.

**3 Band Display Area**  
In the area, you can select the band that you want.

**4 Frequency Display Area**  
The Current Frequency that you are receiving

**5 Band Select Key**  
You can select the band when you press the key.

**6 STEREO Display Area**  
The area is used to judge whether the stereo or not.

**7 Setting Key**  
Press the key to enter the audio setting.

**8 SCAN Key**  
Press the key, the radio starts to scan the channel.

**9 Source Select Key**  
Press the key to enter the Multimedia Select Interface.

## AM MODE



- |   |                        |
|---|------------------------|
| 1 | Preset Channel List    |
| 2 | Preset Channel Key     |
| 3 | Band Display Area      |
| 4 | Frequency Display Area |
| 5 | Band Select Key        |
| 6 | STEREO Display Area    |
| 7 | Setting Key            |
| 8 | SCAN Key               |
| 9 | Source Select Key      |

**1** Preset Channel List  
You can preset the channel in the Preset Channel List.

**2** Preset Channel Key  
You can select the channel when you press the key.

**3** Band Display Area  
In the area, you can select the band that you want.

**4** Frequency Display Area  
The Current Frequency that you are receiving


**5** Band Select Key  
You can select the band when you press the key.

**7** Setting Key  
Press the key to enter the audio setting.

**8** SCAN Key  
Press the key, the radio starts to scan the channel.

**9** Source Select Key  
Press the key to enter the Multimedia Select Interface.

RDS/Radio

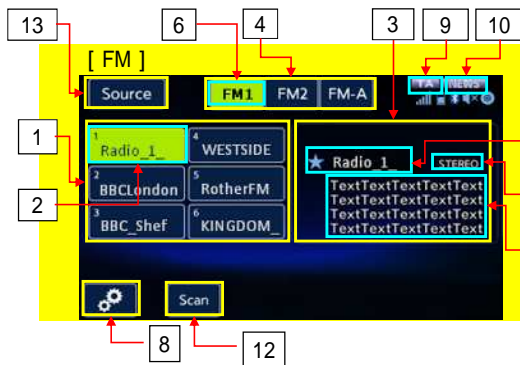

- 1 Preset Channel List
- 2 Preset Channel Key
- 3 Receiving Status Display Area
- 4 Band Display Area
- 5 Frequency Display Area
- 6 Band Select Key
- 7 STEREO Display Area
- 8 Setting Key
- 9 TA Icon Display Area
- 10 NEWS Icon Display Area
- 11 Radio Text Display Area
- 12 SCAN Key
- 13 Source Select Key

**1** Preset Channel List  
You can preset the channel in the Preset Channel List.

**2** Preset Channel Key  
You can select the channel when you press the key.

**3** Receiving Station Display Area  
In the area, you can the current status about the radio receiving.

**4** Band Display Area  
In the area, you can select the band that you want.

**5** Frequency Display Area  
The Current Frequency that you are receiving

**6** Band Select Key  
You can select the band when you press the key.

**7** STEREO Display Area  
The area is used to judge whether the stereo or not.

**8** Setting Key  
Press the key to enter the audio setting.


**9** TA Icon Display Area  
In the area, you can see the "TA" mark.

**10** NEWS Icon Display Area  
In the area, you can see the "NEWS" mark.

**11** Radio Text Display Area  
In the area, you can see the radio text information.

**12** SCAN Key  
Press the key, the radio starts to scan the channel.

**13** Source Select Key  
Press the key to enter the Multimedia Select Interface.

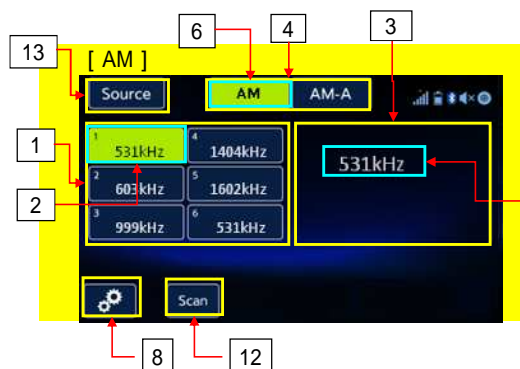

- 1 Preset Channel List
- 2 Preset Channel Key
- 3 Receiving Station Display Area
- 4 Band Display Area
- 5 Frequency Display Area
- 6 Band Select Key
- 7 ~~STEREO Display Area~~
- 8 ~~Setting Key~~
- 9 ~~TA Icon Display Area~~
- 10 ~~NEWS Icon Display Area~~
- 11 ~~Radio Text Display Area~~
- 12 SCAN Key
- 13 Source Select Key

**1** Preset Channel List  
You can preset the channel in the Preset Channel List.

**2** Preset Channel Key  
You can select the channel when you press the key.

**3** Receiving Station Display Area  
In the area, you can the current status about the radio receiving.

**4** Band Display Area  
In the area, you can select

**5** Frequency Display Area  
The Current Frequency that

**6** Band Select Key  
You can select the band when

the band that you want.

you are receiving


you press the key.

**8** Setting Key  
Press the key to enter the audio setting.

**12** SCAN Key  
Press the key,the radio starts to scan the channel.

**13** Source Select Key  
Press the key to enter the Multimedia Select Interface.

SXM

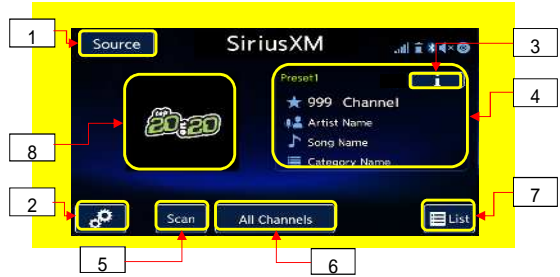

- 1 Source Select Key
- 2 Setting Key
- 3 Information Key
- 4 Receiving Station Display Area
- 5 Scan Key
- 6 Seek Mode Key
- 7 List Key
- 8 Channel Logo Display Area

**1** Source Select Key  
Press the key to enter the Multimedia Select Interface.

**2** Setting Key  
Press the key to enter the audio setting.

**3** Information Key  
Press the key,you can get more information.

**4** Receiving Station Display Area  
In the area,you can the current status about the radio receiving.


**5** Scan Key  
Press the key,the radio starts to scan the channel.

**6** Seek Mode Key  
Press the key,you can get others' Channels.



**7** List Key  
Press the key to enter the list.

**8** Channel Logo Display Area  
The channel logo display in the area.

RBDS\_HD-Radio

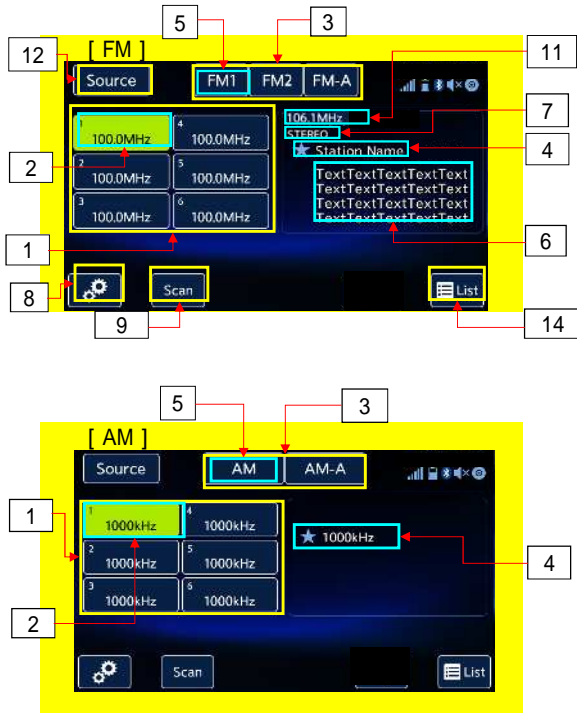

- 1 Preset Channel List
- 2 Preset Channel Key
- 3 Band Display Area
- 4 PS Name or Frequency Display Area
- 5 Band Key
- 6 Radio Text Display Area
- 7 STEREO Display Area
- 8 Setting Key
- 9 SCAN Key
- 10 Tag Key
- 11 Frequency Display Area
- 12 Source select Key
- 13 Bookmark Key
- 14 List Key
- 15 HD Indicator
- 16 Live Indicator
- 17 Receiving MultiCast Display Area
- 18 MultiCast Select Key
- 19 Short Name Display Area
- 20 Artist Experience Display Area
- 21 Song Name Display Area
- 22 Artist Name DisplayArea

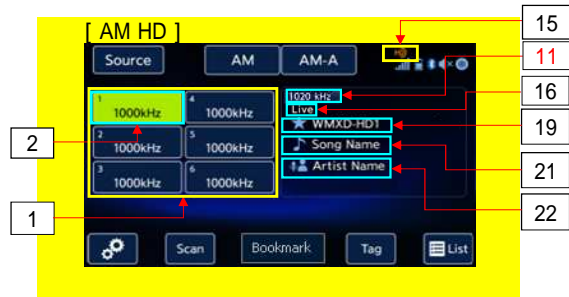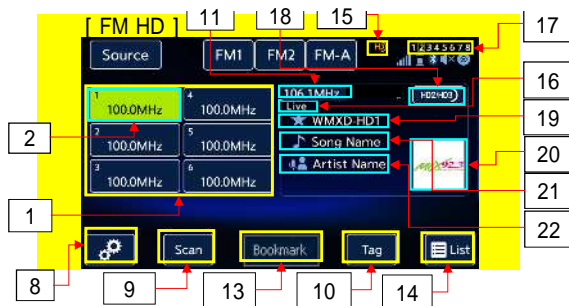

**1 Preset Channel List**

You can preset the channel in the Preset Channel List.

**2 Preset Channel Key**

You can select the channel when you press the key.

**4 Band Display Area**

In the area, you can select the band that you want.

**4 PS Name or Frequency Display Area**

In the area, you can see the that Current Frequency that you are receiving.

**5 Band Key**

You can select the band when you press the key.

**6 Radio Text Display Area**

In the area, you can see the radio text information.

**7 STEREO Display Area**

The area is used to judge whether the stereo or not.

**8 Setting Key**

Press the key to enter the audio setting.

**9 SCAN Key**

Press the key, the radio starts to scan the channel.

**10 Tag Key**

Press the key to enter the Tag.

**11 Frequency Display Area**

The Current Frequency that you are receiving

**12 Source Select Key**

Press the key to enter the Multimedia Select Interface.

**13 Bookmark Key**

Press the key to enter the bookmark

**14 List Key**

Press the key to enter the list.

**15 HD Indicator**

The indicator show that is HD radio.

**16 Live Indicator**

The indicator show the current status is "LIVE".

**17 Receiving MultiCast Display Area**

In the area, you can the current status about the radio receiving.

**18 MultiCast Select Key**

Press the key to select MultiCast.

**19 Short Name Display Area**

In the area, you can see the short name about current radio.

**20 Artist Experience Display Area**

In the area, you can see the experience information about the artist.

**21 Song Name Display Area**

The area shows the song name.

**22 Artist Name Display Area**

The area shows the artist name.

**CD**




**1 CD Key**

Press the key to enter CD mode.



**1 Source Select Key**

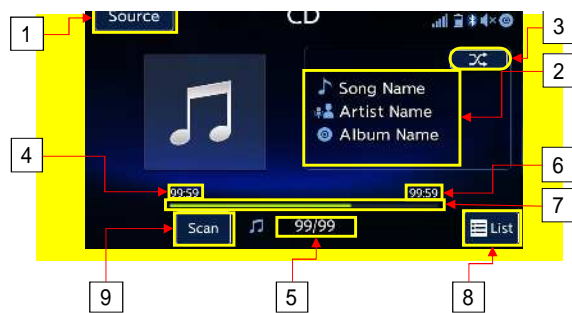

- 2 Audio Information Display
- 3 Trick Play Key
- 4 Playing Time Display
- 5 Track Number
- 6 Time Of Track
- 7 Progress Bar
- 8 List Key
- 9 SCAN Key

**1 Source Select Key**  
Press the key to enter the Multimedia Select Interface.

**2 Audio Information Display**  
In the area, audio information is showed.

**3 Trick Play Key**  
Press the key to select the trick.

**4 Playing Time Display**  
It shows the current play time.

**5 Track Number**  
It shows the playing song's order and the total songs' number.

**6 Time Of Track**  
It shows the track's play time.

**7 Progress Bar**  
It shows the progress of track.


**8 List Key**  
Press the key to enter the list.

**9 SCAN Key**  
Press the key, Scan mode lets you listen to the first 10 seconds of each track/file. To cancel it, press the button again.

USB



**1 USB/iPod Key**  
Press the key to enter USB mode.

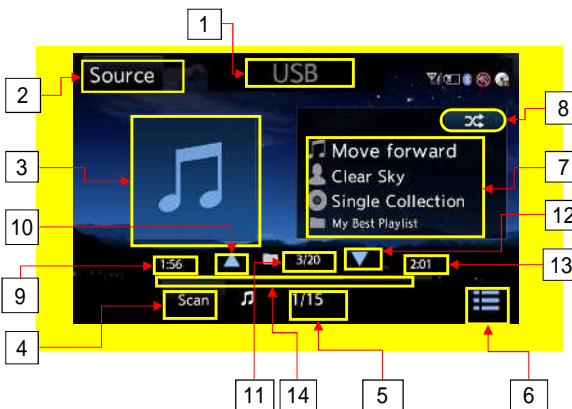

- 1 USB (Source Name)
- 2 Source Select Key
- 3 Quasi Album artwork
- 4 Scan Key
- 5 Track Number
- 6 List Key
- 7 Audio Information Display
- 8 Trick play Key
- 9 CurrentPlayTime Display Area
- 10 Folder up Key
- 11 Folder Number
- 12 Folder down Key
- 13 Time Of Track
- 14 Progress bar

**1 USB (Source Name)**  
It shows the current mode.

**2 Source Select Key**  
Press the key to enter the Multimedia Select Interface.

**3 Quasi Album artwork**  
It is the quasi album art work.

**4 SCAN Key**  
Press the key, Scan mode lets you listen to the first 10 seconds of each track/file. To cancel it, press the key again.

**5 Track Number**  
It shows the playing song's order and the total songs' number.

**6 List Key**  
Press the key to enter the list.

**7 Audio Information Display**  
In the area, audio information is showed.

**8 Trick Play Key**  
Press the key to select the trick.

**9 CurrentPlayTime Display Ar**  
It shows the current play time.

**10 Folder up Key**  
Press the key to select the previous.

**11 Folder Number**  
It shows the total folder number.

**12 Folder down Key**  
Press the key to next folder.

**13 Time Of Track**

**14 Progress Bar**


It shows the track's play time.

It shows the progress of track.

Ipod



**1** USB/iPod Key  
Press the key to enter Ipod mode.

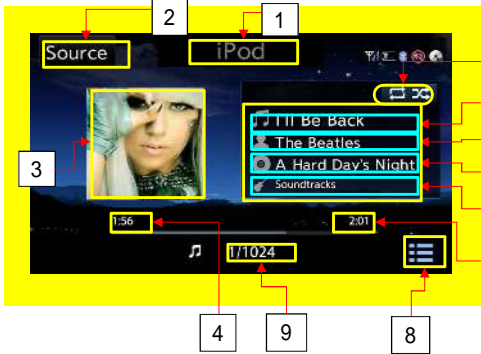

- 1** Source Name
- 2** Source Key
- 3** Album artwork
- 4** CurrentPlayTime Display Area
- 5** TotalPlayTime Display Area
- 6** Audio Information Area
- 7** Trick play key
- 8** List key
- 9** TrackNumber Display Area
- 10** Title Display Area
- 11** ArtistName Display Area
- 12** Album Display Area
- 13** GenreName Display Area

**1** Source Name  
It shows the current mode.

**2** Source Select Key  
Press the key to enter the Multimedia Select Interface.

**3** Album artwork  
It is the quasi album art work.

**4** CurrentPlayTime Display Area  
It shows the currentplay time.

**5** TotalPlayTime Display Area  
It shows the track's play time.

**6** Audio Information Display  
In the area, audio information is showed.

**7** Trick Play Key  
Press the key to select the trick.

**8** List Key  
Press the key to enter the list.

**9** TrackNumber Display Area  
It shows the total folder number.

**10** Title Display Area  
It shows the song's title.

**11** ArtistName Display Area  
The area shows the artist name.

**12** Album Display Area  
It shows the album about the son

**13** GenreName Display Area  
It shows the GenreName about the song.

BT



**1** BT Audio Key  
Press the key to enter BT mode.



- 1** Song Name Display
- 2** Artist Name Display
- 3** Album Name Display
- 4** CurrentPlayTime Display Area



- 5 Track's Order Number
- 6 Trick play key
- 7 Play/Pause key
- 8 List key
- 9 Bluetooth Setting Key

**1** Song Name Display  
It shows the song's name.

**2** Artist Name Display  
It shows the artist's name.

**3** Album Name Display  
It shows the album's name.

**4** CurrentPlayTime Display Area  
It shows the currentplay time.

**5** Track Number  
It shows the playing song's order. Press the key to select the trick.

**6** Trick play key

**7** Play/Pause key  
Press the key first to play,then press again to pause it.


**8** List Key  
Press the key to enter the list.

**9** Bluetooth Setting Key  
Press the key to enter bluetooth setting.

Aha



**1** Aha Radio Key  
Press the key to enter aha mode.

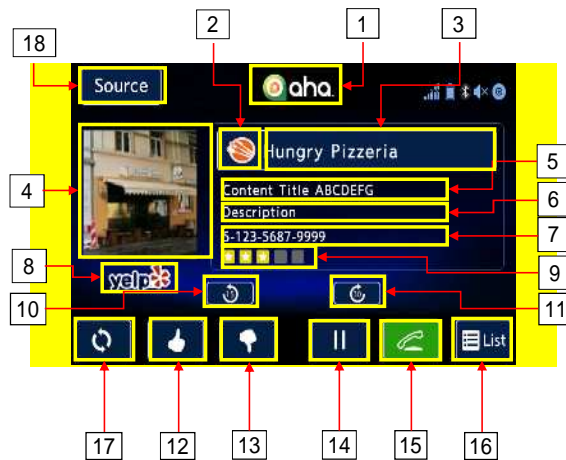

- 1 Aha Logo
- 2 Station Icon
- 3 Station Name/Station List Key
- 4 Content Image
- 5 Content Description Line 1
- 6 Content Description Line 2
- 7 Content Description Line 3
- 8 Content Partner Logo
- 9 Content Ratings Image
- 10 Skip Back Key
- 11 Skip Forward Key
- 12 Like Key
- 13 Dislike Key
- 14 Play/Pause Key
- 15 Call Key
- 16 Content List Key
- 17 Refresh Key
- 18 Source Select Key

**1** Aha Logo  
It shows the Aha Logo.

**2** Station Icon  
It shows the Station Icon.

**3** Station Name/Station List Key  
It shows the Station Name.

**4** Content Image  
It shows Content Image.

**5** Content Description Line 1  
It shows the content title.

**6** Content Description Line 2  
It shows the content description.

**7** Content Description Line 3  
It shows the content information.

**8** Content Partner Logo  
Press the key to enter the list.

**9** Content Ratings Image  
It shows Content Ratings Image.

**10** Skip Back Key  
Press the key to skip back.

**11** Skip Forward Key  
Press the key to skip forward.

**12** Like Key  
Press the key to show you like it.

**13** Dislike Key  
Press the key to show you dislike it.

**14** Play/Pause key  
Press the key first to play,then press again to pause it.

**15** Call Key  
Press the key to call telephone.



**16** Content List Key  
Press the key to enter the content list.

**17** Refresh Key  
Press the key to refresh.

**18** Source Select Key  
Press the key to enter the Multimedia Select Interface.

AUX



**1** AUX Key  
Press the key to enter AUX mode.



**1** SOURCE Key  
**2** Setting Key

**1** SOURCE Key  
Press the key to enter the Multimedia Select Interface.

**2** Setting Key  
Press the key to enter the audio setting.


Pandora



**1** Source List  
**2** Pandora Key

**1** Source Key  
It shows the Multimedia Select Interface.

**2** Pandora Key  
Press the key to enter Pandora mode.

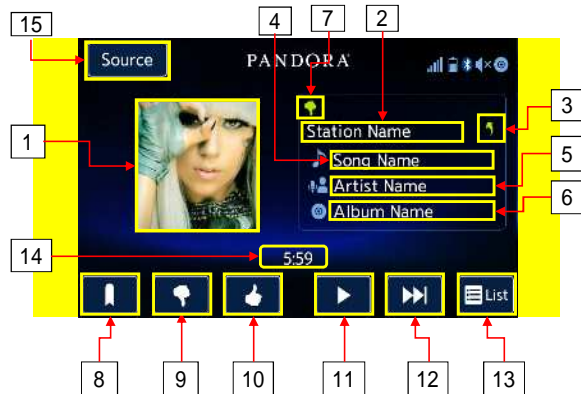

**1** Album Artwork  
**2** Station Name  
**3** Shared Station Icon  
**4** Track Name  
**5** Artist Name  
**6** Album Name  
**7** Thumbs Up/Down Icon  
**8** Bookmark Key  
**9** Thumbs Down Key  
**10** Thumbs Up Key  
**11** Play/Pause Key  
**12** Skip Key  
**13** List Key  
**14** PlayTime  
**15** Source Select Key