

EUT Internal Photos

Figure 3
Internal View (Removed Battery Cover)

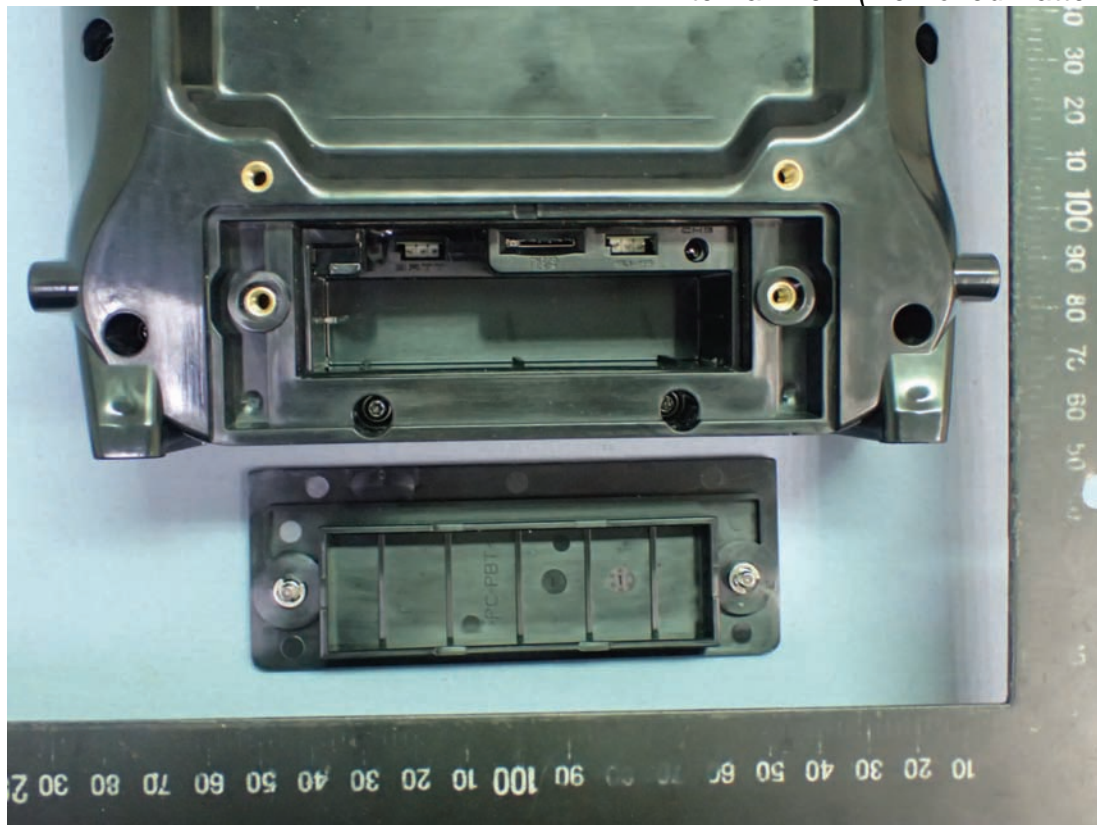


Figure 4
Internal View (Removed Cover)

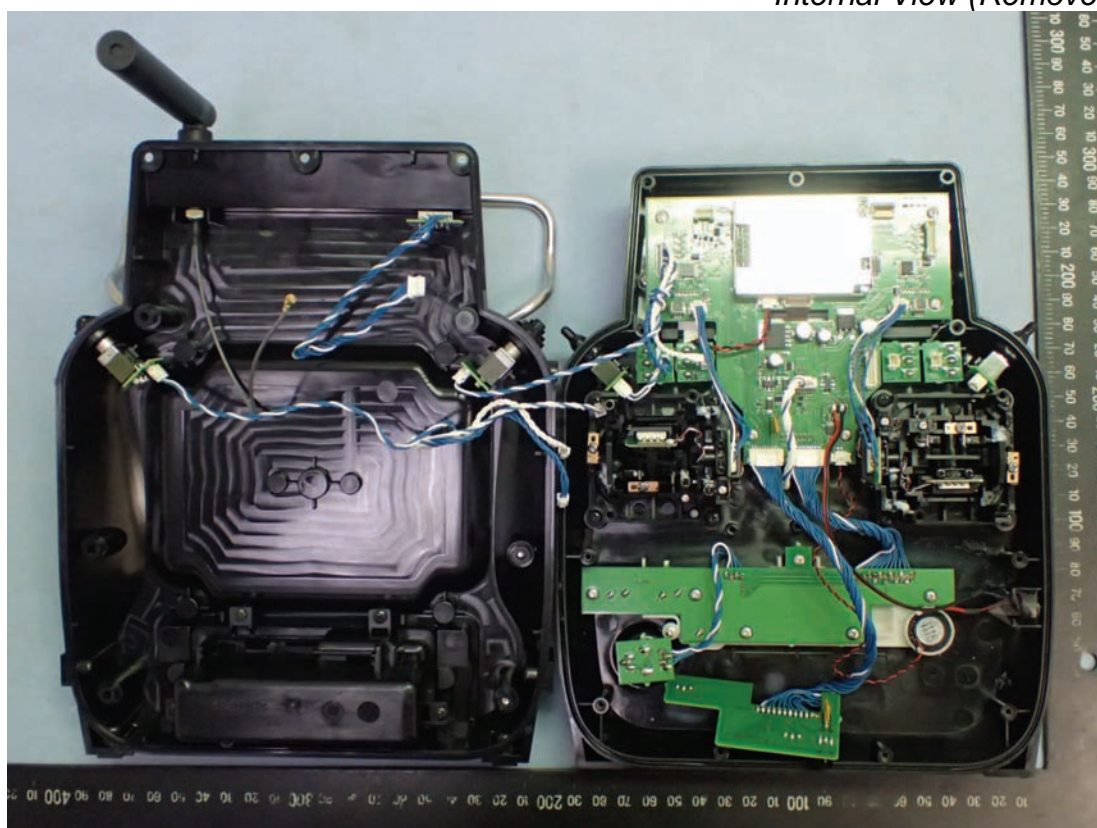


Figure 5
Internal View (IT300A-8 Board)



Figure 6
Internal View

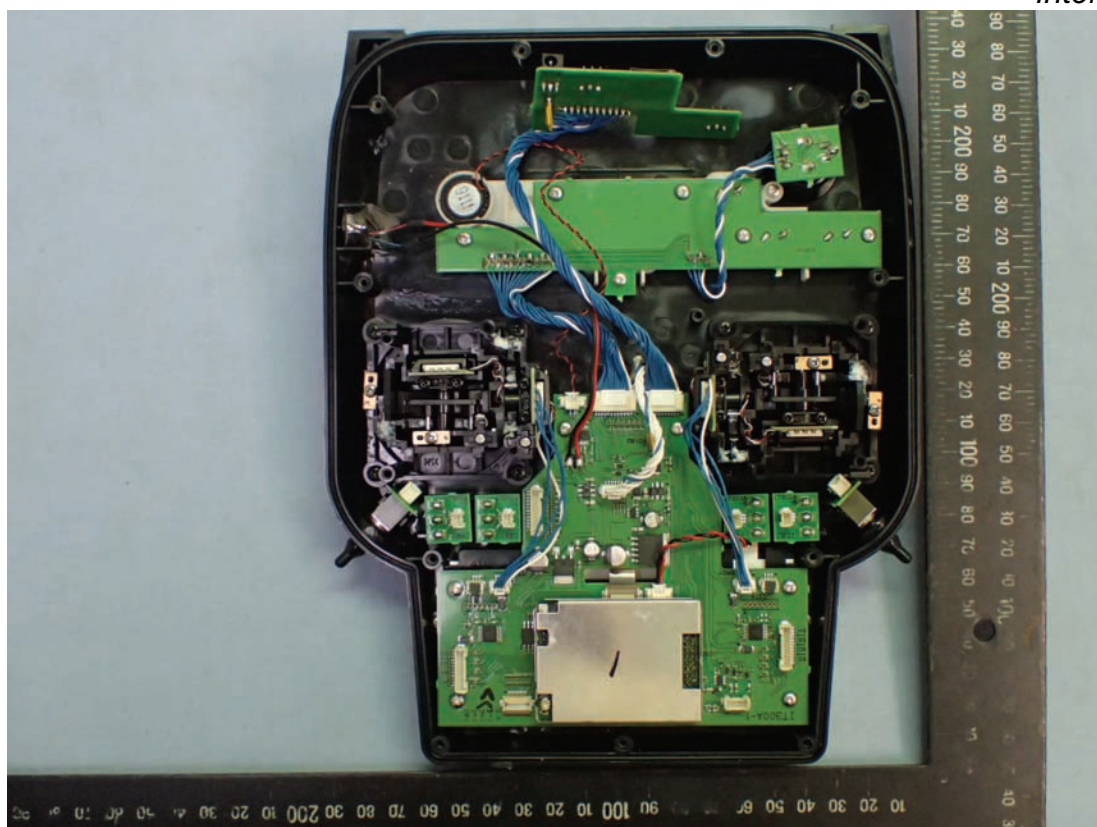


Figure 7
Internal View (IT300A-12 Board, Front View)

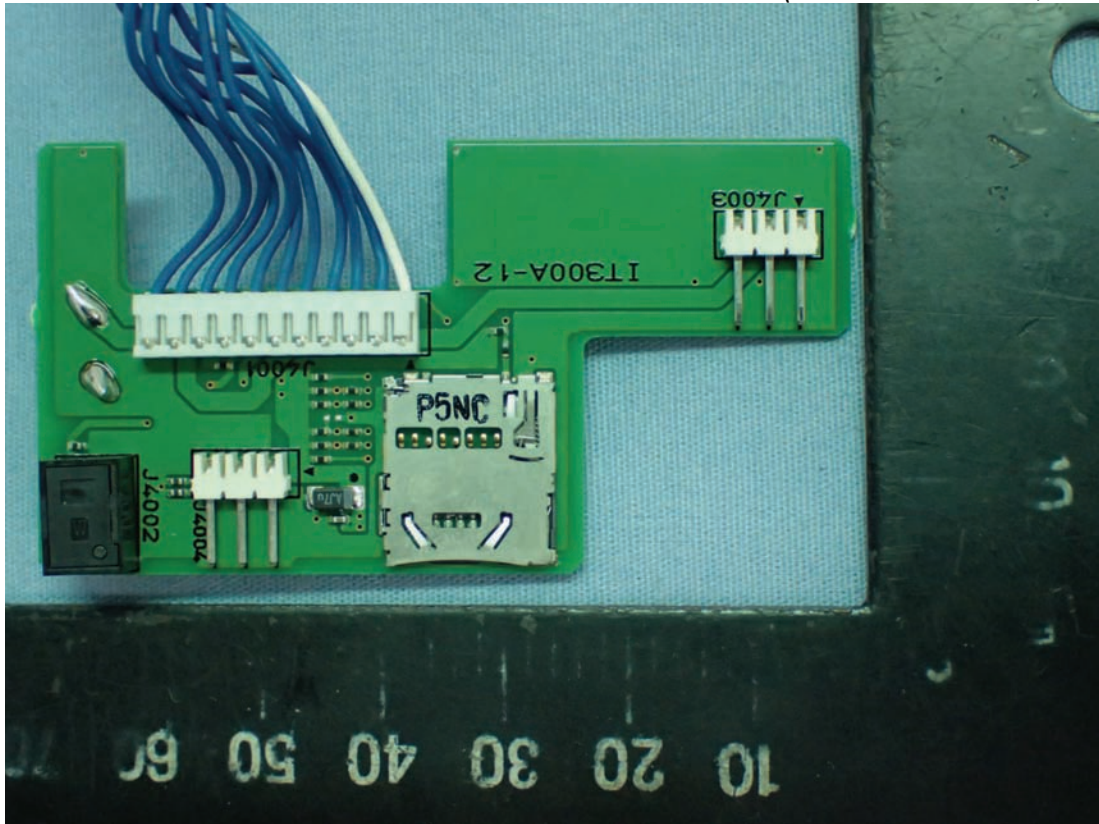


Figure 8
Internal View (IT300A-12 Board, Back View)

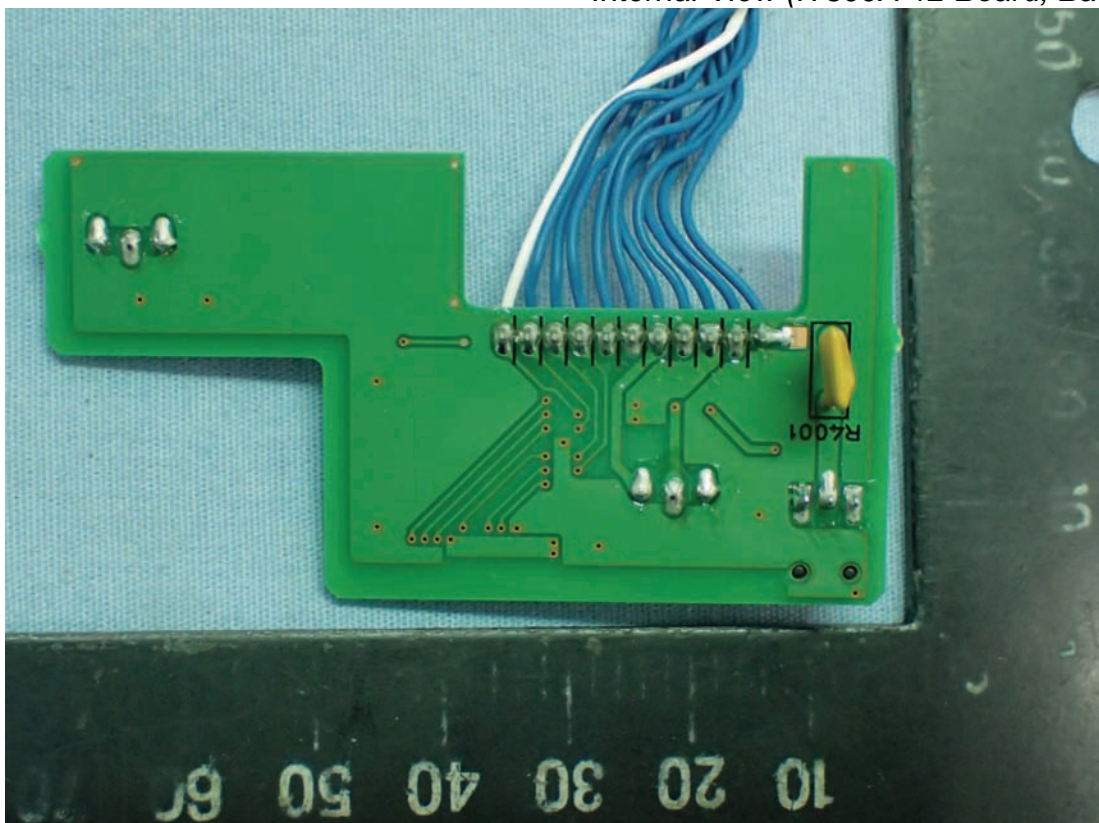


Figure 9
Internal View (IT300A-10 Board, Front View)



Figure 10
Internal View (IT300A-10 Board, Back View)

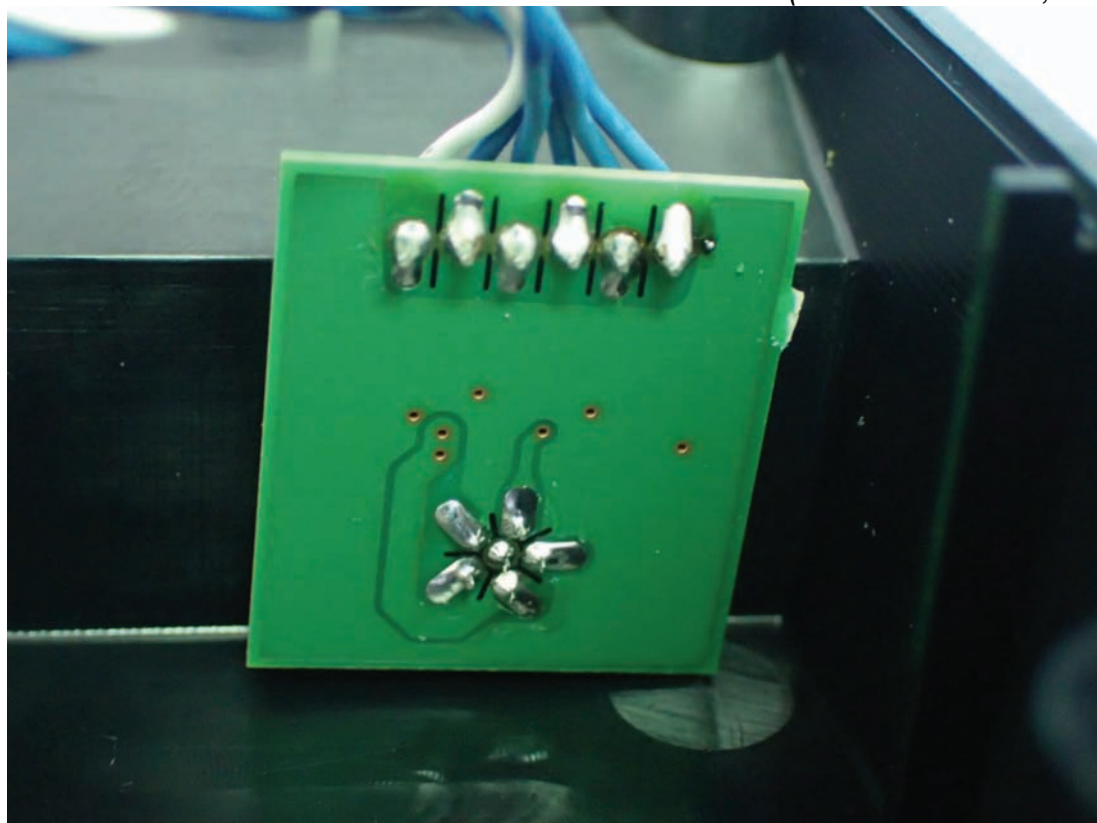


Figure 11
Internal View (Removed IT300A-13 Board)

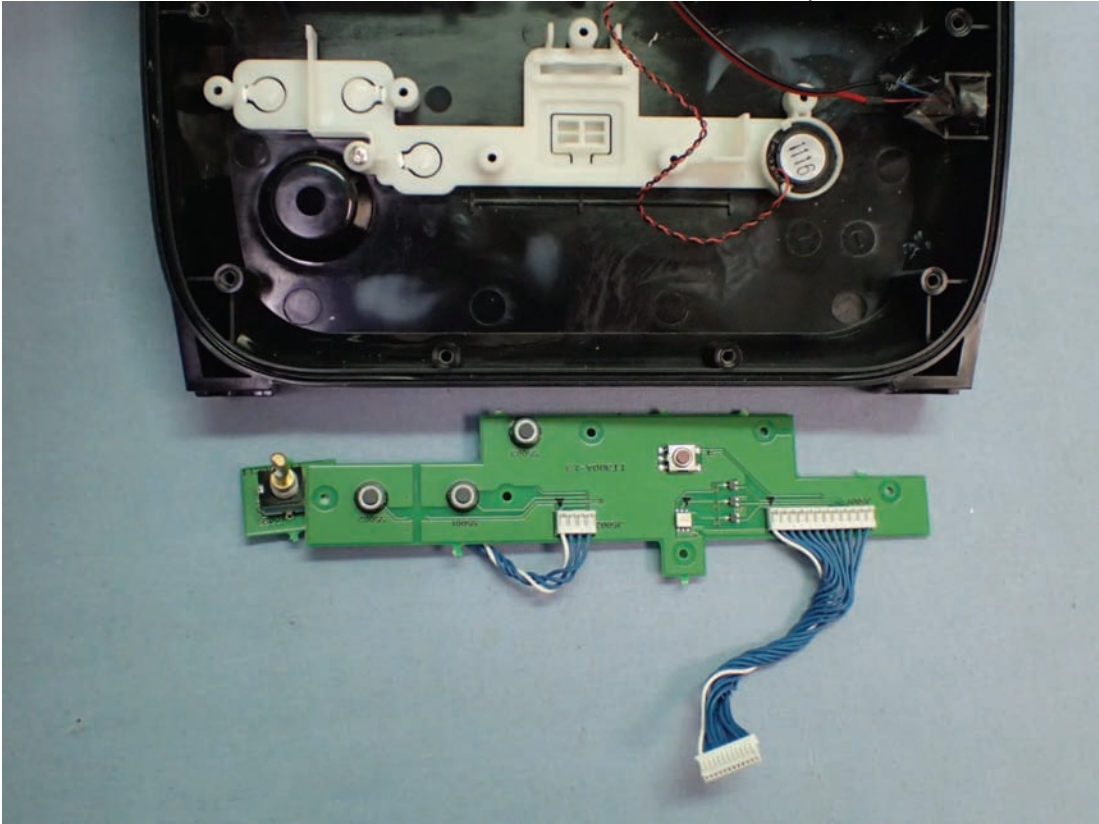


Figure 12
Internal View (IT300A-13 Board, Front View)

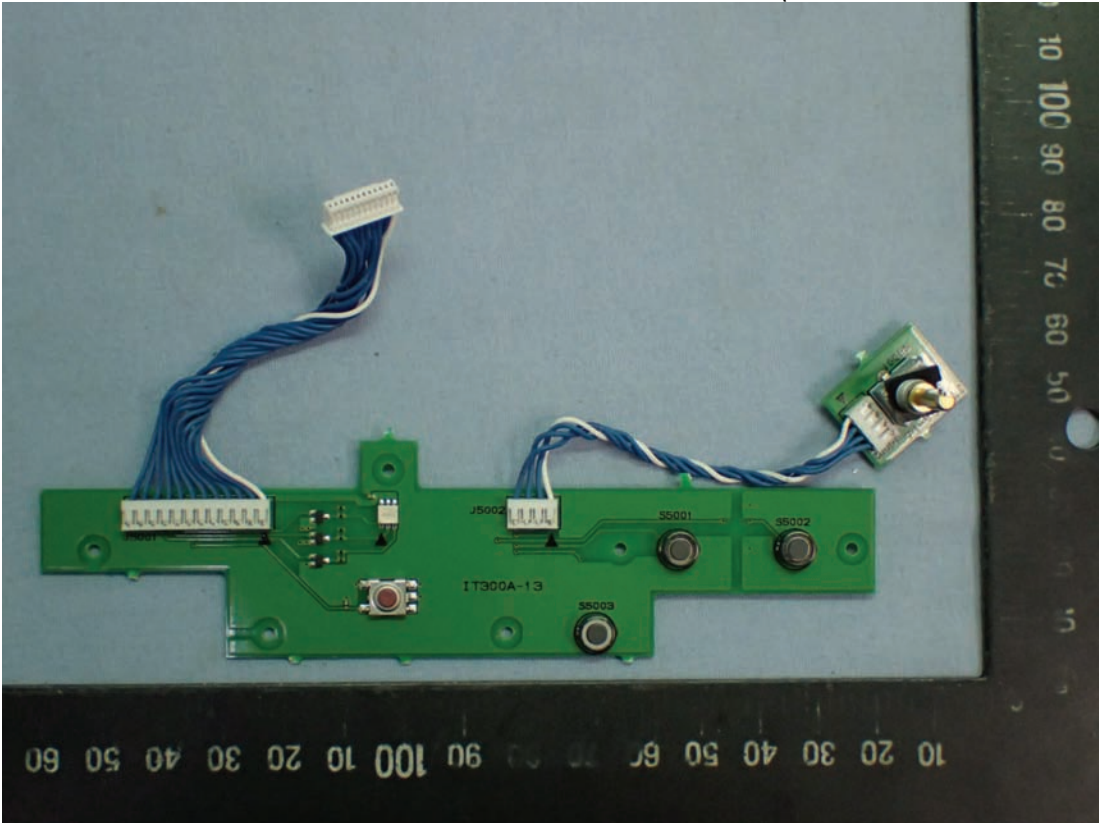


Figure 13
Internal View (IT300A-13 Board, Back View)

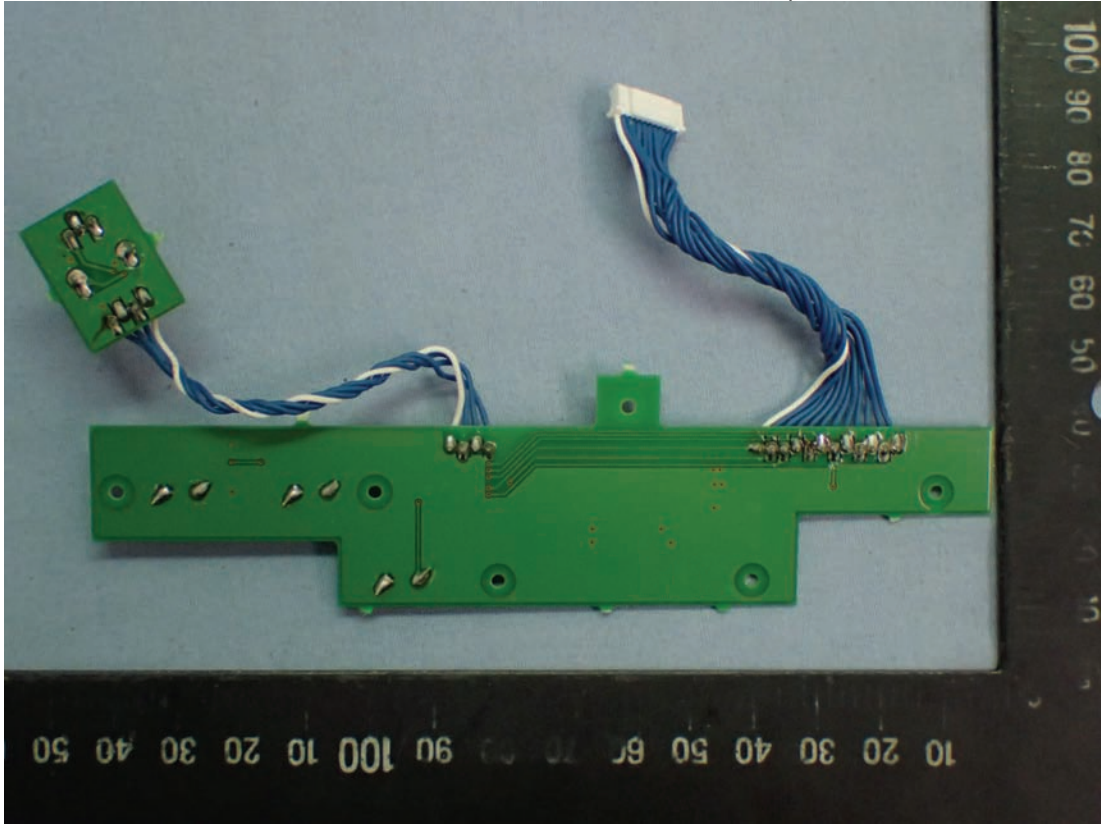


Figure 14
Internal View

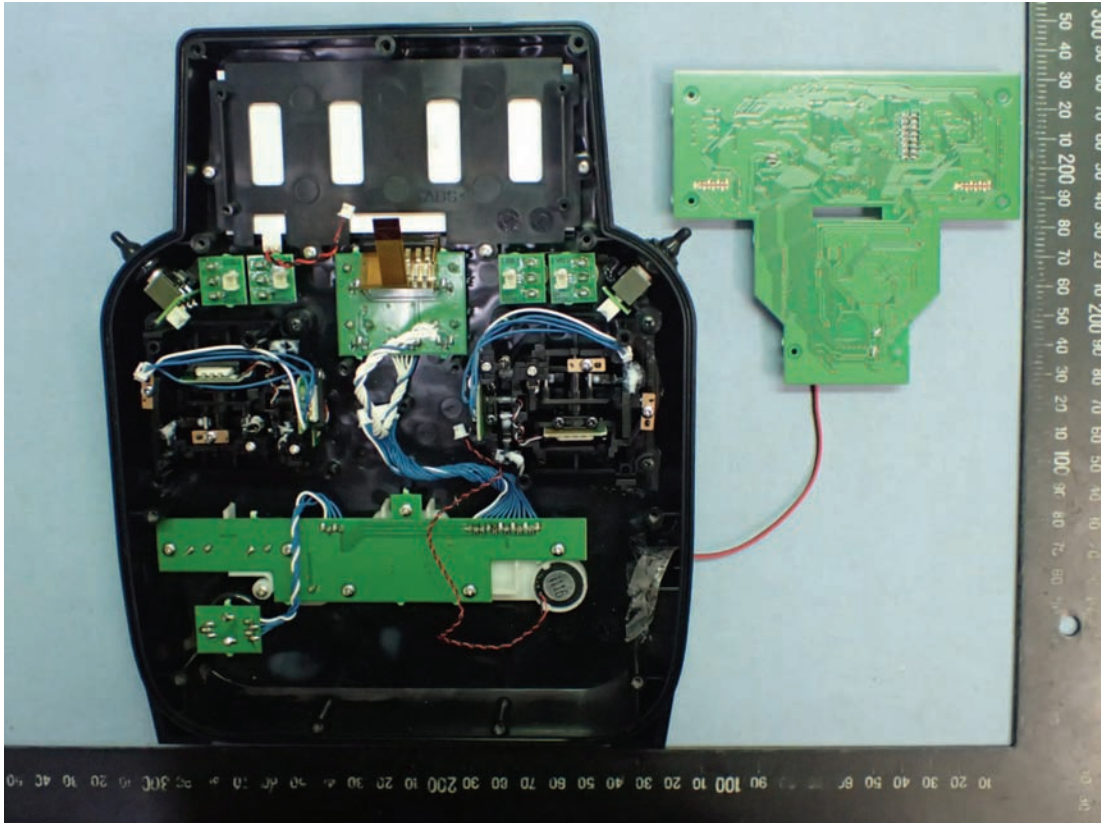


Figure 15
Internal View (IT300A-1 Board, Back View)

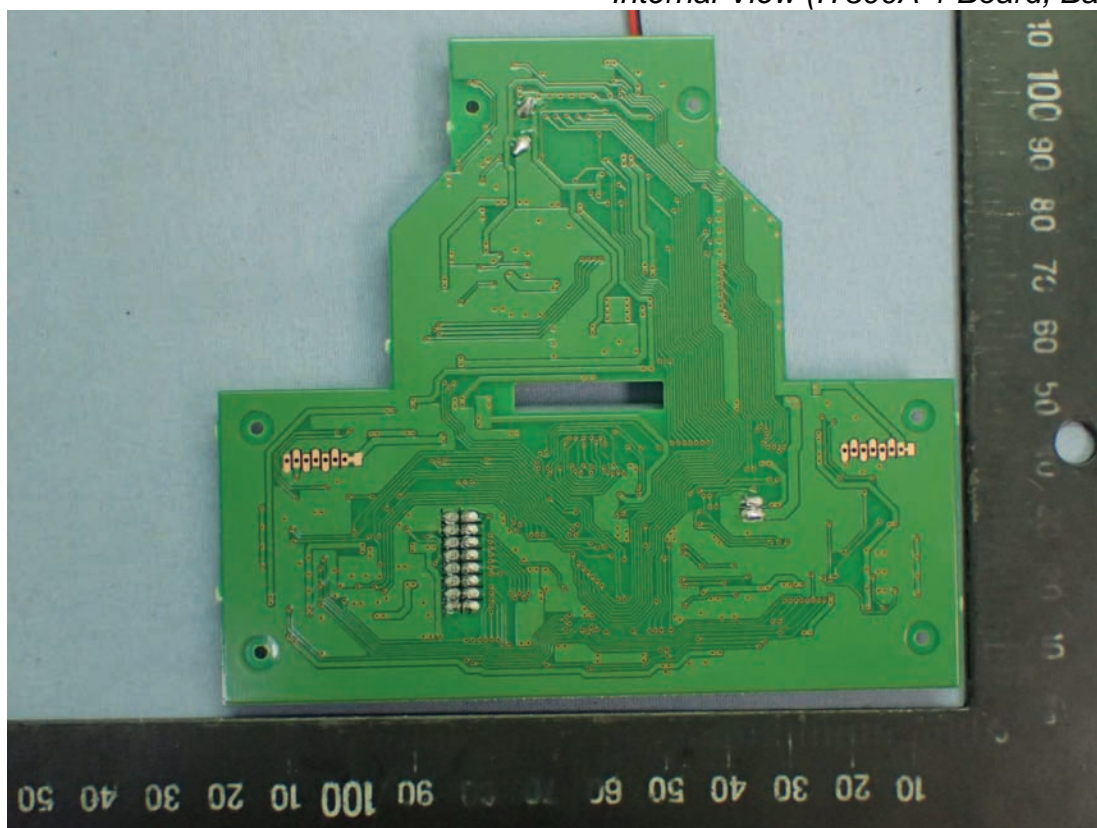


Figure 16
Internal View (IT300A-1 Board and RF Board)

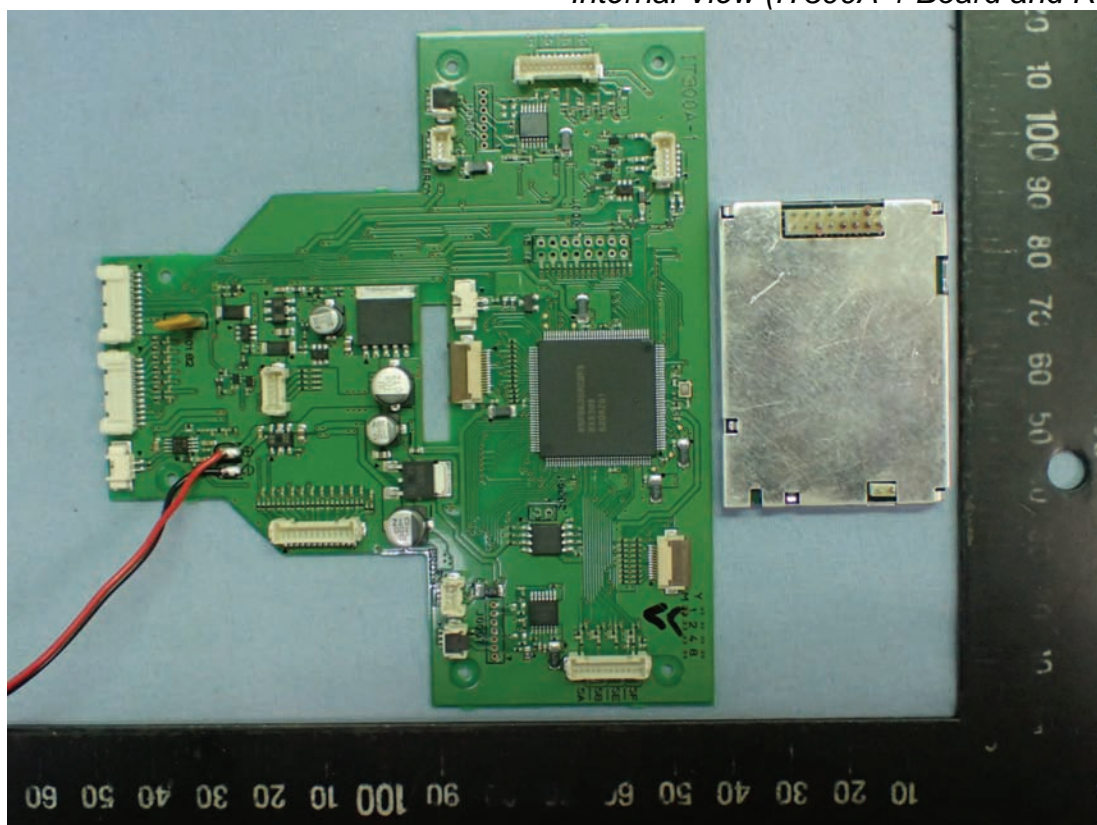


Figure 17
Internal View (IT300A-1 Board, Front View)

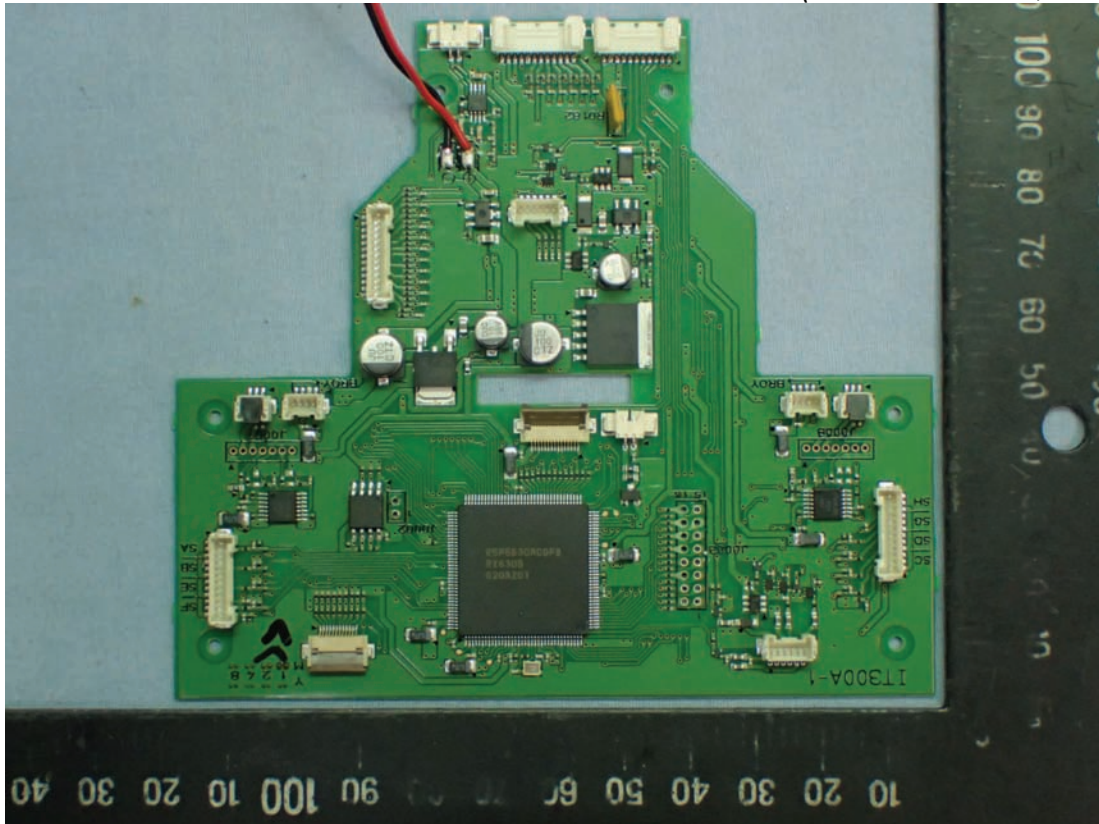


Figure 18
Internal View (RF Board, Removed Shielded Cover)

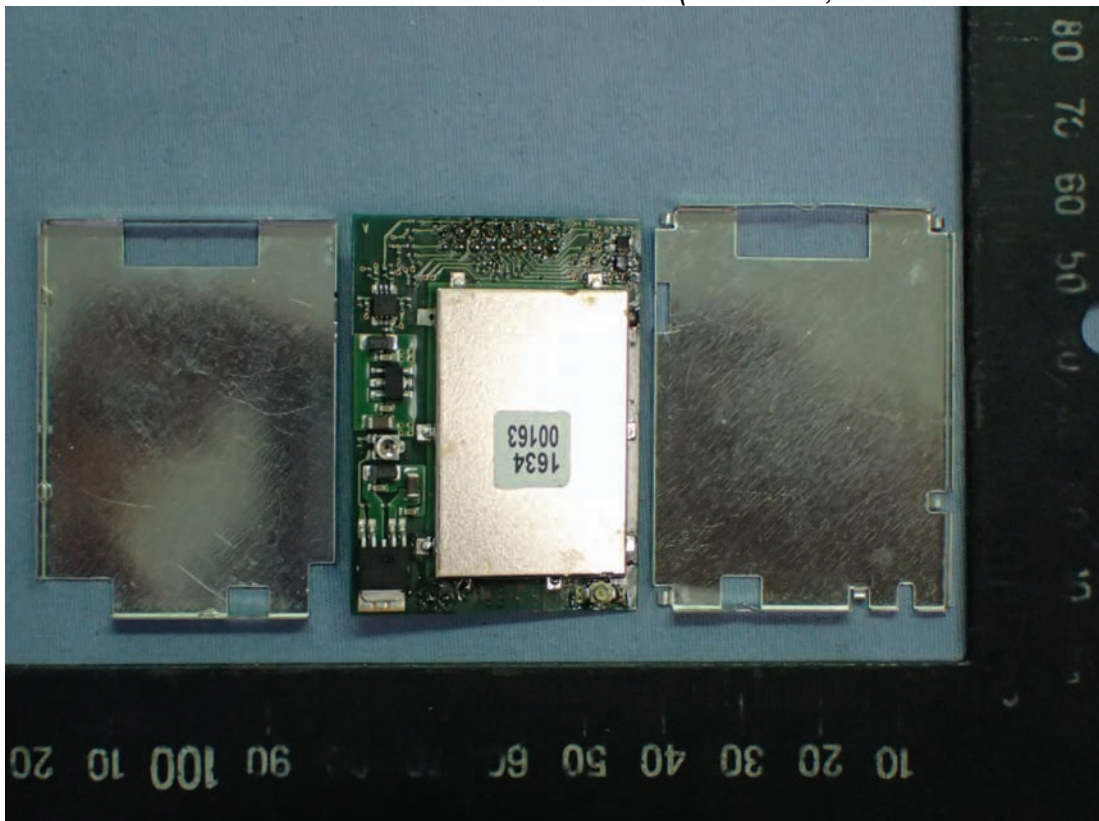


Figure 19
Internal View (RF Board, Front View)

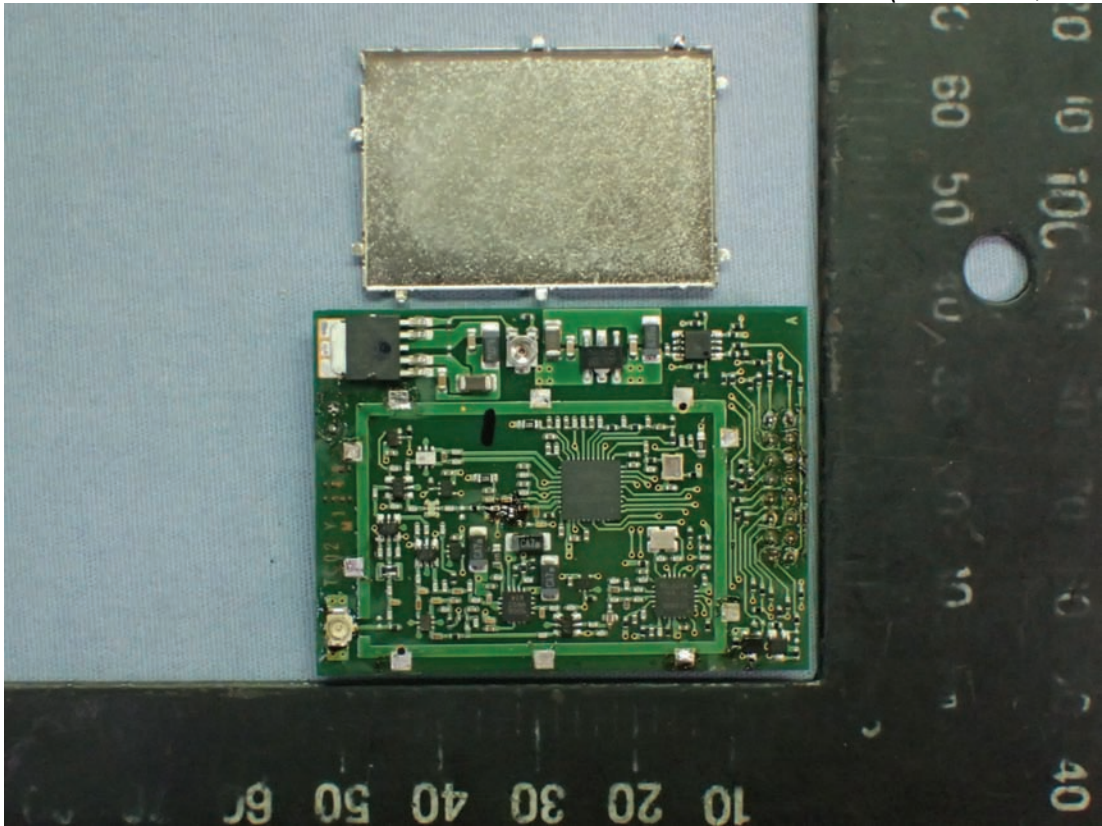


Figure 20
Internal View (RF Board, Back View)

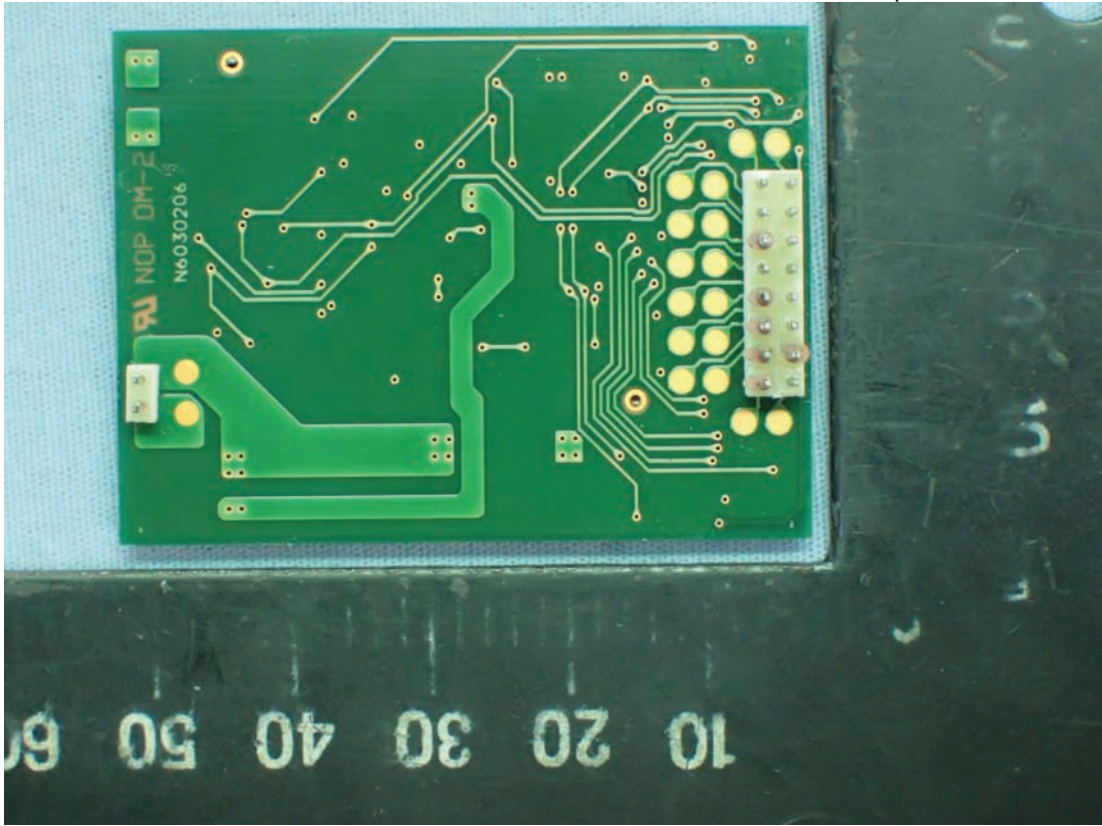


Figure 21
Internal View (Display, Front View)

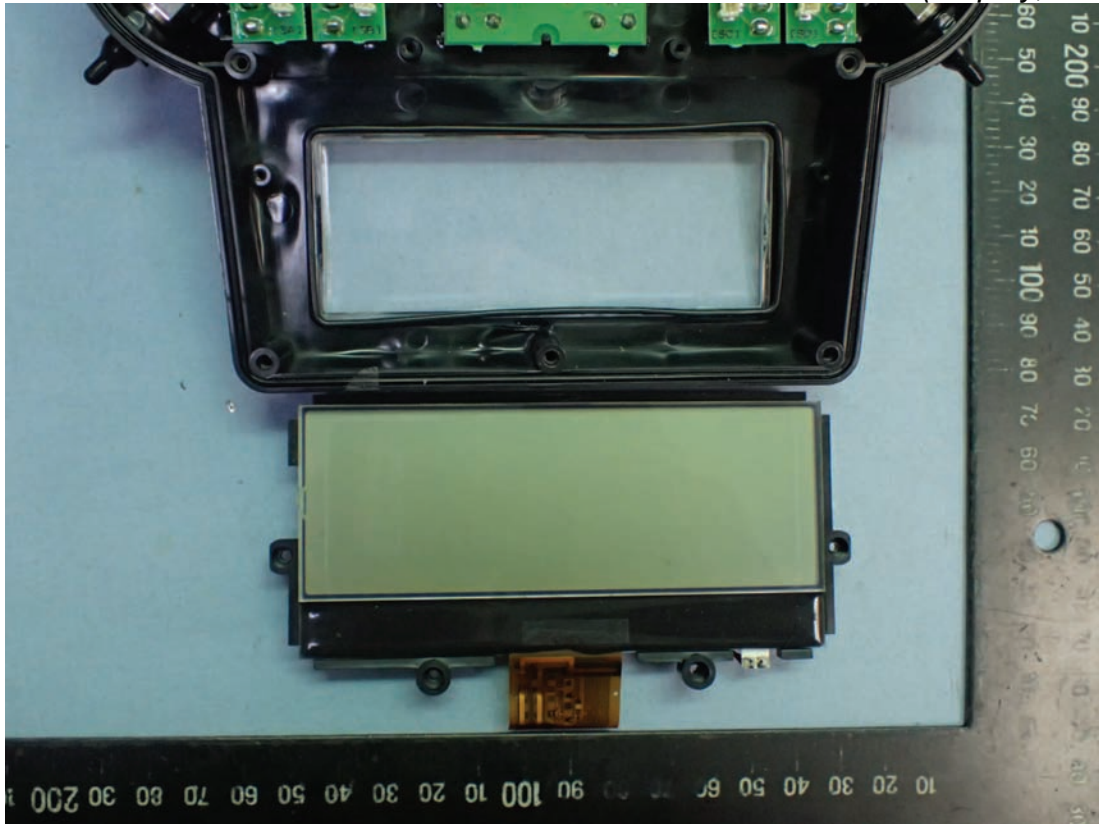


Figure 22
Internal View (Display, Back View)

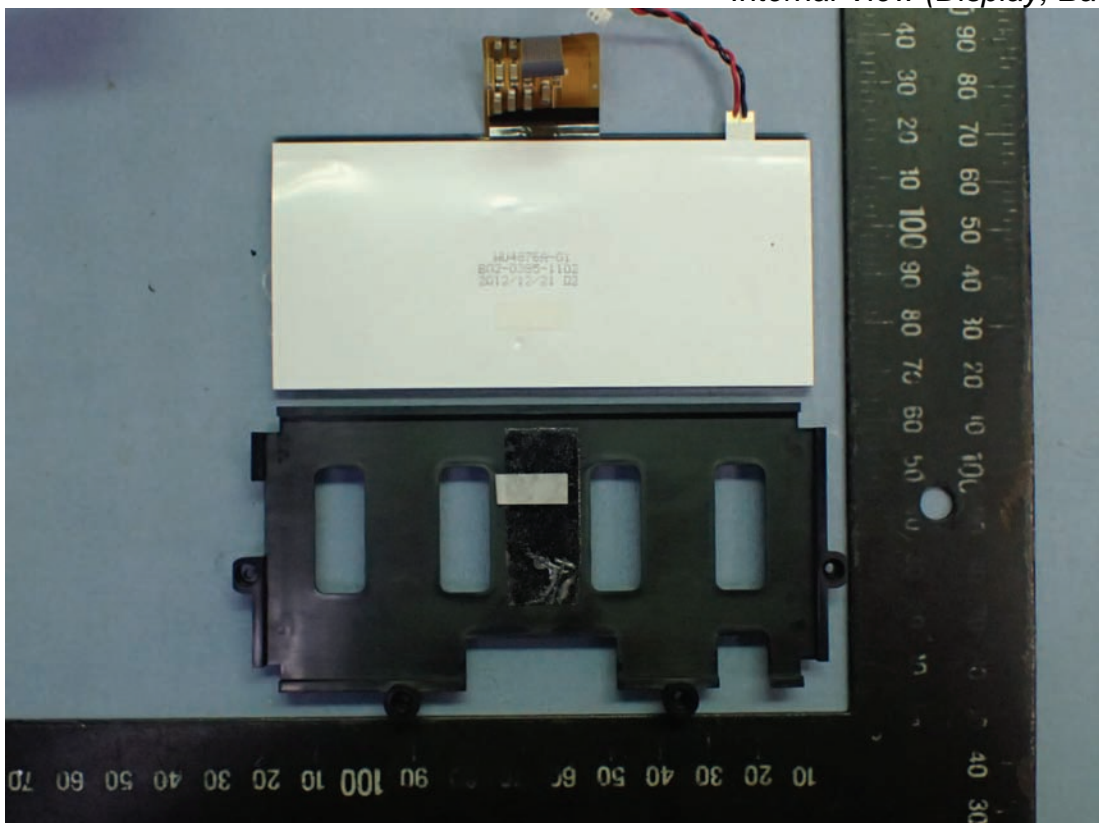


Figure 23
Internal View (IT300A-11 Board, Front View)

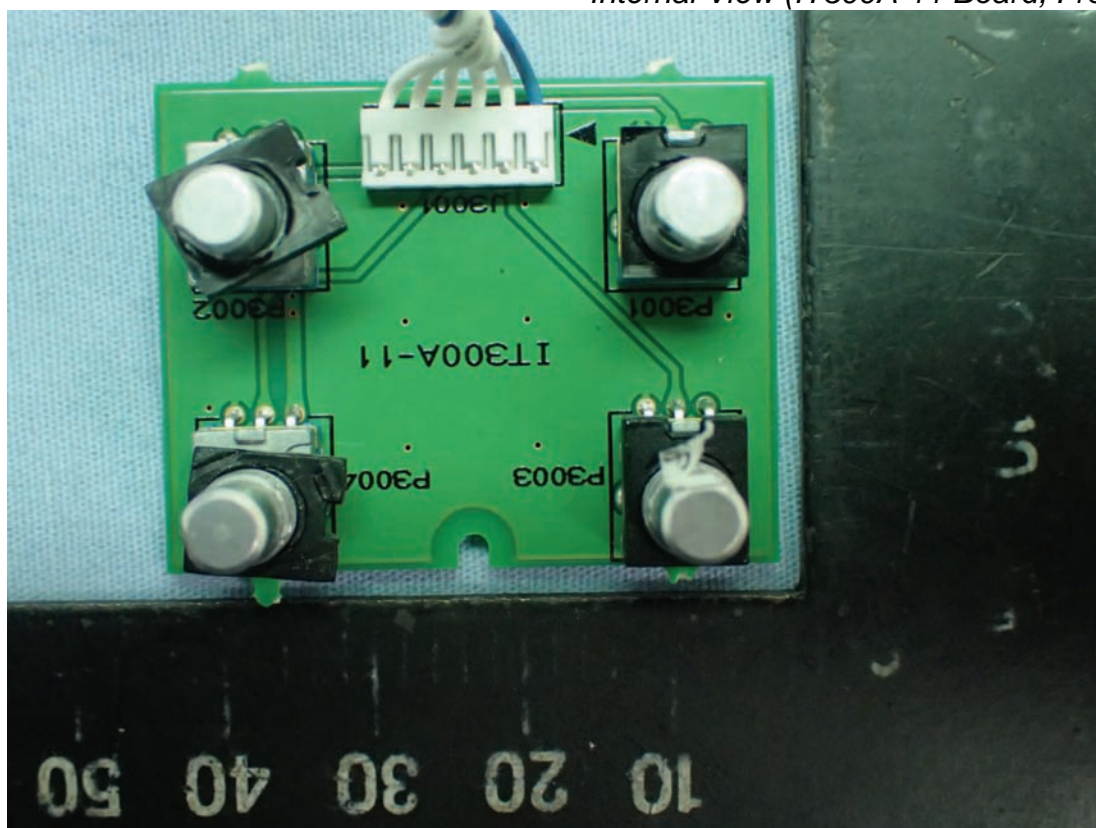


Figure 24
Internal View (IT300A-11 Board, Back View)

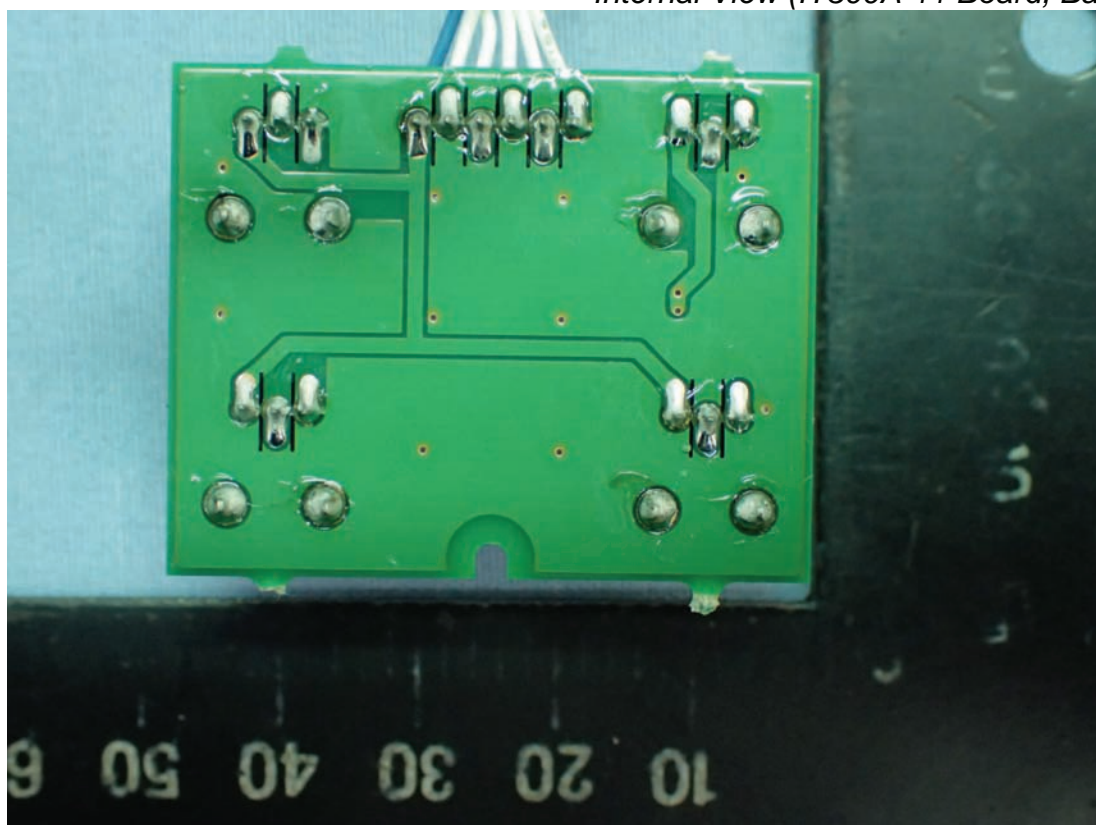


Figure 25
Internal View (IT300A-5 and IT300A-6 Board)

