

### TR-800 Tune-Up Info

1. Connect battery contacts to 9vdc.
2. Couple transmit antenna into frequency counter and deviation meter.
3. Set mode switch to push to talk and mic gain to maximum.
4. Rotate volume control to turn unit on. Press TALK button once so that TALK LED is on.
5. Feed 1kHz into pins 1(ground) and 2(hot) of headset connector. Increase level until BAT/OM LED lights(about 8 mv). Adjust VR801 for +/- 40kHz deviation.
6. Adjust VC901 for correct frequency.