



TEMPLATE: HPSP_SLCN_CLR_110817.indd
 COLOR: 2 Color, Black + PMS 2925 C
 Option 1 - FOLD: Accordion
 FOLDED: 297 mm x 52.5 mm (11.69" x 2.06")
 Option 2 - NO FOLD: Flat
 FLAT: 297 mm x 210 mm (11.69" x 8.26")

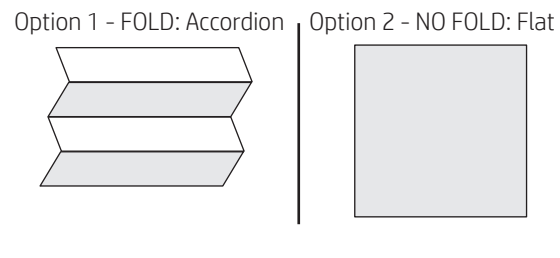



Setup instructions



*The computer may ship with a power cord or an AC power plug.

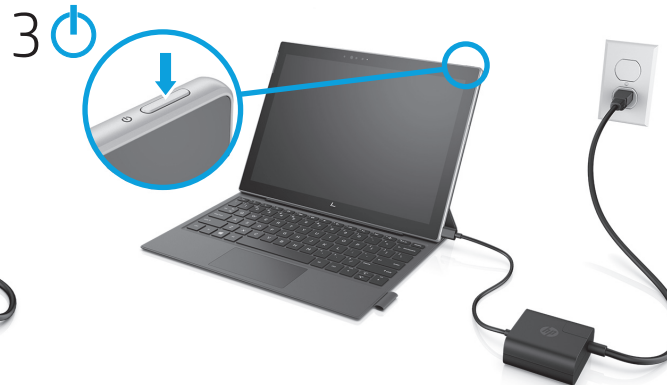

To set up a WLAN and connect to the Internet, you need a broadband modem (DSL or cable) (purchased separately), Internet service purchased from an Internet service provider, and a wireless router (purchased separately).

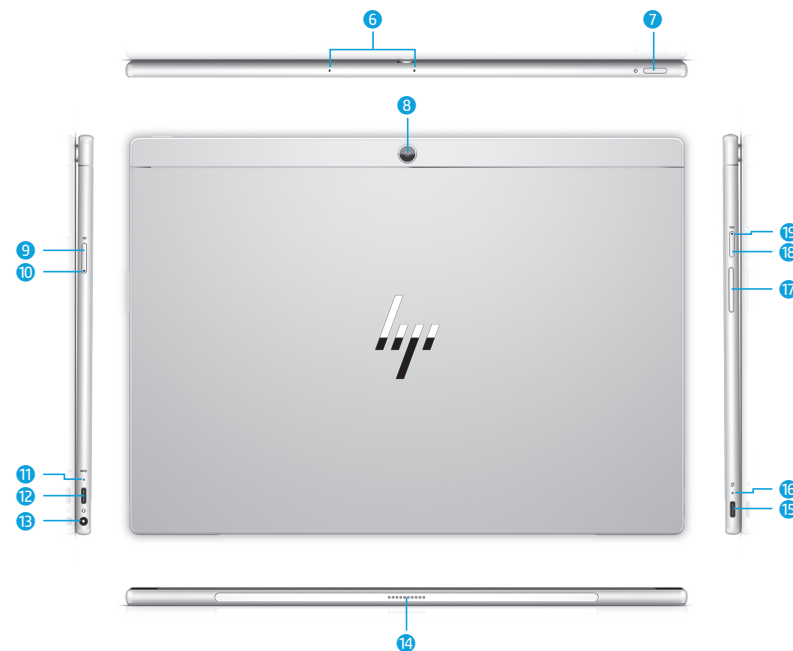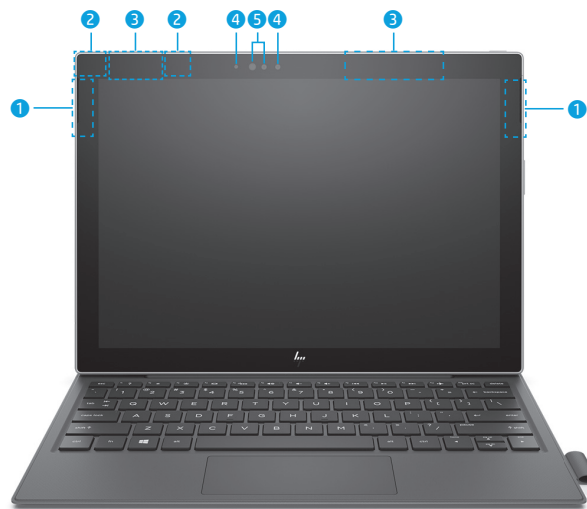

- 1 Speakers
- 2 WLAN antennas
- 3 WWAN antennas*
- 4 Camera lights
- 5 Cameras

- 6 Internal microphones
- 7 Power button
- 8 Rear camera
- 9 MicroSD memory card reader
- 10 Card tray access hole
- 11 AC adapter and battery light
- 12 USB Type-C power connector and SuperSpeed port
- 13 Audio-out (headphone)/ Audio-in (microphone) combo jack
- 14 Keyboard connector
- 15 USB Type-C power connector and SuperSpeed port
- 16 AC adapter and battery light
- 17 Volume button
- 18 Nano SIM card slot
- 19 Card tray access hole

Find more information

Windows products To learn more about Windows® and to access help topics, select the **Start** button , and then select **Tips** or **Get Help** (requires a network connection).

To access the user guides, select the **Start** button , select **HP Help and Support**, and then select **HP Documentation**.

- or -

To access the user guides, select the **Start** button , select **HP**, and then select **HP Documentation**.

Linux products To access the user guides, double-click the **HP Documents** icon on the desktop.

FreeDOS products To access the user guides, select **HP Documents** on the Boot Menu.

You do not need to connect to the Internet to access the user guides. To view the user guides on the Web, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **User Guides**.

A *User Guides* disc is included with some products.

* Select products only.

Computer color, features, feature locations, and accessories may vary.



Replace this box with PI statement as per spec.




L15450-001



TEMPLATE: HPSP_SLCN_CLR_110817.indd
COLOR: 2 Color, Black + PMS 2925 C
Option 1 - FOLD: Accordion
FOLDED: 297 mm x 52.5 mm (11.69" x 2.06")
Option 2 - NO FOLD: Flat
FLAT: 297 mm x 210 mm (11.69" x 8.26")

Option 1 - FOLD: Accordion

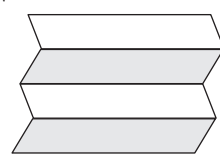

Option 2 - NO FOLD: Flat





Windows Start screen

Depending on your product, you can use a keyboard and mouse, a TouchPad, or a touch screen to navigate the Windows Start screen.





Find Settings

Select the **Start** button , and then select the **Settings** icon .




Shut down your computer

Select the **Start** button , select the **Power** icon , and then select **Shut down**.



Display the Start menu

Select the **Start** button  in the lower-left corner of the taskbar.



Search

In the taskbar search box, begin typing the name of an app, setting, file, or Internet topic.



Switch between open apps

Select the **Task view** icon  in the taskbar.




The features and appearance of the Windows screen vary, depending on the version of the operating system and additional software installed on your computer.

Touch gestures


Use these common touch gestures with the TouchPad and, on select products, with a touch screen.



Tap or double-tap to select

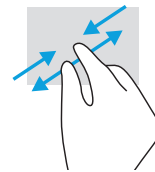


Two-finger pinch zoom

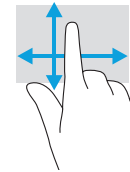


One-finger slide*




Two-finger tap**

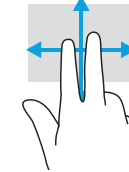

Two-finger slide**

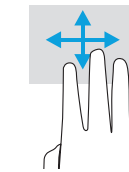

Three-finger swipe**

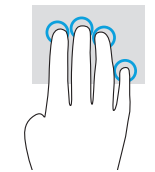

Four-finger tap**

*Touch screen only **TouchPad only



Some computers, apps, and files do not support all touch gestures.

Locate system information

System information is provided on the service label, found in one of the following locations: the bottom of the computer, the back of the display, inside the battery bay, or beneath the service door. The label may be in paper form or imprinted on the product.

In some Windows products, you can briefly press the **fn+esc** key combination to display the System Information screen.

Feedback on this document

To help us improve this document, please send any suggestions, comments, or errors to doc.feedback@hp.com. Include the document part number (located near the bar code) when submitting your feedback.

Contact support

To resolve a hardware or software problem, go to <http://www.hp.com/support>. Use this site to get more information about your product, including links to discussion forums and instructions on troubleshooting. You can also find information on how to contact HP and open a support case.



WARNING: To reduce the risk of electric shock or damage to the equipment:

- Plug the power cord into an AC outlet that is easily accessible at all times.
- Disconnect power from the computer by unplugging the power cord from the AC outlet.
- If provided with a 3-pin attachment plug on the power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.

For more safety, regulatory, labeling and battery disposal information, refer to the *Regulatory, Safety and Environmental Notices* provided with your user guides. To locate the user guides for your computer, see the "Find more information" section of this poster.



WARNING: To reduce the risk of serious injury, read the *Safety & Comfort Guide* provided with your user guides. It describes proper workstation setup, and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is also available on the Web at <http://www.hp.com/ergo>.



WARNING: To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Your computer is protected by a free subscription to McAfee LiveSafe™ service for a limited time from the first time you use the computer. You will have the option to purchase McAfee LiveSafe service upon expiration of the subscription. McAfee LiveSafe service helps protect your identity, your data, and your devices with a single subscription.*

* Select products only.

SIMPLIFIED DECLARATION OF CONFORMITY

The Regulatory Model Number (RMN) for this equipment is TPN-Q206.

Hereby, HP declares that this equipment is in compliance with Directive 2014/53/EU. To view the Declaration of Conformity for this equipment, go to www.hp.eu/certificates and search using this equipment's RMN.

SOFTWARE TERMS

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the computer, please contact your seller.

LIMITED WARRANTY

You can find your HP Limited Warranty located with the user guides on your product and/or on the CD or DVD provided in the box. In some countries or regions, HP may provide a printed warranty in the box. For countries or regions where the warranty is not provided in printed format, you can request a copy from <http://www.hp.com/go/orderdocuments>. For products purchased in Asia Pacific, you can write to HP at POD, PO Box 161, Kitchener Road Post Office, Singapore 912006. Include your product name, and your name, phone number, and postal address.

PRODUCT DESCRIPTION

This product is a lightweight notebook computer and might feature a thin-panel display, TouchPad, processor, keyboard, RAM, integrated battery pack, hard drive, eMMC, or solid-state drive, and an external AC adapter. The printed *Setup Instructions* identify the hardware components of your computer. Depending on your product, the AC adapter has an input rating of 100–240 V ac, 50/60 Hz, and a DC output rating of 2.05–19.62 A.

To access the latest user guides, go to <http://www.hp.com/support>, and follow the instructions to find your product. Then select **User Guides**.

© Copyright 2018 HP Development Company, L.P.

McAfee LiveSafe is a trademark of McAfee, Inc. in the United States and other countries. Windows is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.

Not all features are available in all editions of Windows. This computer may require upgraded and/or separately purchased hardware, drivers, and/or software to take full advantage of Windows functionality. See <http://www.microsoft.com> for details.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: January 2018