

# Operation Manual (BT)

## 1. SWITCH Function



Switch No.	Switch Name	Operation	Function
①	PWR	TOUCH	Power ON
		LONG TOUCH	Power OFF
②	TUNE TRACK	TOUCH	Track UP/ Track Down
		SLIDE	
		LONG TOUCH	Fast Forward/Rewind
③	VOLUME	TOUCH	Vol Up/Down
		SLIDE	
		LONG TOUCH	Continuous Volume Up/Down
④	RADIO	LONG TOUCH	Change Mode (FM, AM)
⑤	MEDIA	TOUCH	Change Mode (within Media: BT, USB, iPod, AUX)
		LONG TOUCH	Change Mode (Radio → Media)
⑥	SETUP	TOUCH	Setup Menu (Within Media: BT, USB, iPod, AUX)
		LONG TOUCH	Radio Mode
⑦	FLD (CH · 4 Area)	TOUCH	Move to iPod Menu
⑧	BACK (AS · 5 Area)	TOUCH	Back to Previous Hierarchy
⑨	DISP	TOUCH	Text Data Display Change (Title, Album, Artist, Folder)
	ENTER (DISP · 6 Area)	TOUCH	In Setup Menu: <ul style="list-style-type: none"> <li>· Enter Next Hierarchy</li> <li>· Activate the Selected item</li> </ul>

## 2. Operation Flow (BT)

### 2 Getting Started

Refer to Connection Diagram for the Set-up.  
Supply is 14.0V DC.

Touch Power switch  to turn on the unit.



### 2 Bluetooth Pairing

To go to BT mode, long touch "MEDIA".  
Unless the BT icon can be seen, keep touching "MEDIA."



Touch "SETUP" to connect a device to the unit.



Under "SETUP", select **Bluetooth**.

**NOTE:**

- ※Touch the "▲" or "▼"  
to navigate the selection.
- ※Touch "ENTER (DISP - 6 Area)"  
to select.
- ※Touch "BACK (AS - 5 Area)"  
to return to the previous display.



Under **Bluetooth**, select **Setup Bluetooth**.



Under **Select Bluetooth**, select **Pairing**.



Connect the phone to the unit, **My Car**.



Once connected, a confirmation will appear on the screen. Also, a BT icon will display on the upper right corner of the screen.



Once connected, it will confirm if you want to automatically transfer your phonebook to the unit.



## 2 Bluetooth Handsfree - Incoming Call


The screen shown on the right will be displayed if there's an incoming call.

It displays the ff:

- Incoming Call
- Name
- Number



The handsfree control of call is through the steering switch.

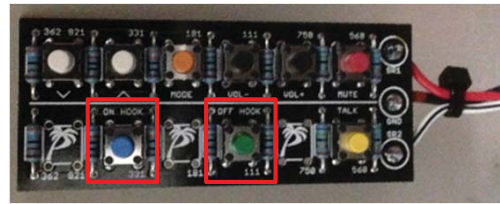

### 2.3.1 Answer

To take the call, **Off Hook** should be pressed.

There should be **Talking...** instead of **Incoming Call** to know that the call has been connected.

To end a call, **On Hook** should be pressed, and display would go back to the mode before the call.



### 2.3.2 Reject

To reject a call, press **On Hook** and it will go back to the mode before the call.

## 2 Bluetooth Handsfree - Outgoing Call

To make an outgoing call, press **Off Hook** from steering switch and the display on the right will appear.

### NOTE:

- ※Touch the "**^**" or "**v**" to navigate the selection.
- ※Touch "**ENTER (DISP - 6 Area)**" to select.
- ※Touch "**BACK (AS - 5 Area)**" to return to the previous display.



### 2.4.1 Phonebook

To call a number registered on the connected phone, select **Phonebook**.

### NOTE:

- ※Touch the "**^**" or "**v**" to navigate the selection.
- ※Touch "**ENTER (DISP - 6 Area)**" to select.
- ※Touch "**BACK (AS - 5 Area)**" to return to the previous display.




### 2.4.2 All Calls

To select from the pool of all recently associated numbers, select **All Calls**.

### NOTE:

- ※Touch the "**^**" or "**v**" to navigate the selection.
- ※Touch "**ENTER (DISP - 6 Area)**" to select.
- ※Touch "**BACK (AS - 5 Area)**" to return to the previous display.

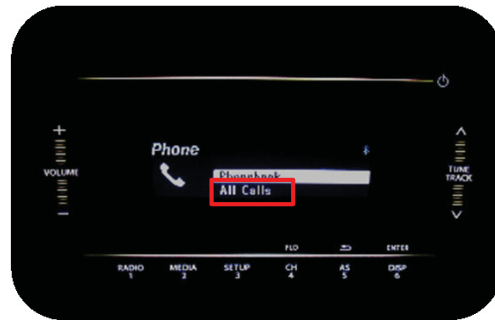

### 2.4.3 Missed Calls

To select from the calls missed, select **Missed Calls**.

### NOTE:

- ※Touch the "**^**" or "**v**" to navigate the selection.
- ※Touch "**ENTER (DISP - 6 Area)**" to select.
- ※Touch "**BACK (AS - 5 Area)**" to return to the previous display.



#### 2.4.4 Incoming Calls

To select from the calls received, select **Incoming Calls**.

**NOTE:**

- ※Touch the "**^**" or "**v**" to navigate the selection.
- ※Touch "**ENTER (DISP - 6 Area)**" to select.
- ※Touch "**BACK (AS - 5 Area)**" to return to the previous display.



#### 2.4.5 Outgoing Calls

To select from the calls made, select **Outgoing Calls**.

**NOTE:**

- ※Touch the "**^**" or "**v**" to navigate the selection.
- ※Touch "**ENTER (DISP - 6 Area)**" to select.
- ※Touch "**BACK (AS - 5 Area)**" to return to the previous display.



### 3 Bluetooth Audio


To play audio via BT, long touch "MEDIA" and then, keep touching until BT icon appears.




Indication will be written on the upper left of the display with a BT icon below it and on the upper right. Audio will automatically play.



To increase the volume, touch "+" or slide up.

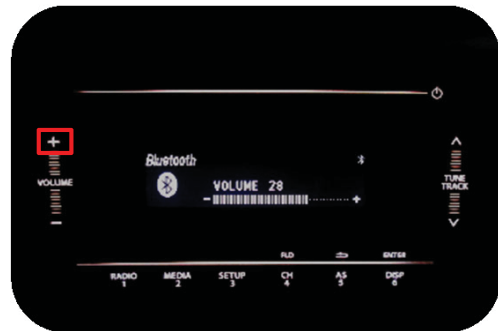

To decrease the volume, touch "-" or slide down.

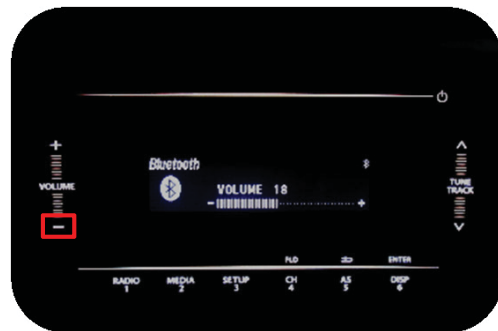



### 2.5.1 Repeat

To repeat a track, touch "SETUP."



By default, repeat mode is off, as shown.

To turn it on, touch "ENTER (DISP - 6 Area)"



To return to original display, touch "BACK (AS - 5 Area)"



An indication of being in the repeat mode is shown on the upper right part of the display beside the BT icon and above the time elapsed.



To turn it off, go back to **"SETUP"**, and then select **Repeat** until as shown on the right.



### 2.5.2 Random

To put the songs on random mode, touch **"SETUP"**, and then select **Random**.

**NOTE:**

- ※Touch the **"^"** or **"v"** to navigate the selection.
- ※Touch **"ENTER (DISP - 6 Area)"** to select.
- ※Touch **"BACK (AS - 5 Area)"** to return to the previous display.



To randomize songs, touch **"ENTER (DISP - 6 Area)"** until **Off** becomes **All**.





To go back to the original display, touch **"BACK (AS - 5 Area)"**  
An indication icon will be displayed beside the BT icon on the upper right corner and above the time elapsed, as shown on the right.



2.5.3 **Seek Up/Seek Down**  
To play next track, touch "▲"

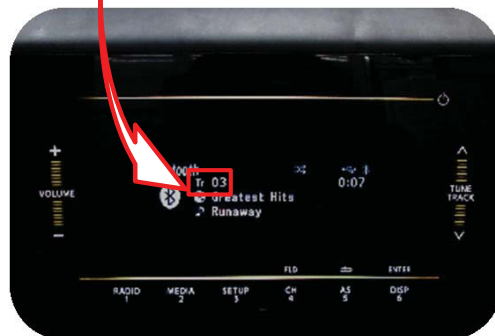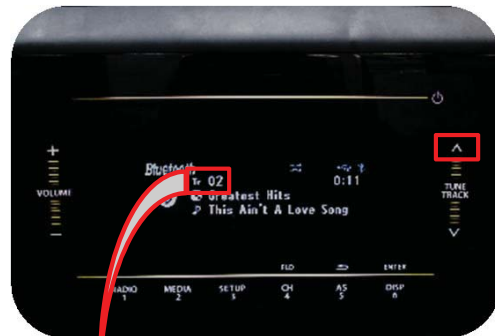

To go back to previous track, touch "▼"

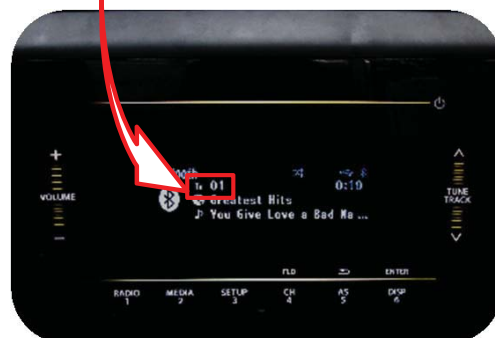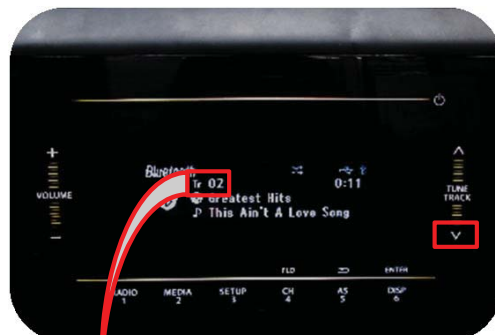

Sliding up the **Tune Track** skips a few tracks up.



Sliding down the **Tune Track** skips a few tracks down.



### 2.5.4 Fast Forward/Rewind

To fast forward the track, long touch "▲"



To rewind the track, long touch "▼"



**CAUTION: Radio Frequency Radiation Exposure**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body in normal use position.

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC WARNING**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Since this device is always used with vehicle, it is not sold to general end users separately.  
Therefore there is no user manual of this device by alone.