 


27P222

 
2. Touch the switch you want to delete.

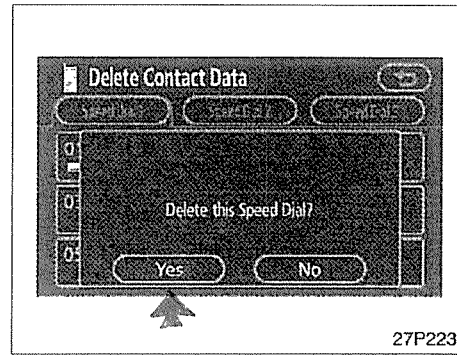

27P223


3. Touch the "Yes" switch.

• Deleting all of the speed dial

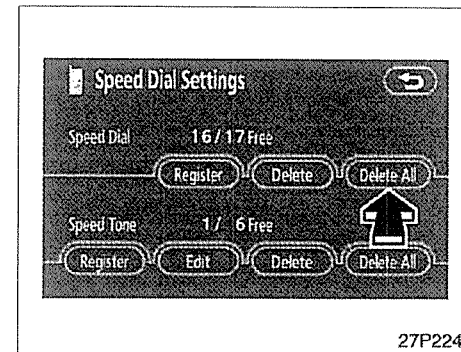


27P224

 1. Touch the "Delete All" switch of "Speed Dial".

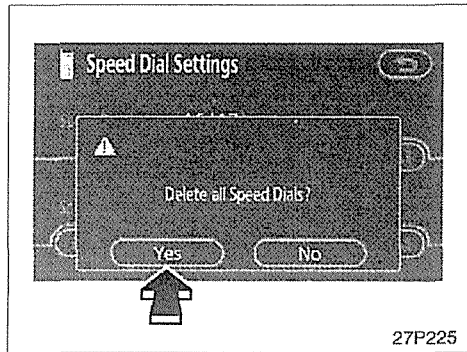


2. Touch the "Yes" switch.

 
(b) Registering the speed tone
 You can register the desired tone number. Up to 6 speed tone numbers can be registered.

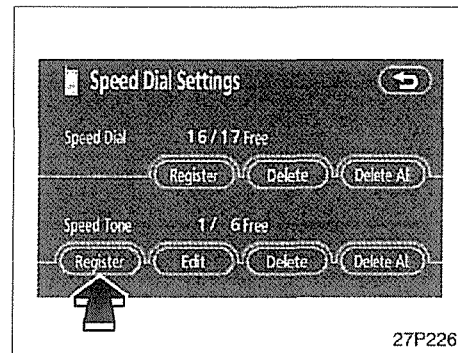

 
1. Touch the "Register" switch of "Speed Tone".

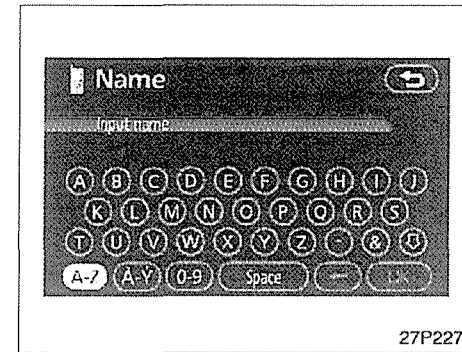

 
2. Use the software keyboard to input the name.

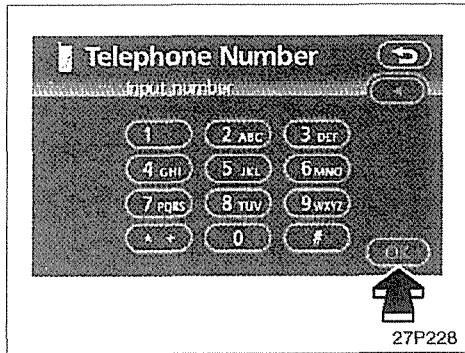

 3. Input the number and touch "OK".

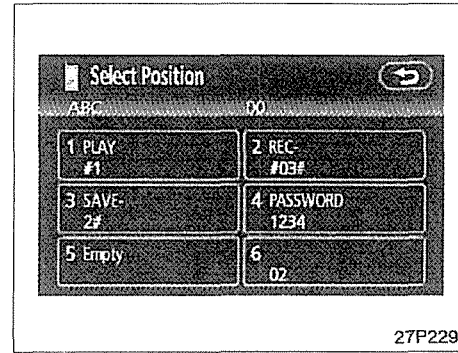


 4. Touch the desired switch you want to register in.

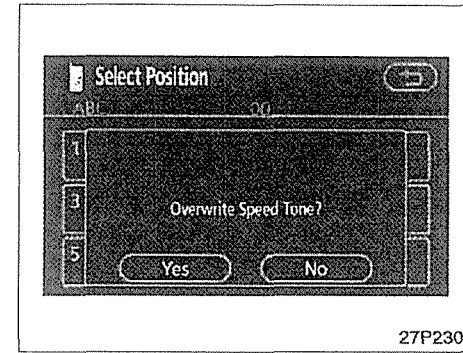


5. If you select a switch you registered before, this screen is displayed. Touch the "Yes" switch if you want to overwrite it.

 
● **Editing the speed tone.**
You can edit the speed tone.

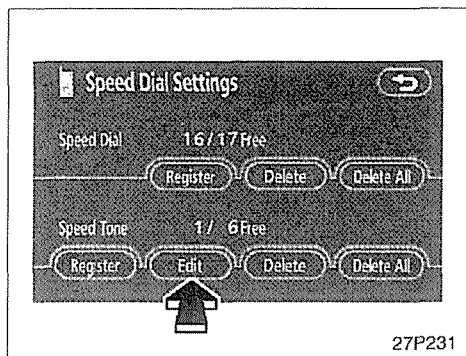

 
1. Touch the "Edit" switch of "Speed Tone".

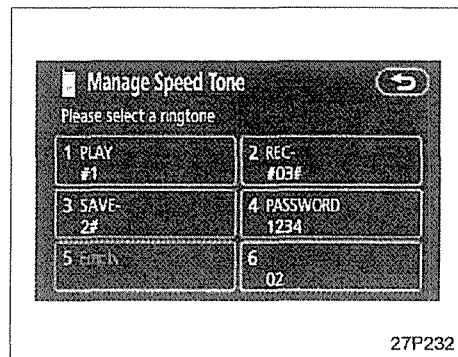

 2. Touch the switch you want to edit.

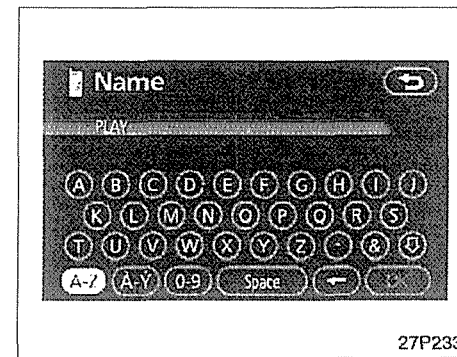

 
3. Use the software keyboard to input the name.

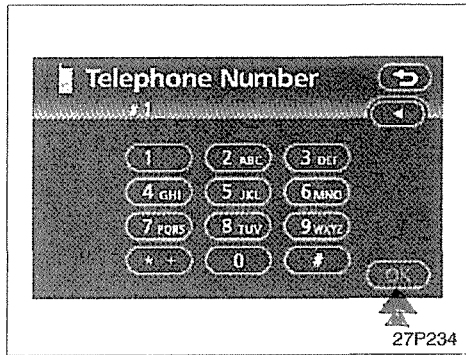


4. Input the number and touch "OK".

• **Deleting the speed tone individually.**
 You can delete "1" to "6" of the speed tone.

 
If you delete them all at once, all of 6 numbers are deleted.

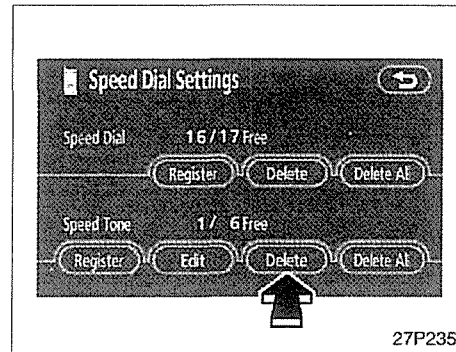

 1. Touch the "Delete" switch of "Speed Tone".

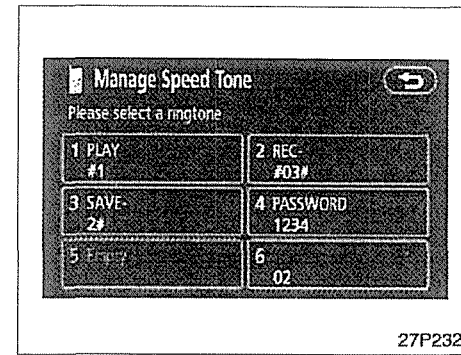

 
2. Touch the switch you want to delete.

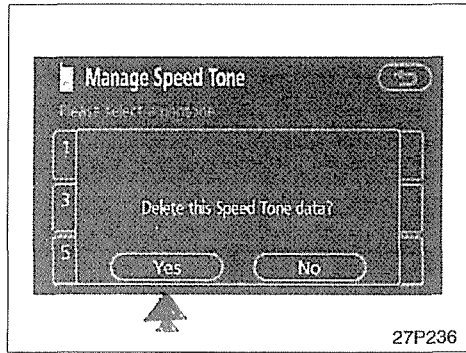

3. Touch the "Yes" switch.


27P236

 • Deleting all the speed tone

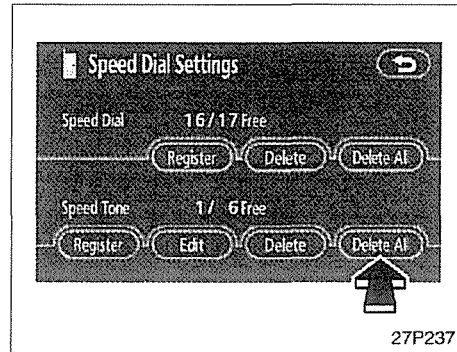

1. Touch the "Delete All" switch of "Speed Tone".

 
27P237

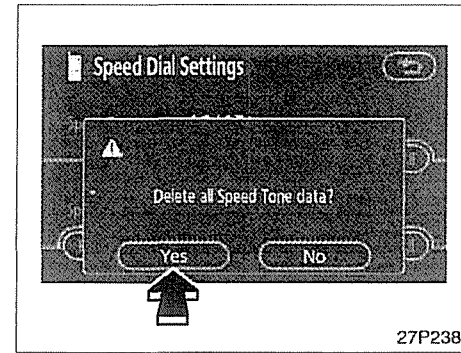


2. Touch the "Yes" switch.

27P238

 (ii) Setting the volume

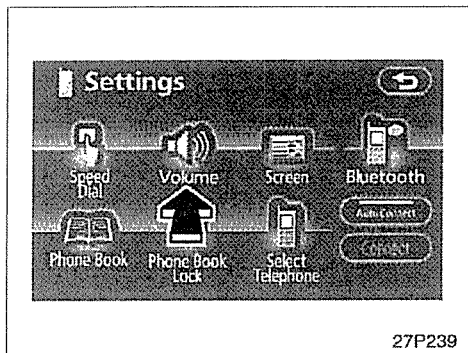

 1. Touch the "Volume" switch to display the "Volume Setting" screen.

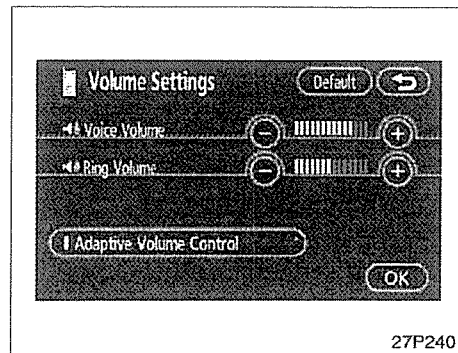

2. Touch the "-" or "+" switch to adjust the "Voice Volume" or "Ring Volume".

Voice Volume .. adjusting the other party's voice.

 
Ring Volume ... adjusting the ring volume.

• Automatic volume settings for high speed


You can set the volume one step up when the vehicle speed is over 80 km/h. (When it is under 70 km/h, previous volume is back.)

Each time you touch the "Adaptive Volume Control" switch, you can switch on or off.

- **Initializing the settings**
You can initialize the settings.

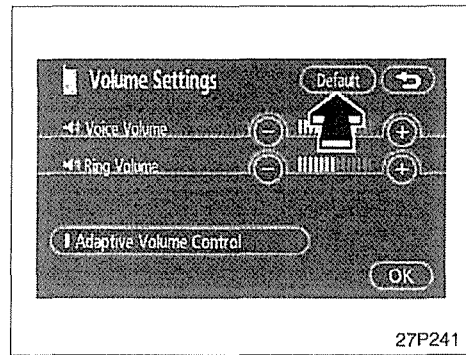


Touch the “Default” switch.

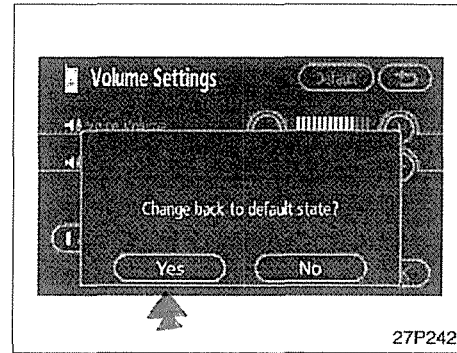 


Touch the “Yes” switch.

 - (iii) **Setting the screen**

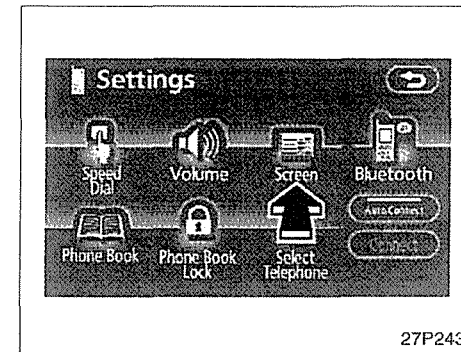

 
1. Touch the “Screen” switch to display the “Screen Settings” screen.

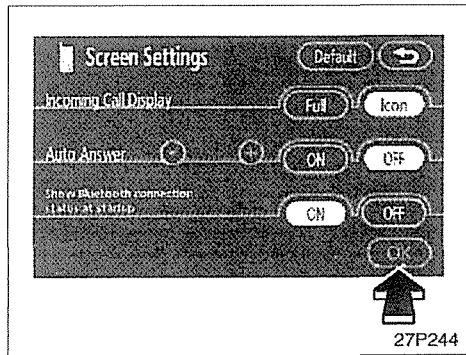

2. Do the detailed settings of the screen and touch "OK".

● Receiving Call Display

 You can select the method of the receiving call display.

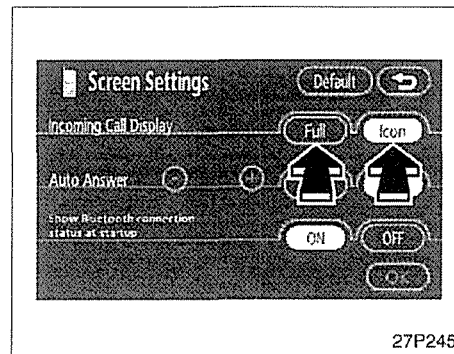


Touch the "Full" or "Icon" switch.

Full mode When a call is received, the hands-free screen is displayed and you can operate it on the screen.

Icon mode The message is displayed on the upper side of the screen. You can only operate the steering switch.


● Auto answer

 When a call is received, the display automatically changes to the talking screen and you can start to talk on the phone (without touching any switch) after the preset time.

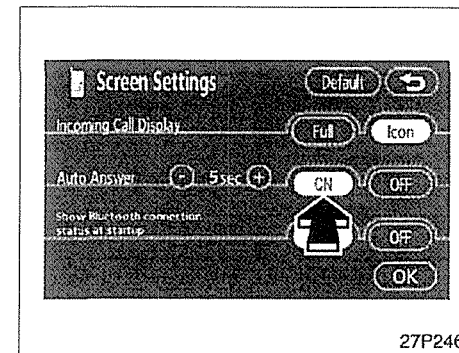


Touch the "ON" switch of "Auto Answer" and "-" or "+" switch to adjust the waiting time of auto answer within 1 - 60 seconds.

 ● The Bluetooth connection status at startup

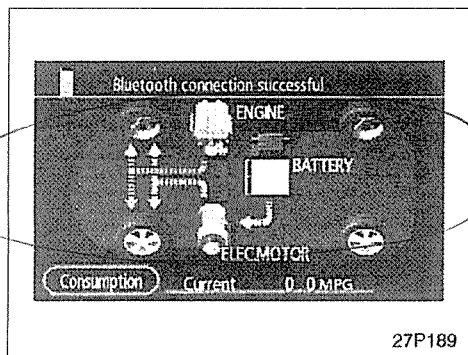


 When you turn the “POWER” switch to “ACC” or “IG-ON” and the Bluetooth is automatically connected, the connection check is displayed.

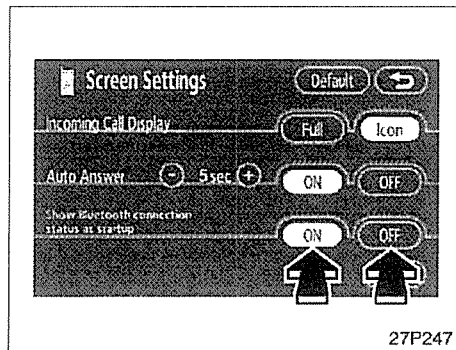


Touch the “ON” or “OFF” switch of Show Bluetooth connection status at startup.

 ● Initializing the settings
You can initialize the settings.

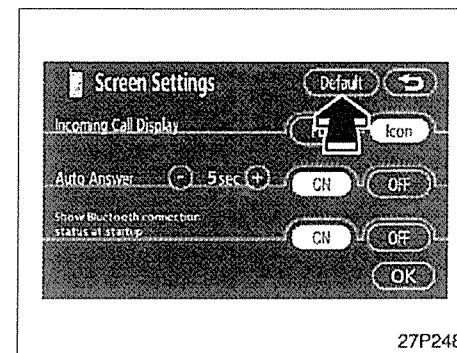


Touch the “Default” switch.

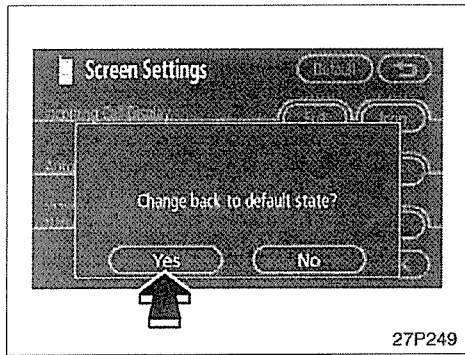 


Touch the "Yes" switch.

(iv) Setting the phone book

 You can register phone numbers in the phone book.

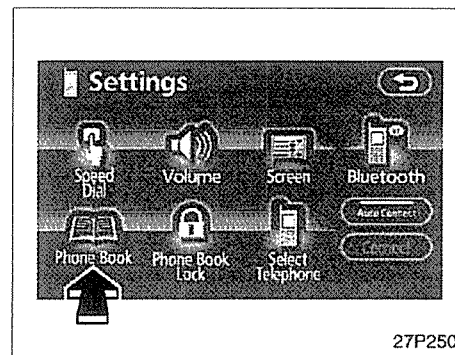

 Touch the "Phone Book" to display the "Phone Book Management" screen.

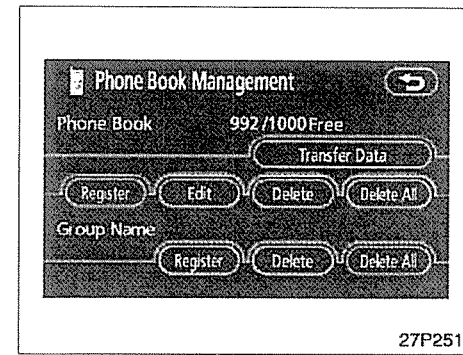


You can do the detailed settings of phone book.


● **Transferring a telephone number**

You can transfer the telephone numbers in your Bluetooth phone to the system. Up to 1000 person's data (up to 2 numbers a person) can be registered in the phone book.

 
Transfer it while the engine is running.

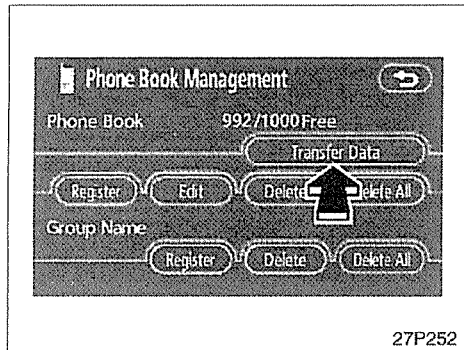

 
1. Touch the "Transfer Data" switch to display "Select Group" screen.

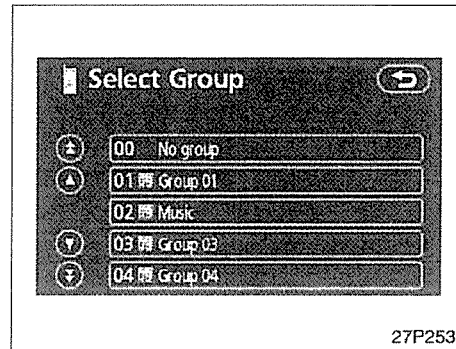

 2. Select the group you want to transfer the data to.

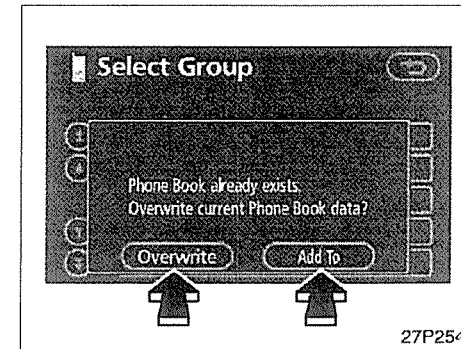

 
3. Touch the "Overwrite" or "Add To" switch.

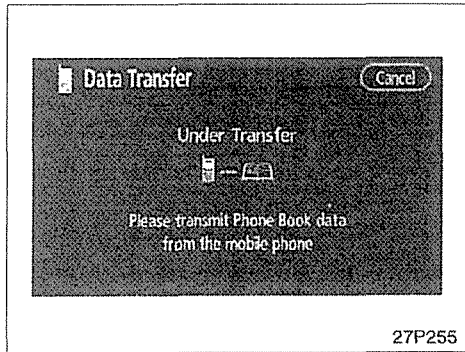

27P255


4. Transfer the phone book data to the system using the Bluetooth phone.

 This screen appears while transferring. To cancel it, touch the "Cancel" switch. If the transferring is interrupted on the way, the phone book data transferred until then can be memorized in the system.

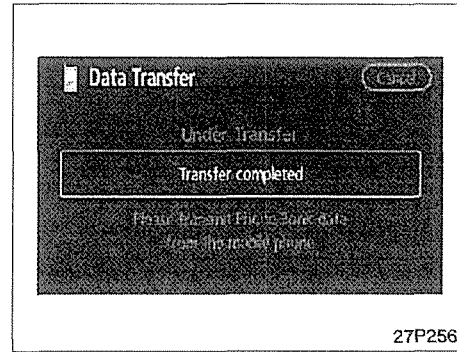

27P256

 
5. When this screen is displayed, the transfer is completed.

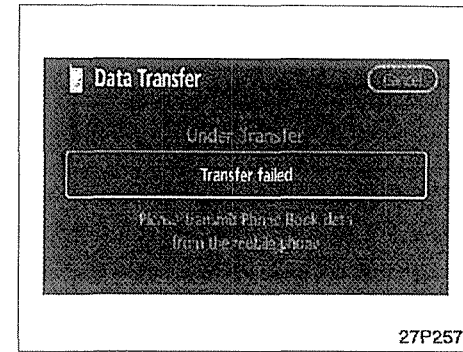


27P257

When this screen is displayed, try the transfer operation again.

 
● Registering the phone book data
You can register the phone book data.

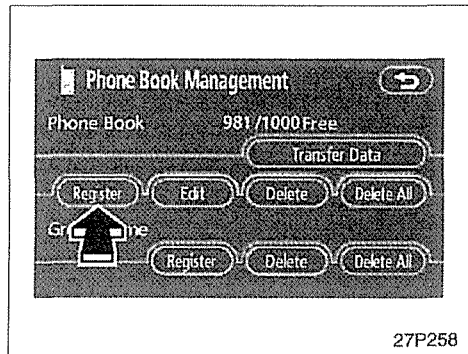

 1. Touch the "Register" switch.

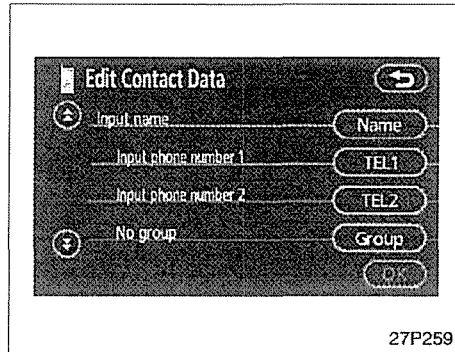

 
2. Touch the desired switch to edit the phone book.

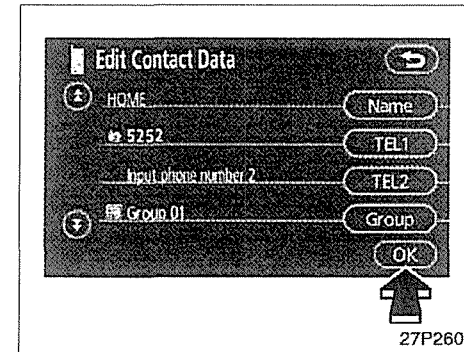


3. When you complete the edit, touch the "OK" switch.

● Editing the name

 When you do not input the name, the number is displayed.

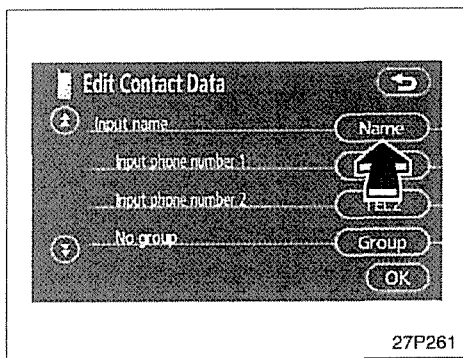

 
1. Touch the “Name” switch.

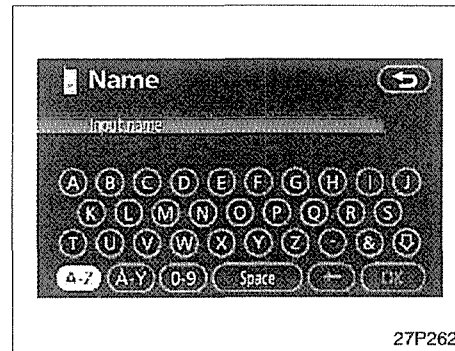


2. Use the software keyboard to input the name.

● Editing the phone number

 
You can register a phone number in “TEL1” and “TEL 2” separately. Up to 2 numbers a person can be registered.

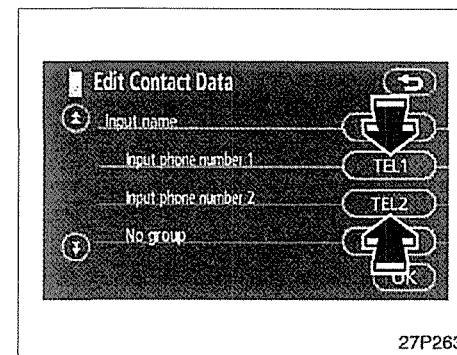

 1. Touch the “TEL 1” or “TEL 2” switch.

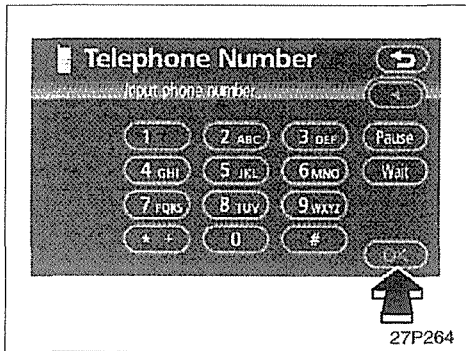

 2. Input the number and touch "OK".

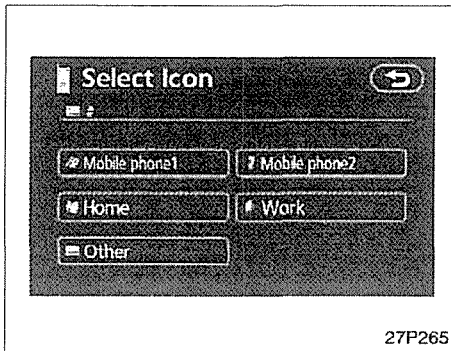


3. Select the desired icon.

• **Selecting the group**


You can set a group for a contact (for example: "Family", "Friends", "Office"...). It will then be easier for you to find this contact when needed, by using the group display.

You can select "No group" or "Group 01" to "Group 19".

 "No group" is displayed if you do not set the group.

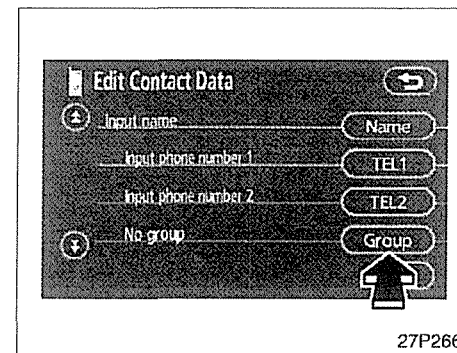

 
1. Touch the "Group" switch.

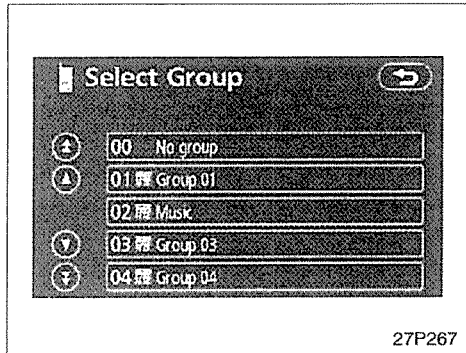


2. Select the desired group.

● **Setting the voice recognition**

 
You can set the voice recognition. Up to 20 numbers can be registered for the voice recognition.

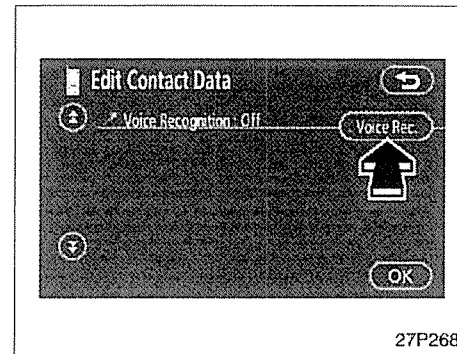

 1. Touch the "Voice Rec." switch.

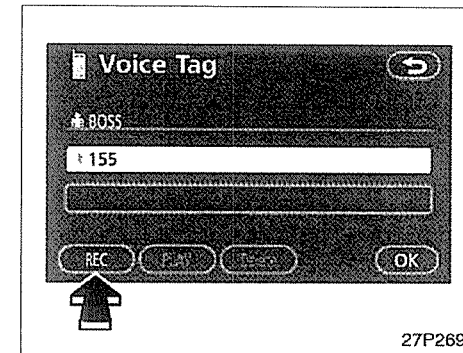

 
2. Select the phone number and touch the "REC" switch to record a voice-tag.

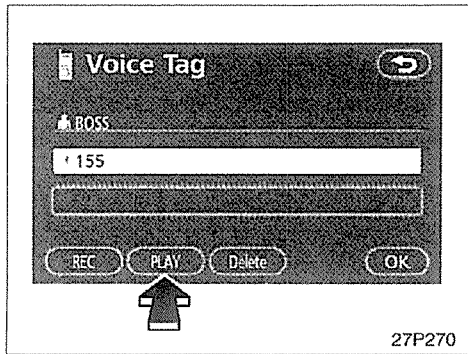


3. Touch the "PLAY" switch to play the voicetag.

If you want to delete it, touch the "Delete" switch and "OK".

 
• Adding data to the phone book
You can add data to the phone book.

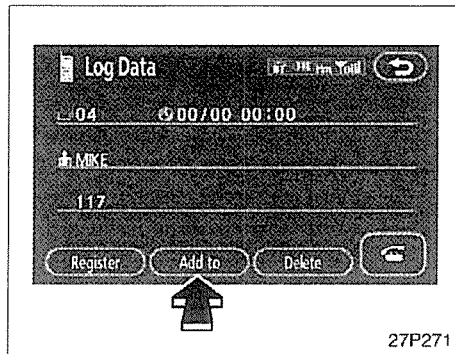

 1. Touch the "Add to" switch.

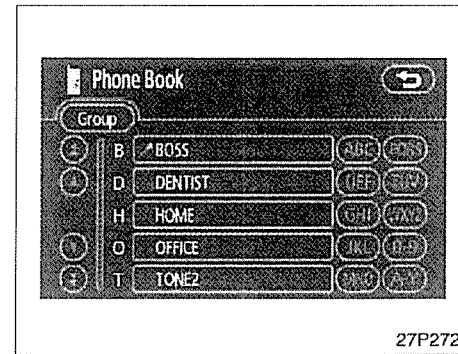


 2. Select the data you want to add log data to.

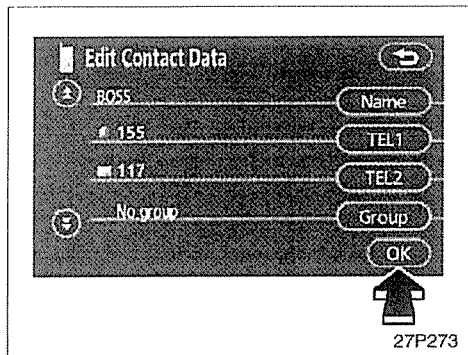


3. Confirm the added data on the screen and touch "OK".

 
● Editing the data
You can edit the registered data.

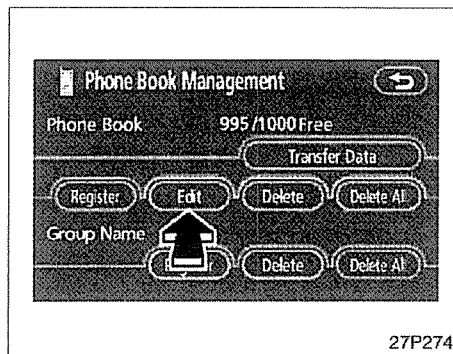

 1. Touch the "Edit" switch.

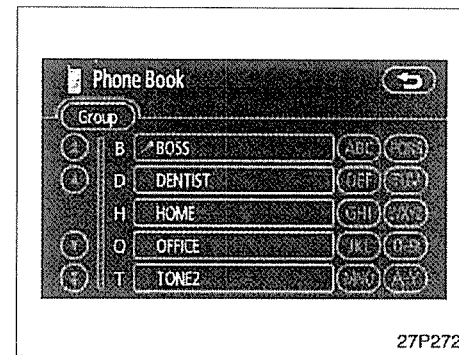


 2. Select the data you want to edit.

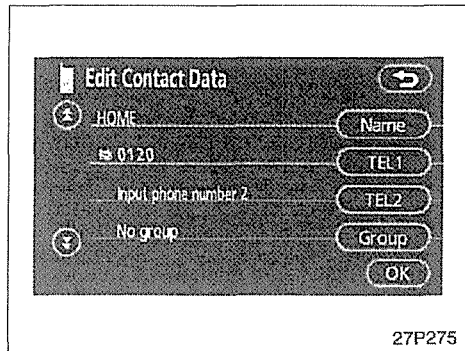

27P275

 3. Touch the desired switch.
When you edit the data, touch "OK".

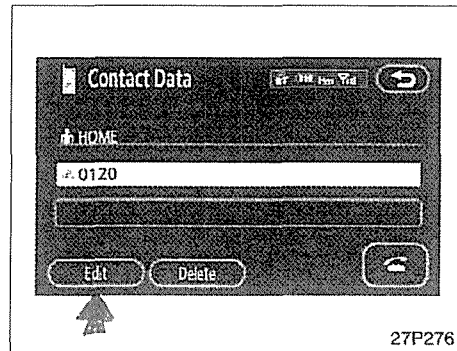


27P276

When you also touch the "Edit" switch on this screen, you can edit it.

● **Deleting the data**


You can delete the data.

 When you release your vehicle, delete all your data on the system.

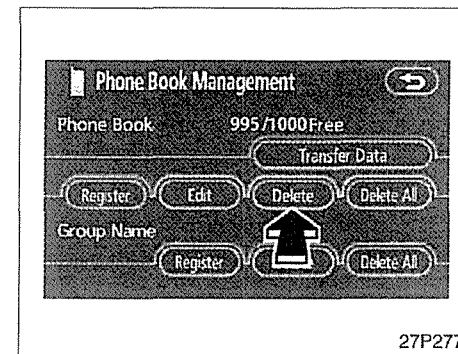


27P277

 1. Touch the "Delete" switch of "Phone Book".

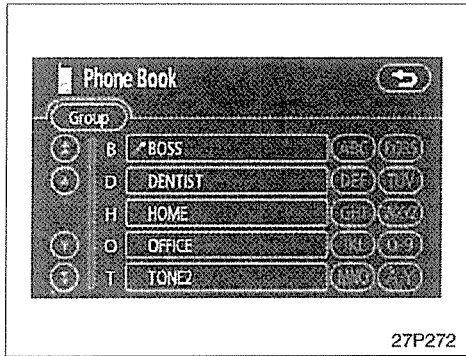

27P272

 
2. Touch the desired switch.

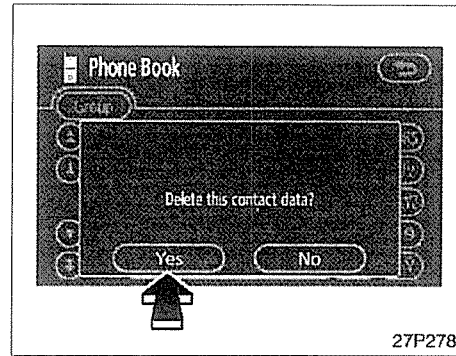

27P278

3. Touch the "Yes" switch.

 You can also delete it in the following way.

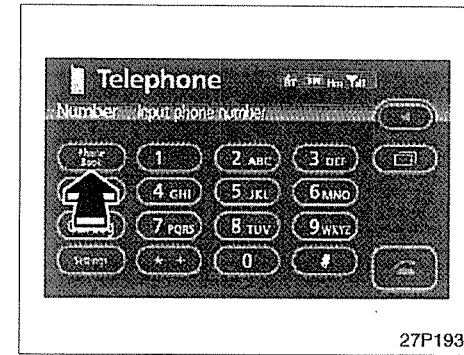

27P193

1. Touch the "Phone Book" switch.