PHONE OPERATION

Bluetooth[®] phones can be operated via the navigation system's screen. To display the hands-free operation screen, press the **&** button or the **&** switch on the steering wheel.

XThe screen design may be changed.



No.	Name	Function
1	The condition of Bluetooth [®] con- nection	 No connection Good An antenna for the Bluetooth[®] connection is built in the instrument panel. The condition of the Bluetooth[®] connection may deteriorate and the system may not function when a Bluetooth[®] phone is used in the following conditions and/or places: The cellular phone is obstructed by certain objects (such as when it is behind the seat or in the glove box and console box). The cellular phone touches or is covered with metal materials. Leave the Bluetooth[®] phone in a place where the condition of the Bluetooth[®] connection is good. When the cellular phone is not connected, "No Connect" is displayed.
2	The amount of battery charge left	Empty Full This is not displayed when the Bluetooth [®] is not connected. The amount displayed does not always correspond with the amount displayed on the cellular phone. The amount of battery charge left may not be displayed depending on the type of phone you have. This system does not have a charging function.
3	The receiving area	"Rm" is displayed when receiving in a roaming area. The receiving area may not be displayed depending on the type of phone you have.
4	The level of re- ception	Poor < Excellent The level of reception does not always correspond with the level dis- played on the cellular phone. The level of reception may not be dis- played depending on the phone you have. When the cellular phone is out of the service area or in a place inac- cessible by radio waves, "No Service" is displayed.
5	📞 button	Press to display the hands-free operation screen.

CONNECTING A Bluetooth® PHONE

1 Press the 📞 button or the 🖝 switch on the steering wheel.



 ${f 3}$ When this screen is displayed, input ${f 4}$ This screen will be displayed when the passcode displayed on the screen into the phone.



▶ When this screen is displayed, follow the guidance on the screen to try again.

Connect Bluetooth >			
Connecting from the navigation system			
Bluetooth device connection failed.			
Please check your Bluetooth device settings.			
Device Address : UUILEEDL3UDU			
Cancel			
US4002TI			

2 Touch "Yes" to register a phone.



registration is complete.

Connect Bluetooth			
Bluetooth device connection successful.			
Billetooth device connection successful.			
Audio : Connection Completed			
Cancel			
	LIS4001TL		

When the auto connection has failed or "Bluetooth* Power" is turned off, it is necessary to connect Bluetooth[®] manually.

1 Press the **C** button or the **G** switch on the steering wheel.



2 Touch "Connect Phone".



3 Touch the screen button corresponding to the desired phone connection.



5 When the connection is completed, this screen is displayed.



4 This screen is displayed.



A call can be made by inputting the phone number. This cannot be operated while driving.

1 Press the **C** button or the **G** switch on the steering wheel.



2 Touch the desired key to input the phone number.

Phone		BT1	\$1 T	iuti
Enter a phone number				
Messages	1	2 ABC	3 DEF	Contacts
Connect	4 сні	5 JKL	6 мно	Speed
Phone	7 PORS	8 TUV	9 WXYZ	Dials
6	*+	0	#	Call History
				LIG9194TCh

- Each time **equivalent** is touched, an input digit is deleted.
- **3** Touch or press the **a** switch on the steering wheel.

When a call is received, this screen is displayed with a sound.

1 Touch or press the switch on the steering wheel to talk on the phone.

Call	BT1	\$1 CIII	Yatil
Incoming C	ll.		
2	123456789		
Noimege			/
6		Ē.	-
		11	US3127TCa

To ref	use to receiv	e ti	he call:	Touch
8	or press the	-	switch	on the
steerin	a wheel.			

To adjust the volume of a received call: Touch "-" or "+", turn the "POW-ER/VOLUME" knob, or use the volume switch on the steering wheel.

PLAYING Bluetooth[®] AUDIO

The Bluetooth[®] audio system enables users to enjoy listening to music that is played on a portable player on the vehicle speakers via wireless communication.

This audio system supports Bluetooth[®], a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth[®] audio system will not function.


1 The quality of the Bluetooth® connection is indicated as follows:

谢 : An excellent connection to Bluetooth[®].

Indicates a bad connection to Bluetooth[®], resulting in possible deterioration of audio quality.



: No connection to Bluetooth[®].

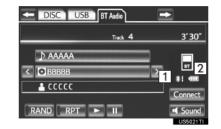

2 Indicates the amount of battery charge left.



Manually connect the portable player in accordance with the following procedure.

Touch "Connect".



3 When the connection is completed, this screen is displayed. It is now possible to use the portable player.

Connect Bluetooth		
Bluetooth de	vice connectio	n successful.
Audio : Connection Completed		
	Cancel	

2 Touch the desired portable player.



•FCC ID: BABFT0045A

CAUTION: Radio Frequency Radiation Exposure

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to

operate the equipment.