












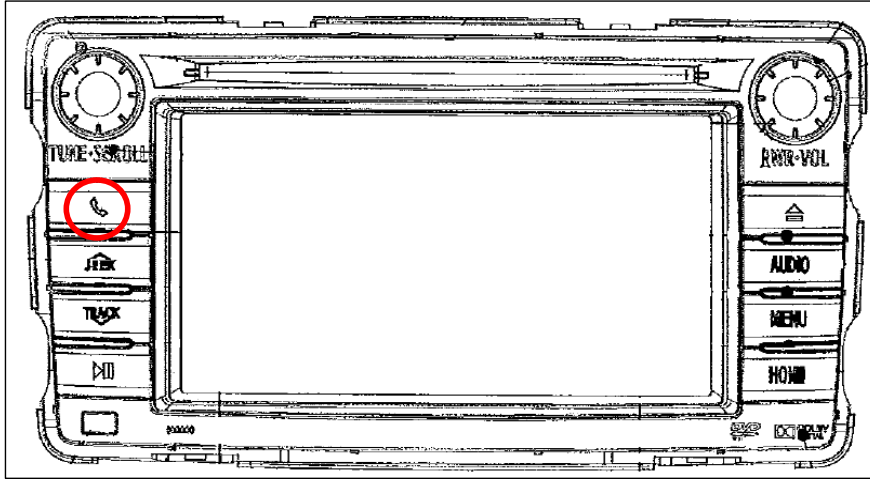




## PHONE OPERATION


Bluetooth® phones can be operated via the navigation system's screen. To display the hands-free operation screen, press the  button or the  switch on the steering wheel.




| No. | Name   | Function  |
|-----|--|---|
| 1   | The condition of Bluetooth® connection<br>Explanation of the icon                          |   <br>No connection ← → Good<br>An antenna for the Bluetooth® connection is built in the instrument panel. The condition of the Bluetooth® connection may deteriorate and the system may not function when a Bluetooth® phone is used in the following conditions and/or places: <ul style="list-style-type: none"> <li>• The cellular phone is obstructed by certain objects (such as when it is behind the seat or in the glove box and console box).</li> <li>• The cellular phone touches or is covered with metal materials.</li> </ul> Leave the Bluetooth® phone in a place where the condition of the Bluetooth® connection is good.<br>When the cellular phone is not connected, "No Connect" is displayed. |
| 2   | The amount of battery charge left  |   <br>Empty ← → Full<br>This is not displayed when the Bluetooth® is not connected.<br>The amount displayed does not always correspond with the amount displayed on the cellular phone. The amount of battery charge left may not be displayed depending on the type of phone you have.<br>This system does not have a charging function.  |
| 3   | The receiving area   | "Rm" is displayed when receiving in a roaming area.<br>The receiving area may not be displayed depending on the type of phone you have.   |
| 4   | The level of reception   |    <br>Poor ← → Excellent<br>The level of reception does not always correspond with the level displayed on the cellular phone. The level of reception may not be displayed depending on the phone you have.<br>When the cellular phone is out of the service area or in a place inaccessible by radio waves, "No Service" is displayed.   |
| 5   |  button | Press to display the hands-free operation screen.   |

## CONNECTING A Bluetooth® PHONE

- 1 Press the  button or the  switch on the steering wheel.
- 2 Touch “Yes” to register a phone.

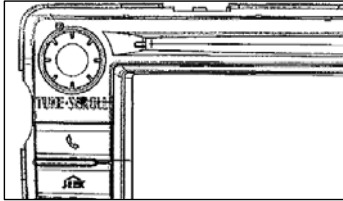

- 3 When this screen is displayed, input the passcode displayed on the screen into the phone.
- 4 This screen will be displayed when registration is complete.

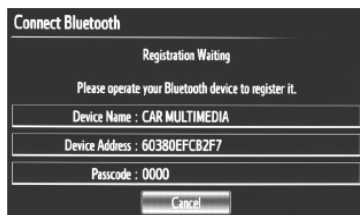

※The screen design may be changed.

US3065TC





US4001TI


- ▶ When this screen is displayed, follow the guidance on the screen to try again.



US4002TI

When the auto connection has failed or “Bluetooth\* Power” is turned off, it is necessary to connect Bluetooth® manually.

- 1 Press the  button or the  switch on the steering wheel.

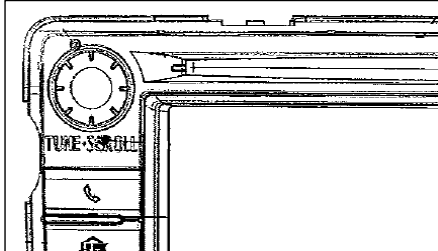


- 2 Touch “Connect Phone”.




- 3 Touch the screen button corresponding to the desired phone connection.



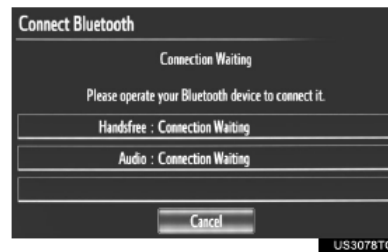

- 4 This screen is displayed.

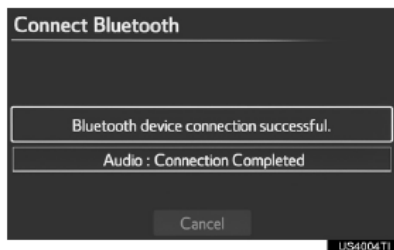


- 5 When the connection is completed, this screen is displayed.




A call can be made by inputting the phone number.  
This cannot be operated while driving.

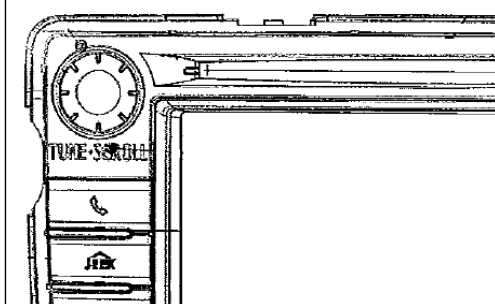

- 1 Press the  button or the  switch on the steering wheel.





- 2 Touch the desired key to input the phone number.




- Each time  is touched, an input digit is deleted.



- 3 Touch  or press the  switch on the steering wheel.

When a call is received, this screen is displayed with a sound.

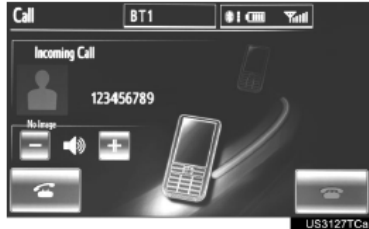- 1 Touch  or press the  switch on the steering wheel to talk on the phone.



**To refuse to receive the call:** Touch


 or press the  switch on the steering wheel.

**To adjust the volume of a received call:** Touch “-” or “+”, turn the “POWER/VOLUME” knob, or use the volume switch on the steering wheel.


## PLAYING Bluetooth® AUDIO


The Bluetooth® audio system enables users to enjoy listening to music that is played on a portable player on the vehicle speakers via wireless communication.


This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.

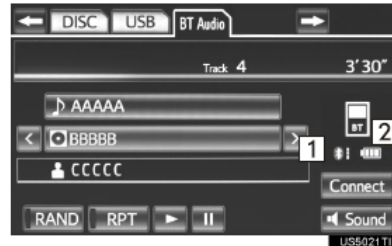

1 The quality of the Bluetooth® connection is indicated as follows:

: An excellent connection to Bluetooth®.

: Indicates a bad connection to Bluetooth®, resulting in possible deterioration of audio quality.


: No connection to Bluetooth®.

2 Indicates the amount of battery charge left.



Manually connect the portable player in accordance with the following procedure.


**1 Touch “Connect”.**

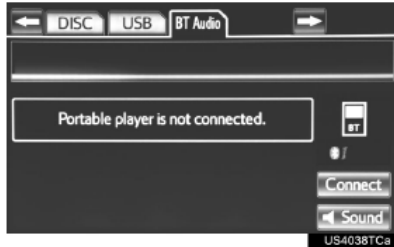

**2 Touch the desired portable player.**



**3 When the connection is completed, this screen is displayed. It is now possible to use the portable player.**

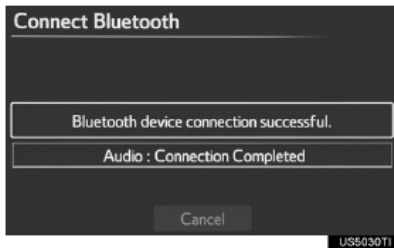

FCC ID: BABFT0065A

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

**CAUTION: Radio Frequency Radiation Exposure**  
This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC WARNING**  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.