
TN0040A Operation Manual

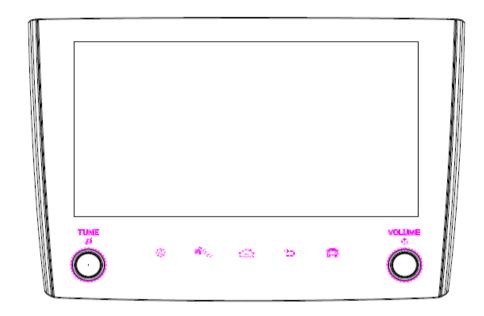


Model name	Car Audio
Model No	TN0040A

Index	Page
1-Specification of the EUT	2P
2-Button Function Spec	3P
3-Radio operation procedure	4P
4-Operating manual (Bluetooth/Handsfree)	5P
5-FCC Operating manual Requirement	6P

1-Specification of the EUT

Equipment name	Car Audio	
Model name	TN0040A	
Brand	ISUZU	
FCC ID	BABTN0040A	
IC Number	-	
Purpose of the equipment	Vehicle instllation	
Function	Broadcast radio receiver: AM/FM/RDS/DAB Bluetooth: Hands Free and Audio WiFi: For Wireless Carplay/AndroidAuto GNSS: GPS, Galileo, GLONASS, QZSS	
RATED VOLTAGE	12.0V (10.5~16.0V) - ground	
LOAD IMPEDANCE	4Ω	
BACK UP CURRENT	1mA or less	
RATED CURRENT	1.98A or less (Vcc=13.2V, 0.5W output)	
AM TUNING RANGE	522 - 1710 kHz (9kHz step)	
FM TUNING RANGE	87.5 - 108 MHz (100kHz step)	
DAB TUNING RANGE	174.928 - 239.200 MHz	
Rating of usage environment	 - 30 to +65 ° C (Perfomance assured temperature range) 	
Size of Equipmet	D 178.15mm × W 253.89mm × H 174.49mm	
Weghit of Equipmet	2050g	
Software version	_	
Hardware version	_	

2-Button Function Spec

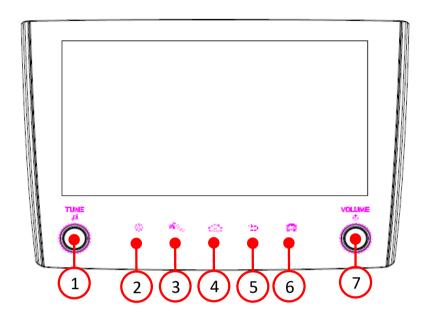

■AUDIO controls

Button No.	Button Name Operation		
1	TUNE/MODE	Push knob: Transition to Mode selection screen Rotate knob: Jump between preset channels	
2	NAVI	Transition to MAP screen	
3	TALK	Short Push: Transition to Dial screen Long Push: Transition to Bluetooth pairing screen	
4	HOME	Transition to home screen	
⑤	BACK	Transition to previous screen	
6	VEHICLE	Transition to vehicle information screen.	
⑦	VOLUME/POWER	Push knob: Audio ON/OFF Rotate knob to the right: Adjust volume by +1 Rotate knob to the left: Adjust volume by -1	

3-Radio operation procedure

【操作手順】[Operation procedure]

①起動 (ACC-ON)

ACC-ON後、ISUZU画面が表示された事を確認。

After the ACC-ON, confirm that Isuzu screen is displayed.



②数秒後に"CAUTION"画面に遷移します。 The screen is changed to "CAUTION" screen after a few seconds. *初回のACC-ON時はやや時間を要します。

Note: It takes a little longer for the first time of ACC-ON.



③数秒後に"Continue"ボタンを押して、MENU画面に遷移させます。 Press the "Continue" button on the face panel after a few seconds to move MENU screen.





Menu Screen Display

④POWERボタンを押す。

画面内のラジオモードウィンドウを押すと、"FM1"画面に遷移します。

Press the POWER button.

When the Radio Mode Window on the screen is pressed, "FM1" screen is displayed.



⑤下記画面に遷移したら、"<"釦 若しくは、">"釦を押下してください。 これで、SEEKが始まります。

Confirm that the screen is changed as below, Please push down the "<"button or ">"button or ">"button.

This will start to SEEK.



Push this button

※AM/DABモードも同様の手順です。

XSame as AM/DAB mode.

4-Operating manual (Bluetooth/Handsfree)

【操作手順】[Operation procedure]

①起動 (ACC-ON)

ACC-ON後、ISUZU画が表示された事を確認。

After the ACC-ON, confirm that Isuzu screen is displayed.




②数秒後に"CAUTION"画面に遷移します。 The screen is changed to "CAUTION" screen after a few seconds. *初回のACC-ON時はやや時間を要します。

Note: It takes a little longer for the first time of ACC-ON.



③数秒後に"Continue"ボタンを押して、MENU画面に遷移させます。 Press the "Continue" button on the face panel after a few seconds

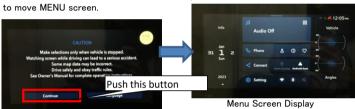

④"Setting"ボタンを押して、SETTINGS画面に遷移させます。

Please press the "Setting" button on the face panel to move to Settings screen



⑤"Settings"画面に遷移することを確認し、画面上の"Bluetooth"釦を選択。 Confirm if "Settings" screen is displayed, select the "Bluetooth" button on the display.



⑥画面の"Add Device"釦を押下してください。

Please press the "Add Device" button of the screen



⑦画面の"Search Device"釦を押下してください。 Please press the "Search Device" button of the screen



⑧下記画面に遷移したらBluetooth端末(iPhone、iPodなど)をペアリング モードに設定してください。

Confirm if screen is changed as below, Please set iPhone or iPod in pairing mode.



XDisplays when you have more than one pairing equipment

※複数のペアリング機器がある場合の表示

⑨接続したiPhone又はiPodを選択します。

Select the iPhone or iPod to connect.



※ 電話機の表示にしたがって操作してください

X Operate the phone after the message on the screen

⑩完了すれば"Connection Completed"の画面になります。 'Connection Completed" is displayed if completed.



5-FCC Operating manual Requirement

CAUT	ION.	Radio	Frequency	Radiation	Exposure
$\cup \cap \cup$ i	IOIN.	I (auto	I I GUUGIIGV	i laulation	

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING

Changes or modifications not expressly approved by the party responsible for compliance
could void the user's authority to operate the equipment.