

Transmitter Tune-up procedures;

Procedure 1: Supply Voltage: 6V DC +/- 5%

1. Select RF Channel #5(75.570MHZ)
2. Adjust VC1 and tune-up 75.570MHZ +/- 200HZ(Connect Frequency counter to the RF-output terminal.)
3. Adjust T1(RF-transformer) maximum Power with RF-power meter.
4. Check RF deviation with Deviation meter.

Procedure 2: Power supply 1.5V AA x 4 Alkaline Battery (6V)

1. Hold Transmitter with Hand and adjust T1 for maximum RF output.
2. Check RF frequency
3. Check RF deviation
4. Check RF spurious emissions.