



Attaching the Ferrite Core to the Network Cable

The ferrite core must be attached to the network cable.


Attach the ferrite core to the network cable before you connect the network cable to this machine.

 
 
 
 
 
For the procedure for connecting the network cable to this machine, see the User Guide.

 
 
 
CAUTION

Network cable with a ferrite core must be used for RF interference suppression.

- 1** Make a loop about 5 cm (2 inches) from this machine end of the network cable
(1). Attach the ferrite core by enclosing the loop inside it.

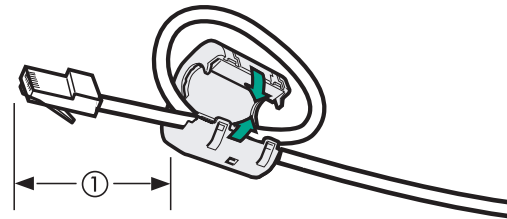





Copyright © 2009
Printed in China
M016-8621
GB  EN 

