


# RFID PCB exchange manual


## Left Cover

1. Open the left cover.
2. Remove the waste toner bottle.

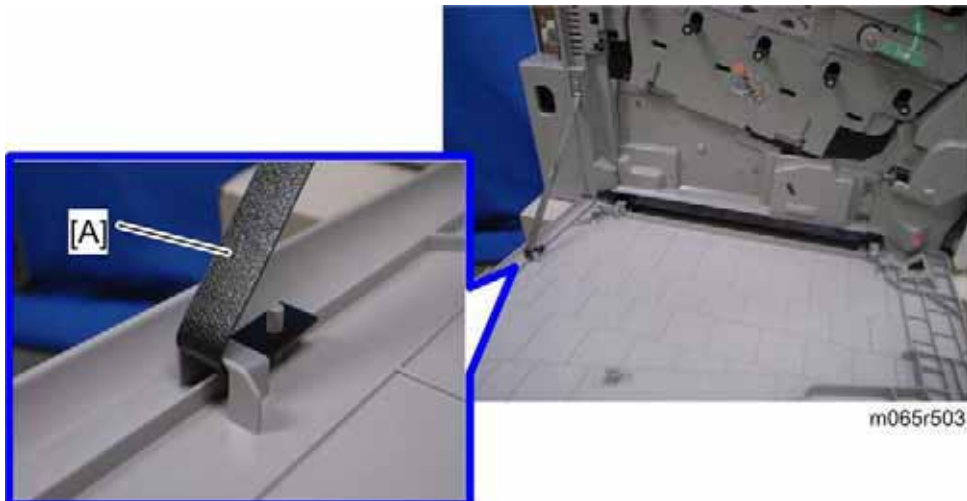

3. Release the belt [A].

4

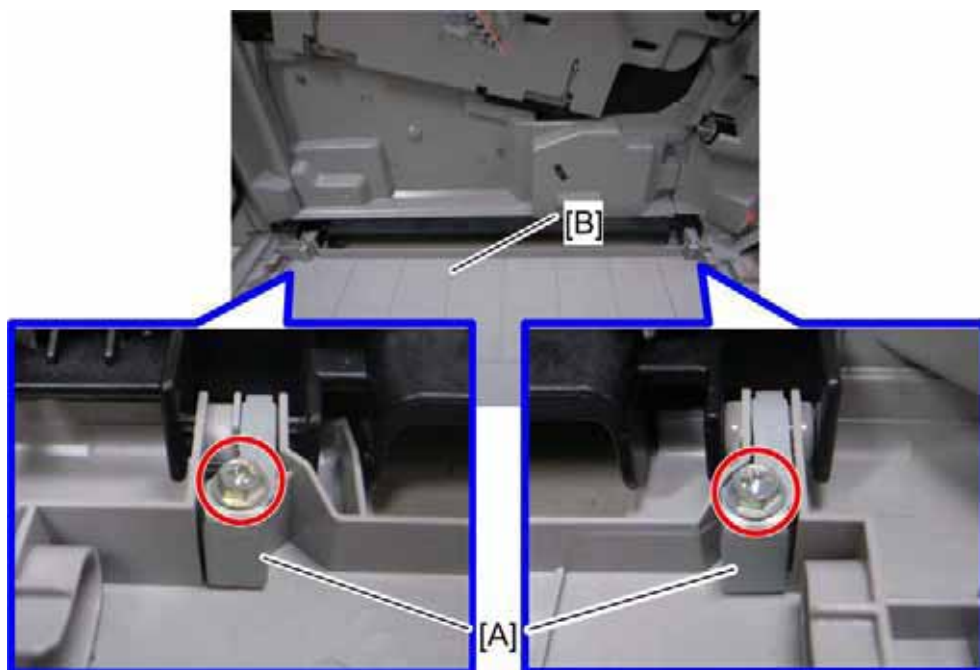

m065r504

4. Remove the two brackets [A] (⚙️ x 2)

5. Left cover [B]

## Right Cover




m065r505

1. Open the duplex unit [A].



2. Right cover [A] (🔩 x 1)


## Rear Cover

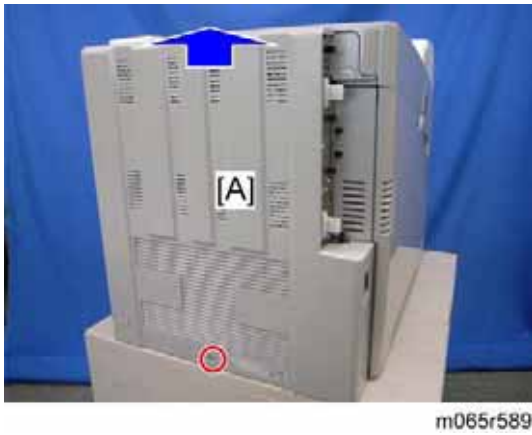

1. Rear cover [A] (🔩 x 1)

## When Reinstalling the Rear Cover

---

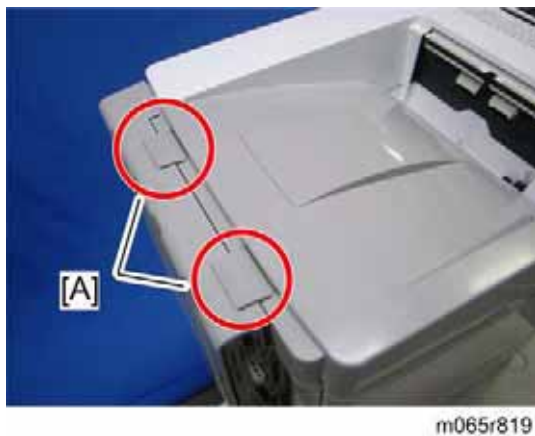

4

### ↓ Note

- Make sure that these hinge covers [A] can be moved smoothly (up and down) after installing the rear cover. If these hinge covers do not move smoothly, try installing the rear cover again.

---

## Top Cover

---

1. Right cover (☛ p.78)
2. Rear cover (☛ p.79)




3. Open the upper cover [A].



4. Top cover [A] (🔩 x 3)

4

### When Reinstalling the Top Cover

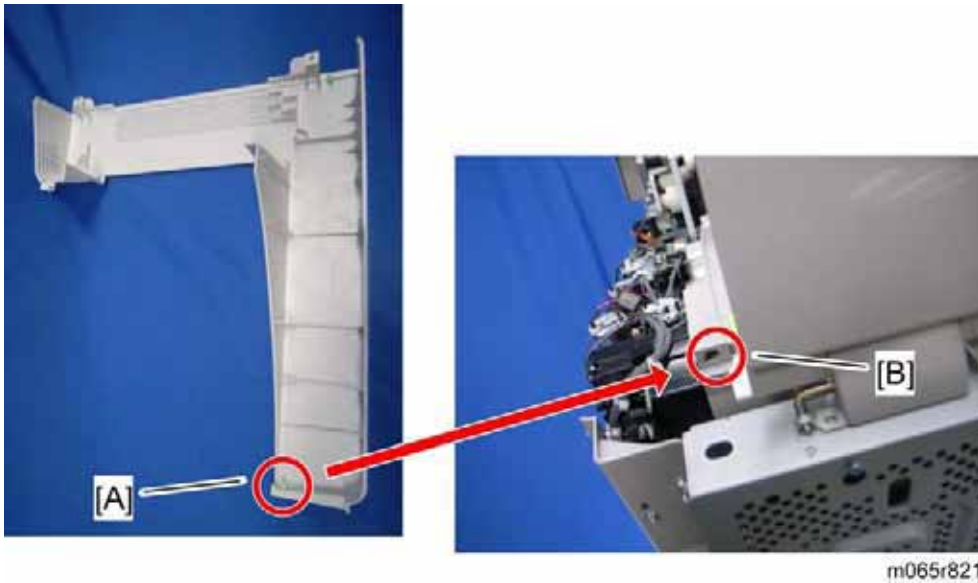

#### ⚠ Note

- Make sure that the hook [A] is installed in the hole [B] when reinstalling the top cover.

### Operation Panel

1. Open the duplex unit (☞ p.78 "Right Cover").


4

---

## RFID CPU Board

---

1. Right cover (☛ p.78)
2. Rear cover (☛ p.79)
3. Top cover (☛ p.80)

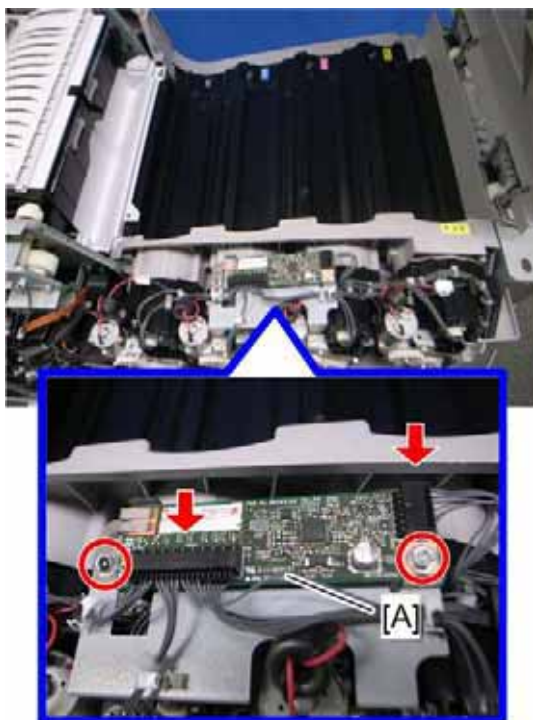

m065r713


4. RFID CPU Board [A] (🔧 x 2, 📏 x 2)

## RFID Board

1. Right cover (🔧 p.78)
2. Rear cover (🔧 p.79)
3. Top cover (🔧 p.80)



m065r738

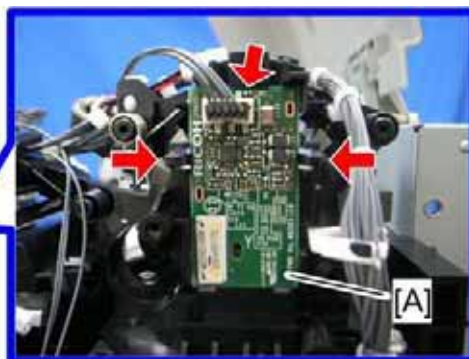

4

4. RFID board [A] (🔧 x 1, hooks)