

**A1403**

Exterior Photo 1

Front - Bottom side

Home button, Front camera



A1403

Exterior Photo 2

Front - Right side

Volume up/down button, Mute speaker slide switch



**A1403**

Exterior Photo 3

Front - Top side

Power/Lock button, Headphone jack



A1403

Exterior Photo 4

Front - Left side



A1403

Exterior Photo 5

Back - Bottom side

30 pin I/O connector, Speaker, Regulatory labels



A1403

Exterior Photo 6

Back - Left side

SIM card tray



**A1403**

Exterior Photo 7

Back - Top side  
Power/Lock button, Headphone jack,  
Rear camera



A1403

Exterior Photo 8

Back - Right side

Volume button, Mute speaker slide switch

