

Tuning Procedure for Node C1937 and Node M1937

There is no hardware tuning capability allowed for the installer/user. Setup of the system is done strictly via software selection of channels to be used and maximum rf output power or gain of the system.

At the factory the system is checked for gain and power output but no hardware tuning is required.