


APPENDIX G

: LABEL INFORMATION

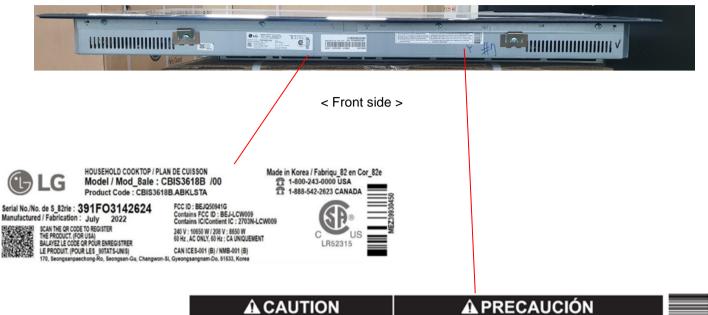




Service personnel: When disassembling upper parts of cooktop from base for service, tilt upper parts up slightly and disconnect wire harnesses before continuing disassembly. X To be disassembled by authorized service X El desmontaje solo deberá ser realizado por personal personnel only. de servicio autorizado.







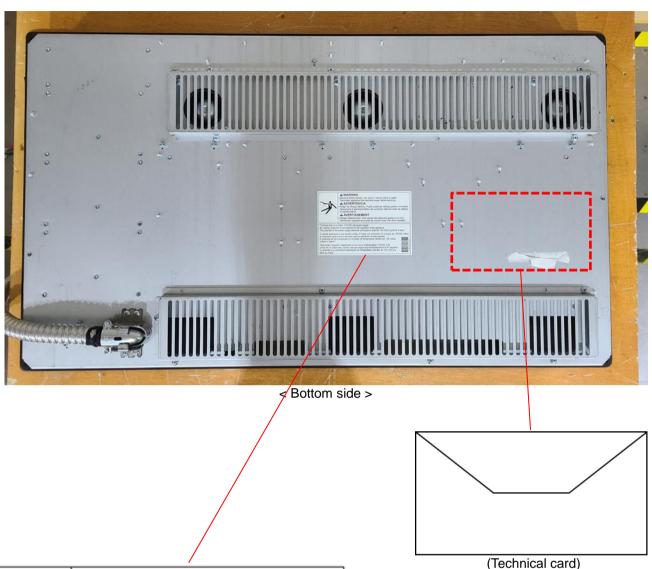

▲ WARNING

Electrical Shock Hazard, Can result in serious injury or death, Disconnect appliance from electrical power before servicing.

A ADVERTENCIA

Peligro de choque eléctrico. Puede ocasionar haridas graves o la muerte. Desconecte el electrodoméstico del suministro eléctrico antes de realizar el mantenimiento.

A AVERTISSEMENT

Danger d'électrocution. Peut causer des blessures graves ou la mort. Débrancher l'appareil de la prise de courant avant d'en faire l'entretien.

"Connect only to a 3-wire, 120/240 volt power supply;

the neutral conductor is not required for the operation of the appliance.

The potential at the power supply electrical connections shall be 150 volts to ground or less."

"Conecte solamente a una fuente 3-Hilos, 2-Fases con sumistro de energía de 120/240 voltios. El conductor neutro no es requerido para la operación de este aparato.

El potencial de las conexiones en la fuente de alimentación deberá ser 150 voltios a tierra o menor"

"Raccordez l'appareil uniquement à une source d'alimentation 120/240 volts à trois fils ; le conducteur neutre n'est pas requis pour le fonctionnement de l'appareil. Le potentiel aux connexions électriques de l'alimentation doit être de 150 volts à la terre ou moins,







< Box label >