

Model : EX-00BT4

TRANSMITTER PROGRAMMING GUIDE

The transmitters included with the remote system have been pre-programmed at the factory, with each button pre-assigned to control a specific function of the system. Although the remote system in the vehicle has a 5-channel receiver, depending on the model, the transmitters included with the system are capable of transmitting 14 distinct signals. This allows you to program each transmitter to more than one vehicle in two car families, and also allows you to change which button(s) control certain functions of the system.

(Example: Transmitter channel 5 can be programmed to activate Receiver channel 2.) Refer to the chart below for access to each of the transmitter channels, and for the standard factory button assignments.

TRANSMITTER CHANNEL	RECEIVER CHANNEL	SYSTEM RECEIVER FUNCTION
1	1	Lock and Arm Alarm Remote Emergency Panic
2	2	Unlock and Disarm Alarm
3	3	Pulsed Output for Accessories
4	4	Switched Output for Accessories
3 & 4	5	Switched Output for Accessories

- If you have additional transmitters (up to 4) that need to be programmed, repeat step 12 for each transmitter.
- Flip the valet switch on then off.
- The dash LED will flash four times, and the sounding device will beep four times, indicating the system is ready to accept programming for receiver channel 4.
- Press and hold the Option 2 transmitter button (s) until the sounding device emits a long beep, indicating the signal has been stored into memory.
- If you have additional transmitters (up to 4) that need to be programmed, repeat step 16 for each transmitter.
- Flip the valet switch on then off.
- The dash LED will flash five times and the sounding device will beep five times, indicating the system is ready to accept programming for receiver channel 5.
- Press and hold Option 1+ Option 2 transmitter buttons until the sounding device emits a long beep, indicating the signal has been stored into memory.
- If you have additional transmitters (up to 4) that need to be programmed, repeat step 20 for each transmitter.
- Turn the ignition key off. The sounding device will emit one short beep followed by one long beep indicating the system has terminated the program mode.

TRANSMITTER BATTERY REPLACEMENT

You will notice a decrease in transmitter range as the battery condition deteriorates. Transmitter battery replacement is recommended at least every 10 to 12 months, depending upon how frequently the transmitter is used.

The transmitter has a small red LED built into the case. This LED can be used to indicate battery condition. If the LED does not illuminate, then the battery is discharged, and must be replaced.

PROGRAMMING THE TRANSMITTERS

It is important to remember that during programming, each individual step of the procedure must be executed within 15 seconds of the previous step.

When the 15 second time limit is allowed to expire, the system will automatically terminate the programming mode. This is indicated by a long chirp from the siren.


Additionally, the system will store codes from up to four different transmitters. If a 5th transmitter is programmed to any receiver channel, then the first transmitter programmed to that channel will be erased from the system's memory.

To Program replacement or additional transmitters:

- Enter the vehicle, and turn the Ignition key to the " on " position.
- Flip the valet switch on - off - on - off - on - then off.
- The dash LED will flash one time, and the sounding device will beep one time, indicating the system is ready to accept programming for receiver channel 1.
- Press and hold the Lock button until the sounding device emits a long beep, indicating the signal has been stored into memory.
- If you have additional transmitters (up to 4) that need to be programmed, repeat step 4 for each transmitter.
- Flip the valet switch on then off.
- The dash LED will flash two times, and the sounding device will beep two times, indicating the system is ready to accept programming for receiver channel 2.
- Press and hold the unlock button until the sounding device emits a long beep, indicating the signal has been stored into memory.
- If you have additional transmitters (up to 4) that need to be programmed, repeat step 8 for each transmitter.
- Flip the valet switch on then off.
- The dash LED will flash three times, and the sounding device will beep three times, indicating the system is ready to accept programming for receiver channel 3.
- Press and hold the Option 1 transmitter button (s) until the sounding device emits a long beep, indicating the signal has been stored into memory.

To replace the transmitter battery, proceed as follows:

- Remove the small phillips head screws from the bottom cover of the transmitter.
- Carefully unsnap the top cover of the transmitter from the bottom cover.
- Remove the discharged battery, making note of the location of the + and - contacts, and replace with a new type GP 23A 12 volt battery.
- Replace the transmitter cover, taking care not to damage the LED or switches on the circuit board, and secure with the small phillips head screw.

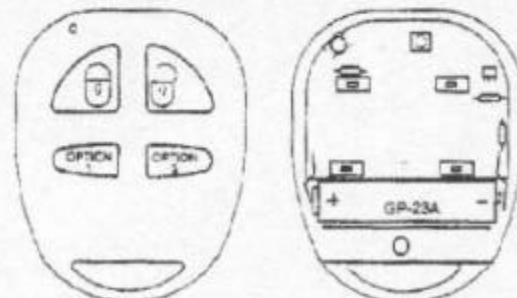

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference; and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.