

## 4.5 Back View of the WebPAD



- Battery Connector Cover
- Battery Pack
- **8** Battery Latch
- Battery Release Switch
- 5IDE CompactFlash Card Slot Cover

**Label Location** 



- Backup Battery and RTC Battery Cover
- 2 Back Stand / Handle