

The Pokémon Company

Nintendo

Poké Ball™ Plus Instruction Manual

FXA-HAC-A-PLS-USZ-CD

Please read these Instructions and the Nintendo Switch Health and Safety information before using the Poké Ball Plus. If you use the Poké Ball Plus with the Pokémon GO app, please read the manuals for your smart device and the Pokémon GO application. If this product will be used by young children, these should be read and explained to them by an adult.

Health and Safety Information

⚠ WARNING - BATTERY LEAKAGE

The Poké Ball Plus accessory contains a rechargeable lithium ion battery. Leakage of ingredients contained within the battery, or the combustion products of the ingredients, can cause personal injury as well as damage to your Poké Ball Plus. If battery leakage occurs, avoid contact with skin. If contact occurs, immediately wash thoroughly with soap and water. If liquid leaking from a battery comes into contact with your eyes, immediately flush thoroughly with water and see a doctor. To avoid battery leakage:

- Do not expose battery to excessive physical shock, vibration, or liquids.
- Do not disassemble, attempt to repair, or deform the battery.
- Do not dispose of battery in a fire.
- Do not touch the terminals of the battery or cause a short between the terminals with a metal object.

⚠ WARNING - RADIO FREQUENCY INTERFERENCE

The accessory can emit radio waves that can affect the operation of nearby electronics, including cardiac pacemakers.

- Do not operate this accessory within 9 inches of a pacemaker.
- If you have a pacemaker or other implanted medical device, do not use this accessory without first consulting your doctor or the manufacturer of your medical device.
- Observe and follow all regulations and rules regarding use of wireless devices in locations such as hospitals, airports, and on board aircraft. Operation in those locations may interfere with or cause malfunctions of equipment, with resulting injuries to persons or damage to property.

IMPORTANT: To temporarily disable wireless communication such as in a hospital or airplane, turn off the *Bluetooth*® function on your smart device. See the instructions for your smart device for more information about disabling *Bluetooth* or wireless communications.

⚠ WARNING - GENERAL

- Do not use this accessory while riding a bike or operating a vehicle. When using this accessory while walking, be aware of your surroundings.
- Do not travel while allowing Poké Ball Plus to dangle by its ring or strap (for example, by attaching it to a bag).
- Avoid dropping and throwing the accessory.
- Do not use this product while charging.
- Make sure to charge the battery at least once every six months.

Wearing the Poké Ball Plus

Put on and tighten the wrist strap. Wear the ring on the finger that fits best. Hold Poké Ball Plus securely. Do not let go of it. Allow adequate room around you during gameplay.

How to Use


Charge and pair the accessory before using it for the first time using one of the following options:

How to Charge

Option 1: Connect the USB charging cable as shown in the diagram below. The Nintendo Switch dock should be connected using the Nintendo Switch AC adapter as usual.

Option 2: Connect the accessory directly to the Nintendo Switch AC adapter (HAC-002).

Option 3: Charge the accessory using the Nintendo USB AC Adapter (CLV-003).

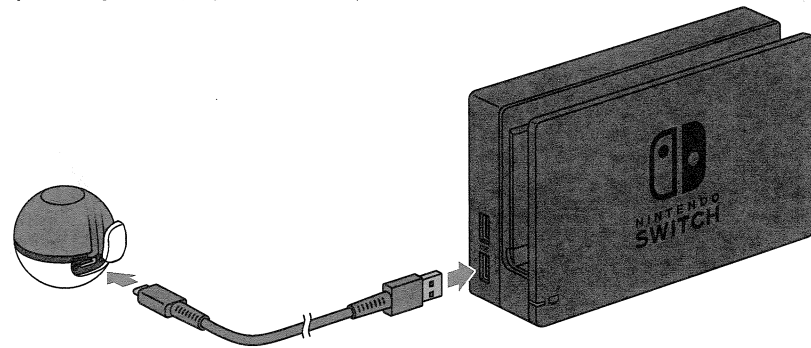

How to Pair

To pair Poké Ball Plus to a compatible software title, follow the on-screen instructions provided in the software.

HARDWARE PRECAUTIONS AND MAINTENANCE

- Do not disassemble or try to repair Poké Ball Plus. Doing so may damage it.
- Do not spill liquids on Poké Ball Plus. If liquids get into Poké Ball Plus, do not charge the device. Contact Nintendo customer service for further instructions.
- If you have questions or experience problems with Poké Ball Plus, please try our website at support.nintendo.com/pokeballplus.
- If the outside of the Poké Ball Plus comes into contact with liquids, wipe clean with a soft, dry cloth. Do not use cleaning agents such as thinner, benzene, or alcohol.

IMPORTANT BATTERY GUIDELINES

To minimize the risk of damage to Poké Ball Plus, when recharging the battery, use only the included USB charging cable (HAC-010) or the Nintendo Switch AC Adapter (HAC-002).

FCC AND ISED INFORMATION

For FCC and ISED information, visit support.nintendo.com/switch/setup

This device complies with Part 15 of the FCC Rules and ISED's license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This information is published on the web. As for the way to access to this information, please see “FCC and ISED Information” on the Instruction manual.

FCC and ISED Information

Pokeball plus

This device complies with Part 15 of the FCC Rules and ISED's RSS Standards. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

Do not remove tag.

FCC ID: BKEM, IC: 4360A-M

This equipment complies with FCC/ISED radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption rate (SAR).

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC Rules and the Canadian ICES-003 Class B specifications. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician or visit Nintendo Consumer Service at support.nintendo.com.