

1	Progress bar: it is used to view video playing progress. Dragging it can fast reverse/forward the video.
2	Volume: touch to decrease/increase the volume.
3	Touch to add the current point to be a bookmark.
4	Touch to set the screen brightness.
5	Touch to play the previous/next video. Long press to fast reverse/forward the current video.
6	Play/Pause: touch to pause/ resume the normal play.

7	Touch to play video in different size.
8	Touch to return the previous directory.
9	Touch to show sub menu which includes Delete Bookmark and Play from beginning, Delete bookmark, Play mode, Help and Return.

 
To hide/show the toolbar, please touch the screen centre directly.

**Note:** If a bookmark is set, then, then if a movie had not been played completely last time, the tablet will remember the pause point. User can select whether play this movie from the pause point next time. On the video file list, long pressing a file can popup the file delete frame, on which user can select whether delete the selected file.

## > Music



From a Home or All Apps screen, touch the Music icon to enter the music file listing interface shown below:

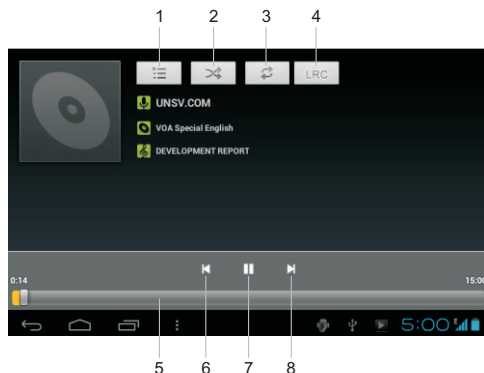

Icons in the tool bar shown on the above interface have functions shown below:

1	Touch to popup the music list
2	Touch to "turn on /off shuffle"
3	Touch to set the song repeat mode to repeat off, repeating all songs, repeating current song.
4	Touch to popup lrc.
5	Progress bar: it is used to view video playing progress. Dragging it can fast reverse/forward the video.

1	Touch to sort song by singer.
2	Touch to sort song by album.
3	Touch to list all music files on screen.
4	Touch to check latest add songs.


Drag your finger on the screen up and down to view the list and touch any one to enter audio playing interface like the below:

6	Touch once fast reverse the current song to begin, fast touch twice to play the previous song.
7	Play/Pause: touch to pause/ resume the normal play.
8	Long press to fast forward the current song, short touch to play the next song


## > Gallery



 From a Home or All Apps screen, touch the Gallery icon, it is used for you to view photo files in your device. you can also download another APK program to view photos from market or other ways. The photo play interface is shown as the below:

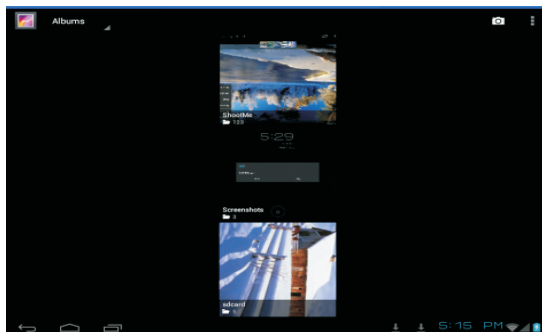

 Touch icon can enter into CAM app directly. Choose a album, then choose a photo, can play the photo. When play the photo touch icon can popup submenu as below:

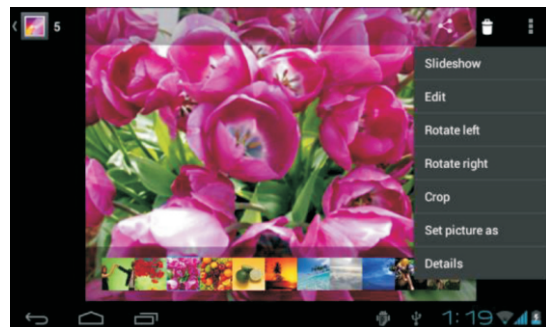

## > Explorer

 





From a Home or All Apps screen, touch the Explorer icon, enter the corresponding interface. User can browsers all the file in this device. In file list interface, long press a file or a folder, can popup an edit dialog, here, user can copy, delete, move, paste, rename the file.

## > SoudRecorder

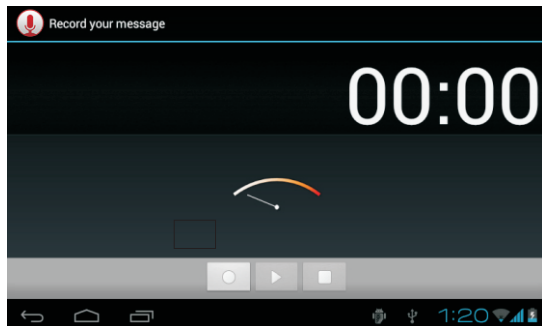

From a Home or All Apps screen, touch the SoudRecorder icon, enter the corresponding interface .



Touching  can start record, after finish the record, touching  can popup the record saving dialogue, this time touching  can listen to record just recorded.

All the record files (VXXXX.3gpp) are saved in folder Record, which is located in the root directory. User can play the record file like play songs.

## > Calculator



From a Home or All Apps screen, touch the Calculator icon, enter the corresponding interface, user can do some calculation here.

## > Canlendar



From a Home or All Apps screen, touch the Canlendar icon, enter the corresponding interface, user can check canlendar here, and built new event here.

 
## > Clock









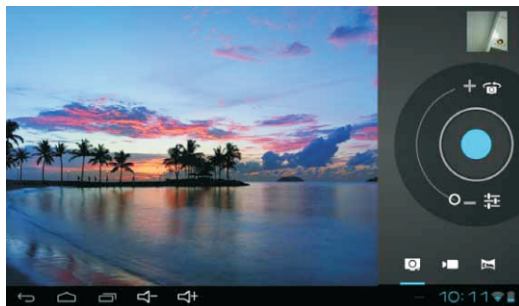





From a Home or All Apps screen, touch the Clock icon, enter the corresponding interface, user can setting clock here and add alarm.

## > Camera

From a Home or All Apps screen, touch the Camera icon, enter the corresponding interface.



	Shift front and back camera
	White balance
	Unhide setting menu
	Touch to confirm take photo
	Exposure
	Touch to shift take photo to picture recording
	Shift front and back camera
	Hide setting menu
	Start or pause recording picture
	Shift recording picture to take photo
	Pause recording picture
	Adjust focus

This tablet can utilize Wi-Fi data networks to connect to the Internet.

- Wireless Wi-Fi technology can provide Internet access at distances of over 300 feet; however, this distance can be affected by your surrounding environment and Wi-Fi router.

### Requirements

In order to connect to the Internet, you will need either of the following:

#### **A wireless router or access point with a broadband Internet connection**

The wireless router must support Wi-Fi 802.11b/g connections. If the router supports 802.11n, make sure that it has been configured to accept 802.11b/g connections as well.

**Note:** A minimum connection speed of 64 Kbps is recommended. Faster speeds will enable a better Internet experience.

You will need to know the name of your network (SSID), as well as the password or other credentials if your network is secured. These settings can usually be found on the administration webpage of your wireless router.

Please refer to your wireless router's documentation for help, or ask your network administrator for details.

**Note:** You may encounter open Wi-Fi networks, or "hot spots." These networks are usually configured so that you can simply connect to them without needing to know its settings; the tablet will obtain all the information it needs from the router automatically.

**The tablet cannot be turned on.**

Please charge it via the DC charger to check if the battery is low. If not, then please reset the tablet.

**No sound can be heard from the earphones.**

1. Check if the volume is set as 0. Adjust the volume as required.
2. Check the volume of the file attempting to be played.
3. Confirm the earphone is properly connected.

**Noise through earphones.**

1. Check if the earphone plug is clean, foreign particles can cause static to be heard through the earphone during playback.
2. Check if the music file is damaged. Confirm by playing other music. The damaged file might create serious noises or voice dithering.

**Incorrect language displayed.**

Please make sure that you have selected the correct language. Set language in (Settings) => (personal) => (Language & input)

**Files cannot be downloaded.**

1. Make sure the proper connection between computer and tablet.
2. Check if the memory is full.
3. Check if the USB cable is damaged and replace if necessary.

**Audio files not playable.**

This tablet cannot play audio files that are copy protected. Please ensure that only files that contain no copy protection are transferred to the tablet.

**Video files not playable.**

Please check that the video files transferred to the tablet are in the correct size and format. Some files may need to be re encoded to be played on this tablet.

**Fail to open the web page.**

Please check whether successfully create the Wi-Fi connection.

**Forgot the password or lock pattern**

Please contact our customer service team through email or phone, you will be receiving the instruction on how to do the factory reset. However, all the personal data will be deleted after the factory reset!

### ***ONE-YEAR LIMITED WARRANTY ON PARTS AND 90 DAYS ON LABOR***

DOPO provides a warranty to the original purchaser of a new Product against defects in materials and workmanship for a period of one year of non-commercial usage and ninety (90) days of commercial use. If a Product covered by this by this warranty is determined to be defective within the warranty period, DOPO will either repair or replace the unit at its sole option and discretion.

### ***PARTS AND LABOR***

There will be no charge for parts or labor during the first ninety (90) days of the warranty period. Thereafter and up to one year from the date of purchase, parts only are under warranty. There will be a labor fee if repairs are required during this time. Replacement parts and units may be new or recertified at DOPO's option and sole discretion.

Replacement parts and units are warranted for the remaining portion of the original warranty or for ninety (90) days from warranty service or replacement, whichever is greater.

### ***TYPE OF SERVICE***

Defective Products must be sent to a DOPO service center to obtain warranty service. DOPO is not responsible for transportation costs to the service center, but DOPO will cover return shipping to the customer. Pre-authorization is required before sending any unit in for warranty service.

Product returns to DOPO's service centers must utilize either the original box and shipping material or packaging that affords an equal degree of protection. DOPO Technical Support will provide instructions for packing and shipping the covered Product to the DOPO service center.



## ***Limitations and Exclusions***

DOPO's one-year limited warranty only covers defects in materials and workmanship. This warranty does not cover: cosmetic damage, units that are dropped, normal wear and tear, improper operation, improper voltage supply or power surges, signal issues, damages from shipping, acts of God, any type of customer misuse, modifications or adjustments, as well as installation and set-up issues or any repairs attempted by anyone other than by a DOPO authorized service center. Products with unreadable or removed serial numbers, or requiring routine maintenance are not covered. This one year limited warranty does not cover Products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE

PERIOD OF TIME SET FORTH ABOVE. DOPO'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER INCLUDING DOPO'S NEGLIGENCE, ALLEGED DAMAGE, OR DEFECTIVE GOODS, WHETHER SUCH DEFECTS ARE DISCOVERABLE OR LATENT, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT. DOPO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, LOSS OF INFORMATION OR DATA, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE.



## SERVICE CENTER

1845 S.Vineyard Ave.Ste.4

Ontario,CA 91761

Tel:909-974-2859

Fax:909-974-2865

Hours:8:30AM-5:00PM PST

## TO OBTAIN WARRANTY SERVICE

contact DOPO Technical Support

email:TechSupport@doublepowertech.com

phone:800.838.3315

from 8:30AM to 5:00PM Monday through Friday  
Pacific Time.

Pre-authorization must be obtained before sending any product to the Service Center.Proof of purchase in the form of a purchase receipt or copy is required to show that a product is within the warranty period.

#### FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Radiation exposure statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device can be used without any restrictions.