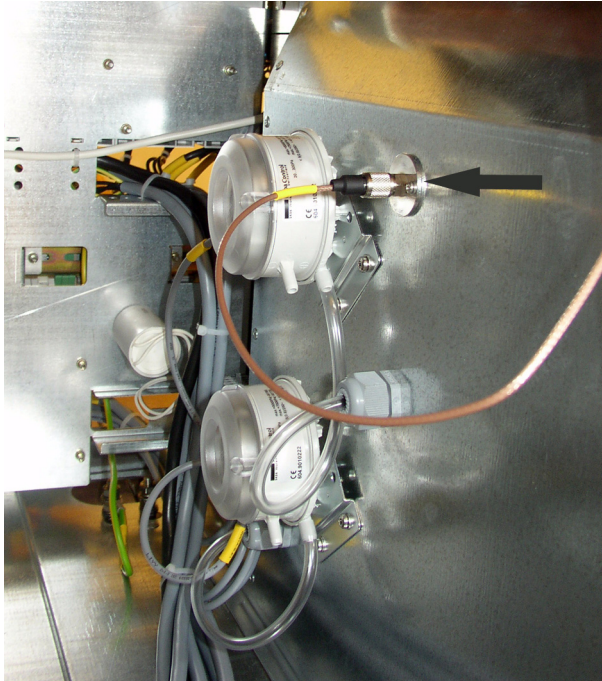


### 1.9.5 Temperature Sensors



**Fig. 35** Temperature sensors

The temperature sensors measure the absolute intake and exhaust temperature in °C for display on the NETCCU® and for monitoring in the rack controller.

**Note** *If the exhaust temperature is higher than 65 °C, the rack controller switches the rack off due to the danger of overheating.*